PID Eng&Tech
www.pidengtech.com

PH: +34 918 459 930
FAX: +34 918 486 454

C/ Plomo 15 - Pol. Ind. Sur
E-28770 Colmenar Viejo
Madrid - Spain

MICROACTIVITY - REFERENCE

USER´S MANUAL - V8.2 -

CSIC SPIN-OFF
PARQUE CIENTÍFICO DE MADRID
ISO 9001 BUREAU VERITAS Certification Nº ES020741
ISO 14001 BUREAU VERITAS Certification Nº ES020743
CHAMBER TRUST WCN VERIFIED
Cámara Madrid Servicio de Certificación PRODUCTO CERTIFICADO PROYECTO I+D+i

MICROACTIVITY – REFERENCE
USER MANUAL

CONTENTS

1. INTRODUCTION 1

1.1 USING THIS MANUAL 1
1.2 SAFETY INFORMATION 2
1.2.1 SAFETY INFORMATION 2
1.2.2 SAFETY SYMBOLS 2
1.2.3 WARNING AND CAUTION CALLS 2
1.2.4 ELECTROMAGNETIC COMPATIBILITY 3

2. DESCRIPTION OF THE EQUIPMENT 4

2.1 GENERAL DESCRIPTION 4
2.2 SPECIFICATIONS 6
2.3 OPERATING CONDITIONS 6
2.4 EQUIPMENT APPEARANCE 6
2.4.1 GENERAL VIEW 7
2.4.2 FRONT VIEW 7
2.4.3 INSIDE VIEW 8
2.4.4 REAR VIEW 8
2.4.5 INSIDE VIEW – ELECTRONICS 9

3. INITIAL INSTALLATION 10

3.1 BEFORE STARTING 10
3.1.1 TEMPERATURE AND HUMIDITY RANGES 10
3.1.2 VENTILATION REQUIREMENTS 11
3.1.3 BENCHTOP SPACE REQUIREMENTS 11
3.1.4 ELECTRICAL REQUIREMENTS 11
3.1.4.1 GROUNDING 11
3.1.4.2 LINE VOLTAGE 11
3.1.5 GAS REQUIREMENTS 12
3.2 EQUIPMENT INSTALLATION 12
3.2.1 UNPACKING THE EQUIPMENT 12
3.2.2 PLACING THE EQUIPMENT ON THE BENCHTOP 12
3.2.3 ELECTRICAL INSTALLATION 12
3.2.4 GAS INSTALLATION 16
3.2.5 TURNING THE POWER ON 16

4. COMPONENTS OF THE MICROACTIVITY-REFERENCE UNIT 17

4.1 THE REACTOR AND THE HOT BOX 18
4.2 THE CONTROLLERS 20
4.2.1 THE REGULATION PARAMETERS 20
4.2.2 CONTROL STABILITY CRITERIA 23

4.2.3 CONTROLLERS TUNING 23
4.2.3.1 Ziegler & Nichols Method
4.2.3.2 Method of trial and error
4.2.3.3 Method proposed by PID Eng&Tech
4.3 THE LIQUID – GAS SEPARATOR 28
4.4 THE PRESSURE SENSOR (FOR ATMOSPHERIC PRESSURE REACTORS) 29
4.5 THE TOUCH SCREEN 31
4.5.1 MAIN-SCREEN FUNCTIONS 31
4.5.2 MAIN MENU 33
4.5.3 OTHER FUNCTIONS 41
4.6 SPECIAL CONFIGURATIONS OF THE MICROACTIVITY-REFERENCE 42
4.6.1 THE GILSON 307 HPLC PUMP 42
4.6.1.1 Frontal view 42
4.6.1.2 Keyboard 42
4.6.1.3 Technical Specifications 43
4.6.1.4 Switching on the pump 43
4.6.1.5 Pump operation 44
4.6.2 PRESSURE CONTROL 47
4.6.2.1 Introduction to pressure control systems in microactivity reactors
4.6.2.2 The micrometric valve 47
4.6.2.3 Configuration of the Servo Digital V4.0 unit (microstep positioner)
4.6.3 LEVEL CONTROL IN THE LIQUID – GAS SEPARATOR 53
4.6.3.1 Introduction to level control in microactivity reactors 53
4.6.3.2 The capacitive level sensor 53
4.7 SPECIAL OPTIONS FOR THE MICROACTIVITY-REFERENCE UNIT 56
4.7.1 OPTION A. Each other mass flow controllers (up to 6) 56
4.7.2 OPTION B. Scale with digital communications. 62
4.7.3 OPTION C. Mass flow meter & coalescing filter in gases outlet. 66
4.7.4 OPTION D. Additional 6 port valve. 69
4.7.5 OPTION D1. Additional 4 port manual valve. 72
4.7.6 OPTION E TO J. Different types, sizes and materials for spare reactors with thermocouple and accessories. 75
4.7.7 OPTION K. No standard furnace. 78
4.7.8 OPTION Q. Heated head pump, vessel and line for liquids. 79
4.7.9 OPTION S. Extra liquid evaporator with temperature control. 82
4.7.10 OPTION T. Temperature control in L/G separator. 84
4.8 OTHER COMPONENTS OF THE MICROACTIVITY-REFERENCE 87
4.8.1 PIPING 87
4.8.2 JOINTS AND VALVES 87
4.8.3 INSTRUMENTATION 89
4.9 PROCESS CONTROL AND AUTOMATION 91
4.9.1 CONTROL LOOPS IN THE MICROACTIVITY-REFERENCE 91
4.9.2 AUTOMATION 91
4.9.3 SYSTEM SAFETY MANAGEMENT 92

5. PROCESS@ CONTROL SOFTWARE 95

5.1 INTRODUCTION 95
5.2 INSTALLATION 95
5.2.1 HOW TO INSTALL PROCESS@ 95
5.2.2. HOW TO INSTALL A PROJECT OR MICROACTIVITY CONFIGURATION
5.2.3 HOW TO LINK THE PC AND MICROACTIVITY-REFERENCE 99
5.3 DATA ACQUISITION 101
5.3.1 THE MENU BAR 102
5.3.2 THE CONTROL PANEL 104

5.3.3 THE CONTROL GRAPHS 111
5.3.4 THE SESSION'S TABLE 114
5.3.4.1 How to configure a session's table 114
5.3.4.2 How to save a session's table 117
5.3.4.3 How to open a saved session's table 118
5.3.4.4 How to print a session's table 118
5.3 HOW TO CARRY OUT AN EXPERIMENT 119
5.4 DATA PROCESSING 120
5.5 EXPERIMENT VIEWER 122
5.6 HOW TO EXIT PROCESS@ 131
5.7 CONNECTION TO A GAS CHROMATOGRAPH 131

6. PERFORMING CATALYTIC TESTS 132

6.1 INTRODUCING THE CATALYTIC BED INTO THE REACTOR 132
6.2 PROGRAMMING A SEQUENCE OF EXPERIMENTS 132

7. MAINTENANCE OF THE EQUIPMENT 133

7.1 WEEKLY MAINTENANCE 133
7.1.1 LEAK DETECTION 133
7.1.2 CLEANING THE UNIT 133
7.2 MONTHLY – QUARTERLY MAINTENANCE 133
7.2.1 REPLACING THE FILTERS 133
7.3 ANNUAL OR LATER MAINTENANCE 134
7.3.1 REPLACING THE FUSE 134
7.3.2 REPLACING THE KALRETZ SEALS IN THE GAS MIXER 134
7.3.3 REPLACING THE REACTOR POROUS PLATE 134
7.3.4 REPLACING A MASS FLOW CONTROLLER 135

8. EUROPEAN DIRECTIVES 138

9. ENVIRONMENTAL POLICY 140

10. REACTOR TROUBLESHOOTING 141

MICROACTIVITY – REFERENCE
USER MANUAL

1. INTRODUCTION

The Microactivity-Reference unit is an automated and computer-controlled laboratory reactor for catalytic microactivity tests. Possible unit configurations:

BASIC UNIT (ATMOSPHERIC PRESSURE)
- Tubular reactor by Autoclave Engineers with 2 μm porous plate. $T_{max.}$= 700 ºC. Thermocouple in catalytic bed, without thermowell. - Reactive system integrated within hot box. $T_{max.}$= 170 ºC. - 6-port VICI valve for reactor bypass. - 3 Hi-Tec Bronkhorst mass flow controllers. - Liquid – gas condenser/separator tank cooled with Peltier cell. - Safety system integrated within microprocessor. - 2 temperature control loops. - 6 control devices for mass flow controllers. - Pressure sensor (0 – 1 bar). - Operating pressure in basic unit: 1 bar. - Equipment design pressure: 100 bar. - Piping, valves and other devices in 316 stainless steel with low dead volume. - Software Process@ for monitoring and data acquisition with distributed control. Remote control via Ethernet. - Heater on gas output line for up to 250 ºC.

PRESSURE CONTROL	LEVEL CONTROL	EXTRAS
- Pressure control system, consisting of a servocontrolled micrometric regulating valve with stepper motor of 1° accuracy . - $P_{max.}$= 100 bar. Accuracy ± 0.2 bar. - Control loop and 100 bar pressure transducer. - Digital communications.	- Liquid/gas separator with level control, consisting of a micrometric regulating valve and capacitive level sensor of low dead volume (0.3 ml). - Control loop and capacitive sensor. - Digital communications.	- HPLC Gilson liquid pump, 400 bar, 0.01 – 5 ml/min. - Space for up to 6 MFC. - Balance at liquid output. - Mass flow meter at gas output. - Special dimensions and materials of reactor. - Extra VICI-VALCO valve for special purposes.

1.1 USING THIS MANUAL

To ensure the correct use and operation of the Microactivity-Reference unit, it is advisable to proceed as follows:

- Read the general description of the equipment in chapter 2.
- Install the instrument as shown in chapter 3.
- Read the description of the equipment's components in chapters 4 and 5.
- Following the operating instructions outlined in chapter 6.

1.2 SAFETY INFORMATION

1.2.1 SAFETY INFORMATION

This unit meets the following EN 61010-1:2001, and it has been designed and tested in accordance with recognized safety standards and designed for use indoors. If the

instrument is used in a manner not specified by the manufacturer, the protection provided by the instrument may be impaired.

Whenever the safety protection of the Microactivity-Reference unit has been compromised, disconnect the unit from all power sources and secure the unit against unintended operation.

Refer servicing to qualified servile personnel. Substituting parts or performing any unauthorized modification to the instrument may result in a safety hazard. Disconnect the AC power cord before removing covers.

1.2.2 SAFETY SYMBOLS

Warnings in the manual or on the instrument must be observed during all phases of operation, service and repair of this instrument. Failure to comply with these precautions violates safety standards of design and the intended use of the instrument. Process Integral Development Eng & Tech assumes no liability for the customer's failure to comply with these requirements.

1.2.3 WARNING AND CAUTION CALLS

WARNING: A warning calls attention to a condition or possible situation that could cause injury to tha user.

CAUTION: A caution calls attention to a condition or possible situation that could damage or destroy the product or the user's work.

See accompanying instructions for more information

Indicates hazardous voltages

Indicates a hot surface

Indicates earth (ground) terminal

1.2.4 ELECTROMAGNETIC COMPATIBILITY

This device complies with the electromagnetic compatibility requirements subject to the EN 61326:1997 regulation. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.

2. This device must accept any interference received, including interference that may cause undesired operation. If this equipment does cause harmful interference to

radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try one or more of the following measures:

a. Relocate the radio or antenna.

b. Move the device away from the radio or television.

c. Plug the device into a different electrical outlet, so that the device and the radio or television are on separate.

d. Make sure that all peripheral devices are also certified.

e. Make sure that appropriate cables are used to connect the device to peripheral equipment.

f. Consult your equipment dealer, Process Integral Development Eng & Tech, or an experienced technician for assistance.

g. Changes or modifications not expressly approved by Process Integral Development Eng & Tech could void the user's authority to operate the equipment.

2. DESCRIPTION OF THE EQUIPMENT

2.1 GENERAL DESCRIPTION

As may be observed in the P&I diagram shown in Figure 2-1, the system consists of a fixed-bed tubular reactor, with the catalyst bed placed inside upon a porous plate. The flow inside the reactor is up-down, whereby the reactant mixture is fed through the upper part of the reactor and the reaction products are obtained through the lower part.

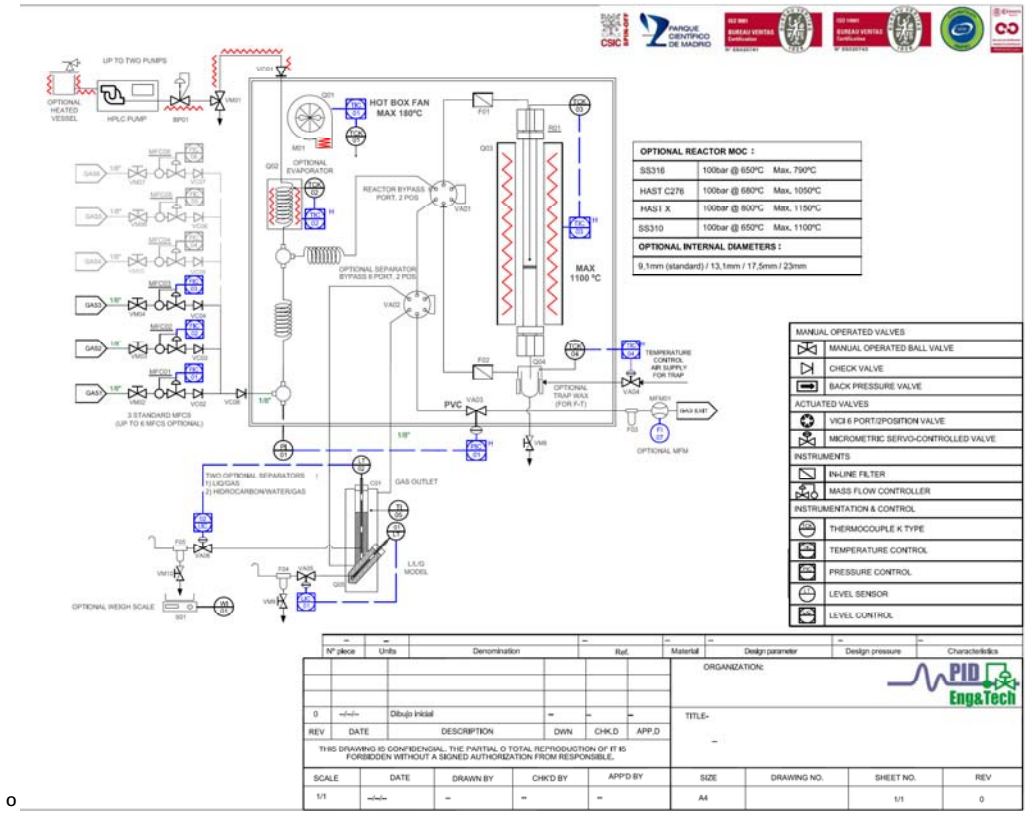

Figure 2-1

After passing through a line shut-off valve, the reactant gas streams are fed into the reactor by means of a system of mass flow controllers that provide a known and controlled flow of gases. In order to stop the products flowing back through the lines, the controllers are protected with check-valves fitted with Kalretz elastomer seals (elastomeric Teflon).

When operation involves liquids, these are dosed by means of a HPLC alternative positive displacement pump, made by GILSON, in streams ranging between 0.01 and 5 ml/min and pressures of up to 600 bar. The liquids are introduced into the system through a low dead volume check-valve.

Liquid and gaseous flows are introduced into the hot box system that includes an electric forced convection heater that allows the process route to be kept at temperatures of 160ºC, and even 180 ºC, to avoid possible condensation in the system. The liquids evaporator is under the heater's forced flow, at temperatures of around 15 to 20 ºC above the rest of the hot box, and the pre-heater for the gases is also under the direct flow of the heater, at temperatures of 10 to 15ºC above the rest of the system.

Once the gases have been preheated and liquids evaporated, these streams merge and flow to a 6-port valve. This valve is operated by remote pneumatic control through the computer or by means of the touch screen and allows for selecting from two possible alternatives for the flow path: either towards the reactor or rerouting it towards the system's gas outlet (by-passing the reactor).

When the flow of reactants is directed towards the reactor, it passes through 10 μm sintered filters made of 316 stainless steel, at both the inlet and outlet of the reactor, thereby protecting the arrangement of valves from possible finely-separated catalyst particles.

At the reactor outlet, and after passing through the 6-port valve, the reaction products pass out of the hot box to the liquid-gas separator, that may be fitted with a high-resolution capacitive level sensor. This system allows the condensation of liquids at low temperature. In the standard series unit, the liquids accumulate inside the condenser and need to be removed manually by the user. If the option has been chosen that includes the level control system in the separator, this removal is performed automatically, providing samples of reaction liquids within extremely short periods of time without accumulation or dilution over time.

The upper part of the separator features the outlet for gases, which are reintroduced into the hot box and are directed to the pressure control system, consisting of a servo positioned micrometric regulating valve that registers the same temperature as the hot box and which provides a continuous and constant flow of gases at the outlet. In those systems that are not fitted with the optional pressure control, this flow goes straight to the outlet.

Once pressure control has been performed, the flow of reaction gases is directed out of the hot box for subsequent measurement and/or analysis by means of a system of, for example, chromatography in gaseous phase.

The Microactivity-Reference unit is fitted with a system of local control and remote control based on communications via Ethernet by means of the Process@ control application. The equipment's safety system is integrated within a microprocessor that is separate from the computer. Accordingly, the alarm signals from the various control loops are centralised in the microprocessor, which operates as programmed to do so with respect to the system's different alarm situations. These actions are triggered on a self-contained and immediate basis, independently of the communications with the computer, thereby upholding the system's safety, as it not only continues operating in the event of failure in the computer system but, in addition, its safety system remains operative. The operation and configuration of the safety system are described later on in this manual.

2.2 SPECIFICATIONS

Equipment	Microactivity - Reference	
Voltage	110-230 VAC (±5%)	
Frequency	60-50 Hz (±1%)	
Maximum power consumption	2000 W	
Protection	10 A circuit breaker	
Maximum power consumption of Furnace	550 W (basic unit)	
Maximum power consumption of Hot Box heaters	4 heaters of 165 W	
Remote control interface	Ethernet	
EMC	B class	EN 61326:1997 EN 61010-1:2001
Ambient temperature range for operating	5 – 40ºC	
Ambient temperature range for storing	-20 – 70ºC	
Recommended humidity range	5 – 80%	
Refrigeration	Forced ventilation or convective ventilation	
Dimensions, cm (Height × Width × Depth)	70 × 60 × 55 (Basic Unit)	

2.3 OPERATING CONDITIONS

The optimum operating conditions for the Microactivity-Reference Unit are as follows:

- Pressure: Atmospheric - 100 bar (if the high pressure option is included)
- Temperature: Ambient - 700 ºC.
- Feed: Liquids and gases.
- Flow of reactants: 0.01 – 100 VPH (volume of load per unit of catalyst and per hour) for liquids and 10 – 100,000 for gases.
- Solid catalyst (spheres, pellets, extruded items, etc.)

2.4 EQUIPMENT APPEARANCE

The Microactivity-Reference consists of (see Figure 2-2):

- An integrated unit, whose interior houses the hot box and the reaction system, as well as all the system's control elements and valves.
- A Gilson HPLC pump (optional) for feeding liquids into the reactor.
- A PC with a remote control system involving communications via Ethernet.

At the outlet for reaction gases, the user may incorporate an in-line gas analysis system, which will permit accurate monitoring of the reaction.

2.4.1 GENERAL VIEW

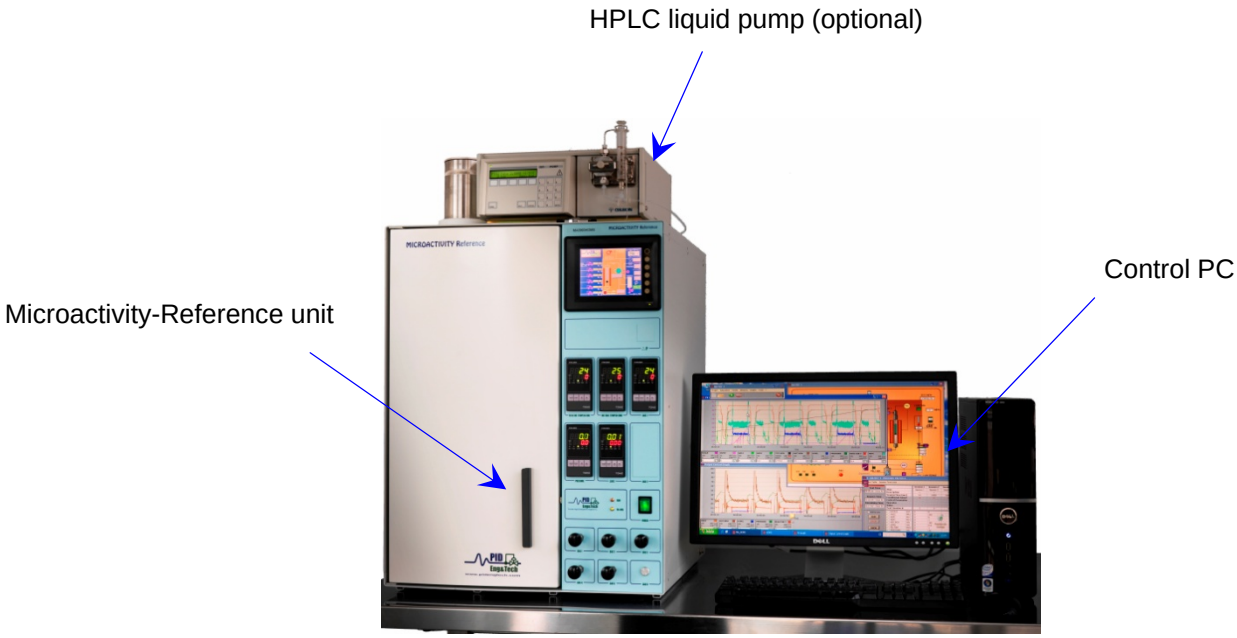

Figure 2-2

2.4.2 FRONT VIEW

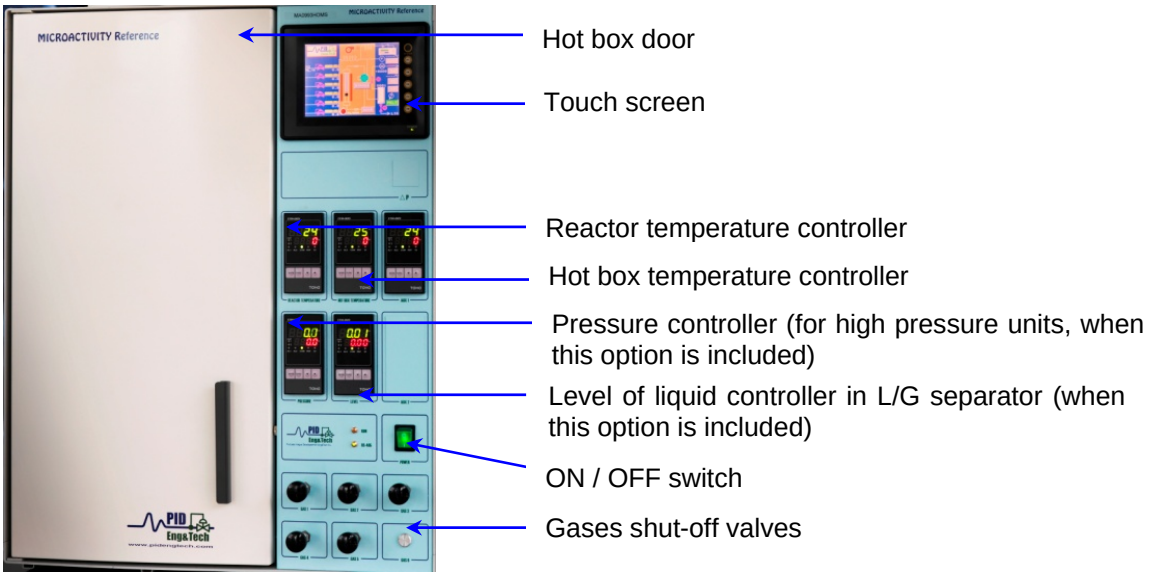
MICROACTIVITY Reference
Hot box door
Touch screen
Reactor temperature controller
Hot box temperature controller
Pressure controller (for high pressure units, when this option is included)
Level of liquid controller in L/G separator (when this option is included)
ON / OFF switch
Gases shut-off valves

Figure 2-3

2.4.3 INSIDE VIEW

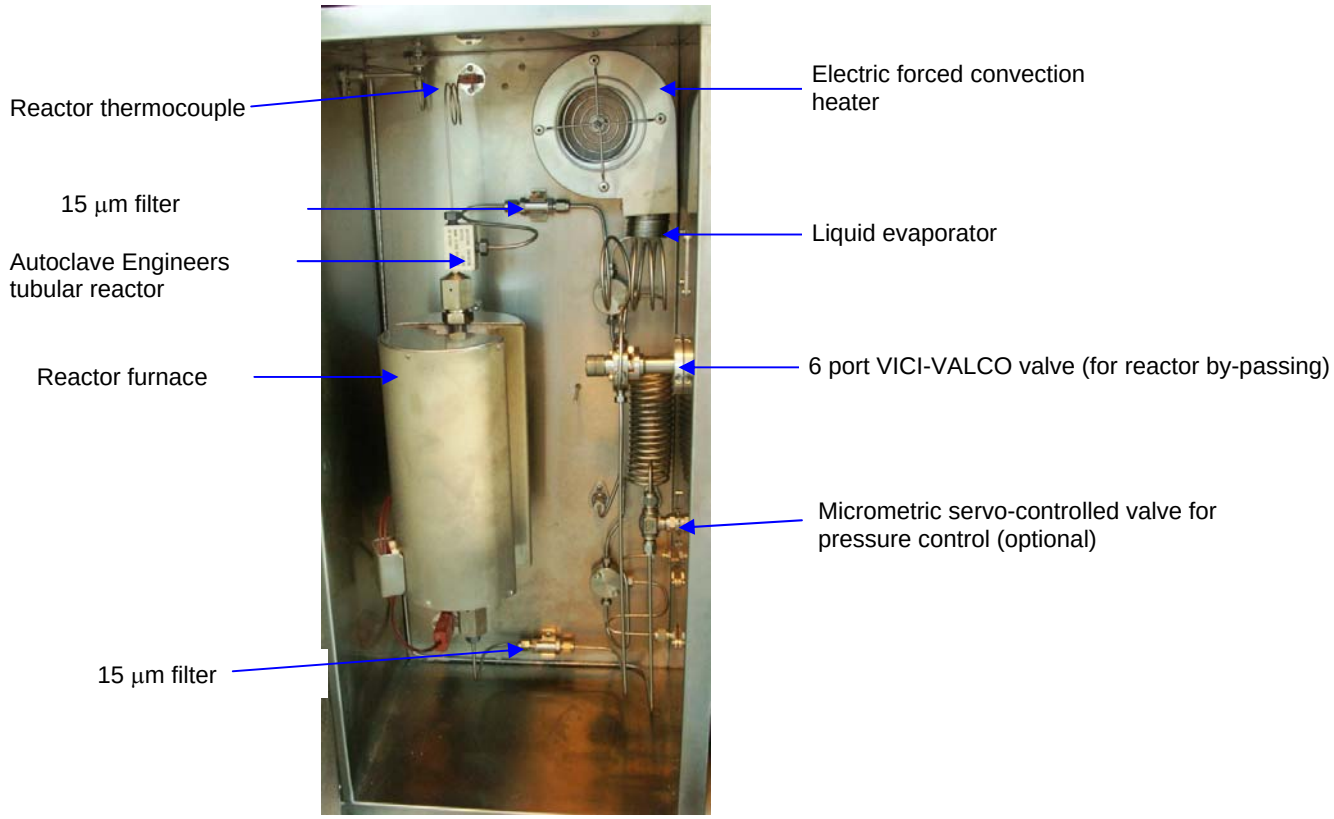

Figure 2-4

2.4.4 REAR VIEW

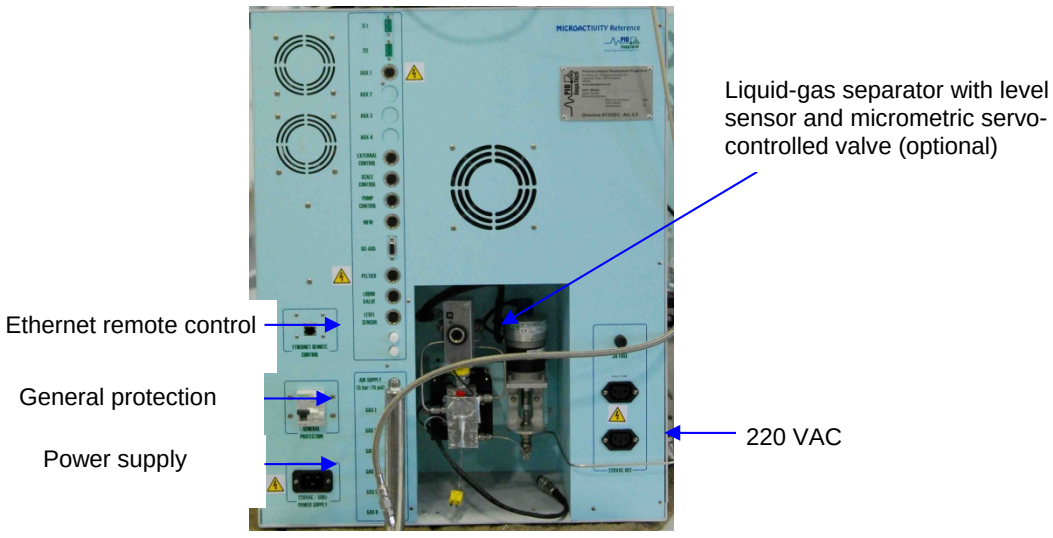

Figure 2-5

2.4.5 INSIDE VIEW - ELECTRONICS

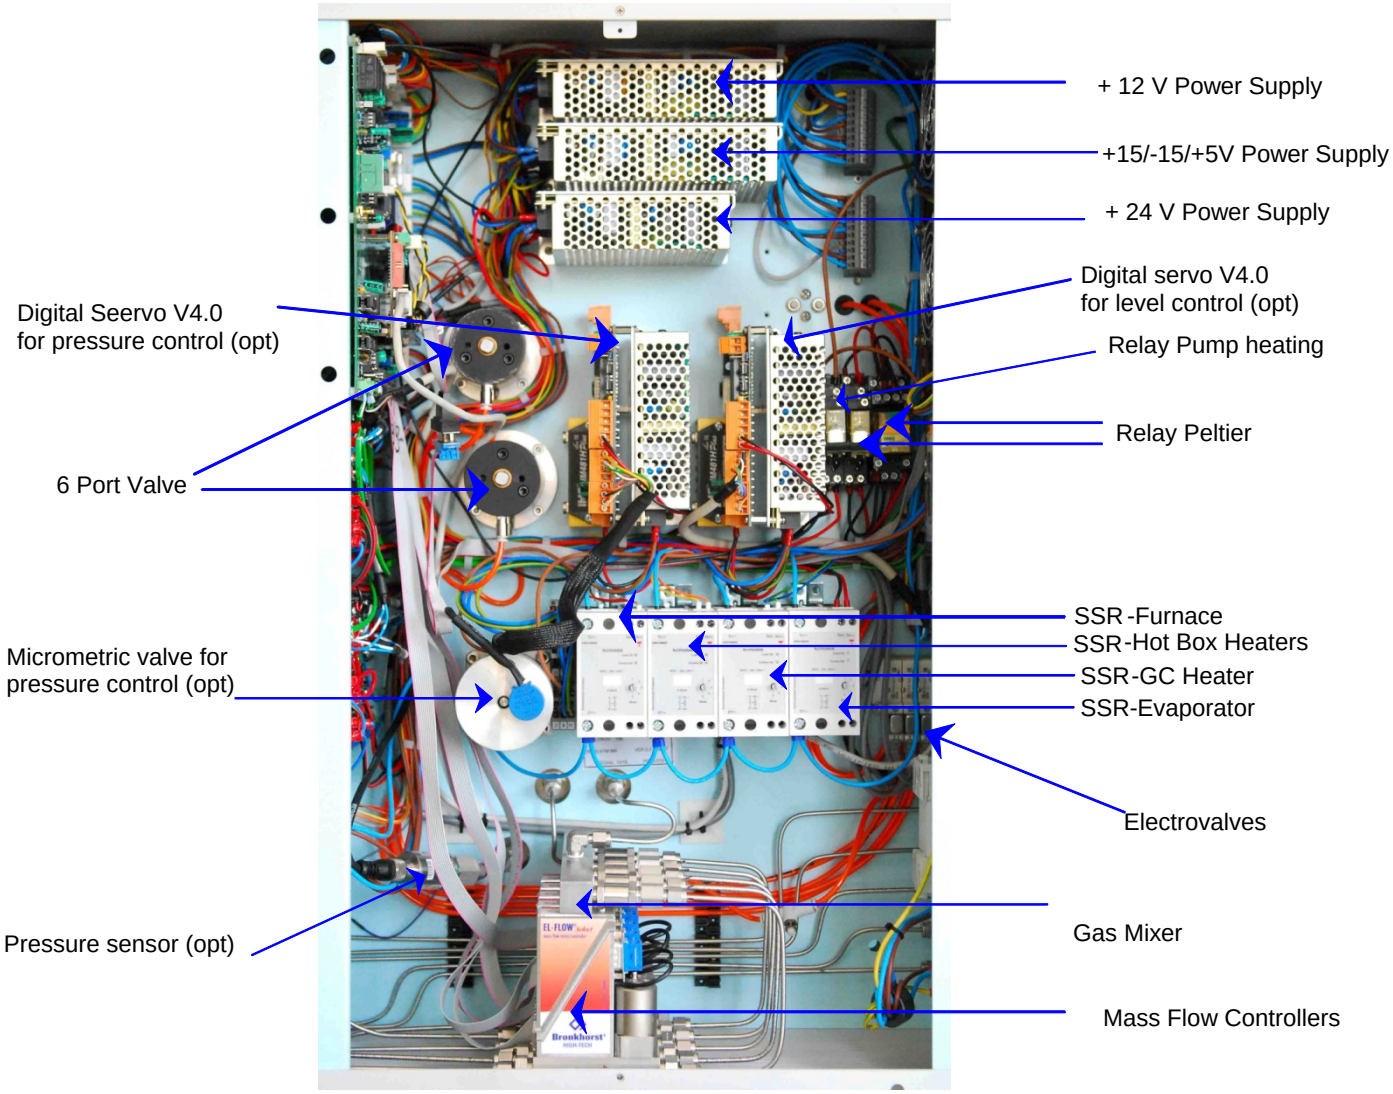

Figure 2-6

3. INITIAL INSTALLATION

3.1 BEFORE STARTING

Before the equipment arrives, make sure your laboratory meets the following environmental, weight, power, and gas requirements. You can find more site preparation information in this chapter.

Site Preparation Checklist:

❒ The site is well ventilated and free of corrosive materials and overhanging obstacles.

❒ Site temperature is within the recommended range.

❒ Site humidity is within the recommended range.

❒ Bench space is adequate for the equipment.

❒ Bench can support the weight of the equipment.

❒ Power receptacle is earth grounded.

❒ Electrical supply meets all equipment's power requirements.

❒ Voltage supply is adequate for oven type.

❒ Gas supplies meet the requirements of the equipment.

❒ Gases and air supply meet the pressure requirements and have two-stage pressure regulators installed.

3.1.1 TEMPERATURE AND HUMIDITY RANGES

Operating the unit within the recommended ranges insures optimum instrument performance and lifetime.

Recommended temperature range	18 – 25 ºC
Temperature range	5 – 40 ºC
Recommended humidity range	50 – 60 %
Humidity range	5 – 80 %
Recommended altitude range	Up to 2000 m

After exposing the unit to extremes of temperature or humidity, allow 15 minutes for it to return to the recommended ranges.

3.1.2 VENTILATION REQUIREMENTS

Do not obstruct air flow around the instrument.

3.1.3 BENCHTOP SPACE REQUIREMENTS

The equipment dimensions are the following:

Height:	100 cm
Width:	85 cm
Depth:	75 cm

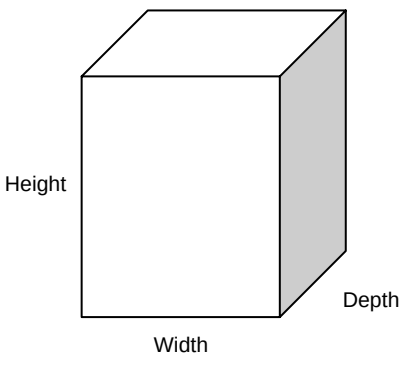

3.1.4 ELECTRICAL REQUIREMENTS

3.1.4.1 Grounding

CAUTION: A proper earth ground is required for MA-Ref operations.

To protect users, the metal instrument panels and cabinet are grounded through the three-conductor power line cord in accordance with International Electrotechnical Commission (IEC) requirements.

The three-conductor power line cord, when plugged into a properly grounded receptacle, grounds the instrument and minimizes shock hazard. A properly grounded receptacle is one that is connected to a suitable earth ground.

Proper receptacle grounding should be verified. Make sure the unit is connected to a dedicated receptacle. The use of a dedicator receptacle reduces interference.

CAUTION: Any interruption of the grounding conductor or disconnection of the power cord cause a shock that could result in personal injury.

3.1.4.2 Line Voltage

The unit is designed to work with a specific voltage; make sure your lab has the appropriate voltage option for the unit. The voltage requirements for the equipment are printed near the power cord attachment:

- Voltage: 110-230 VAC (± 5%)
- Frequency: 60-50 Hz (± 1%)
- Max. power consumption: 2000 W

3.1.5 GAS REQUIREMENTS

Make sure your lab has the appropriate gas installation for working with the unit:

- Air supply: 5 bar

- Gases: Depending on the unit configuration. The pressure of each reactant gas in the installation must be higher than the working pressure on the unit, and corresponding to the mass flow controllers that the unit incorporates.

3.2 EQUIPMENT INSTALLATION

Before starting, be sure to have available all the necessary tools and pieces for the installation.

3.2.1 UNPACKING THE EQUIPMENT

Unpack the unit carefully and inspect the shipping containers for damage. If a container is damaged or shows signs of stress, notify both the carrier and Process Integral Development Eng & Tech.

Keep all shipping materials for inspection by the carrier. Check the items received against the packing lists. If there are discrepancies, notify Process Integral Development Eng & Tech immediately. Keep the shipping containers until you have checked their contents for completeness and verified instrument performance.

3.2.2 PLACING THE EQUIPMENT ON THE BENCHTOP

The unit requires a benchtop that can support its weight plus that of other equipment you will use with it. The area must be free of overhanging obstructions that might interfere with cooling and limit access to the top of the instrument.

⚠ **WARNING:** Be careful when lifting the unit. Because it is heavy, two people should lift it. When moving the equipment, be aware that the back is heavier than the front.

3.2.3 ELECTRICAL INSTALLATION

The unit's electrical installation is performed as described forthwith:

⚠ *For reasons of safety, do not connect to the mains until the full installation of the equipment has been completed.*

The installation of the external devices that are described will be only possible if they have been chosen as a configuration option of the Microactivity-Reference reactor.

- Installation of the liquid – gas separator (Peltier): Connect the end of the cable (power supply) to the "Peltier" round connector that is to be found on the rear side of the reactors' hot box, as shown in Figure 3-1:

Figure 3-1

- Installation of the liquid pump: Before installing the pump, make sure the on/off switch to be found on the rear side of the pump is in the off position (o), Figure 3-2:

Figure 3-2

The following connections are to be made (see Figure 3-3, 3-4):

a. Connect the power cable to one of the two 220 VAC power sockets on the rear side of the unit. These power sockets will cease to supply power when the equipment is switched off by means of the switch on the front, so it is not advisable to connect analysis equipment or other devices that need to operate separately from the Microactivity-Reference unit. (Figure 3-3).
b. Connect the connection terminal (stop for system alarm), as well as the 9 pin sub-D connector (digital communications), on the rear side of the pump. (Figure 3-3).
c. Connect the round connector on the end of this same cable to the "**Pump Control**" on the rear of the Microactivity-Reference. (Figure 3-3)
d. Connect the round connector (AUX 1) to the "AUX 1" on the rear side of the Microactivity-Reference and the end of this same cable (power cable) to the black electric strip (Figure 3-4).
e. Connect the vessel cable to the black electric strip (Figure 3-4).

The following connections are to be made in the case of the dumper and head Gilson pump calefaction:

f. Connect the pump head cable (on the front of the pump) to the black electric strip (Figure 3-5 "d").
g. Connect the pump dumper cable (in the rear of the pump) to the black electric strip (Figure 3-5 "e").

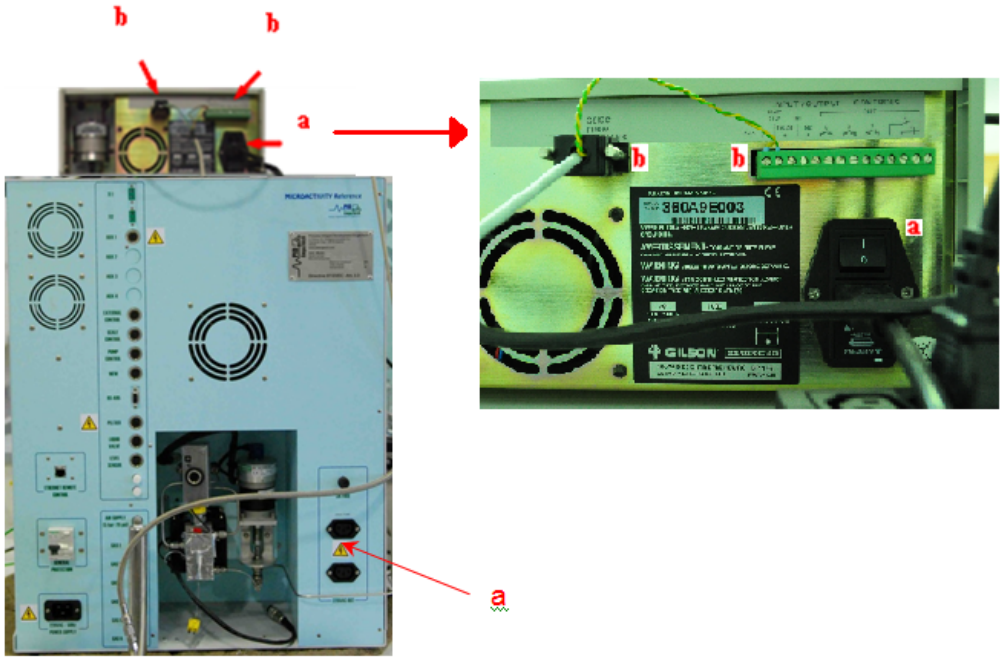

Figure 3-3

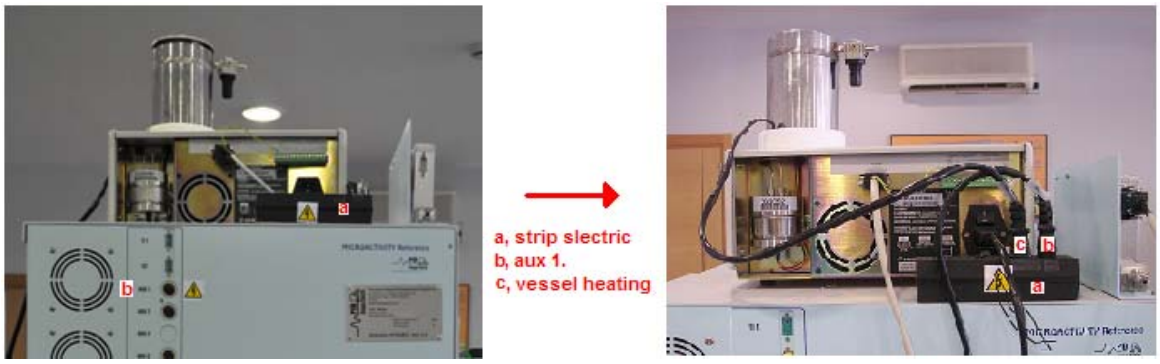

Figure 3-4

Figure 3-5

- Installation of the liquid scale (see Figure 3-6):

    a. Connect the sub-D type connector (digital communications) to the rear side of the scale.
    b. Connect the JACK type plug (power supply), on the left of the sub-D connector,
    c. These two connectors are joined in a single round connector that has to be plugged into the corresponding socket on the rear of the hot box ("**Scale Control**").

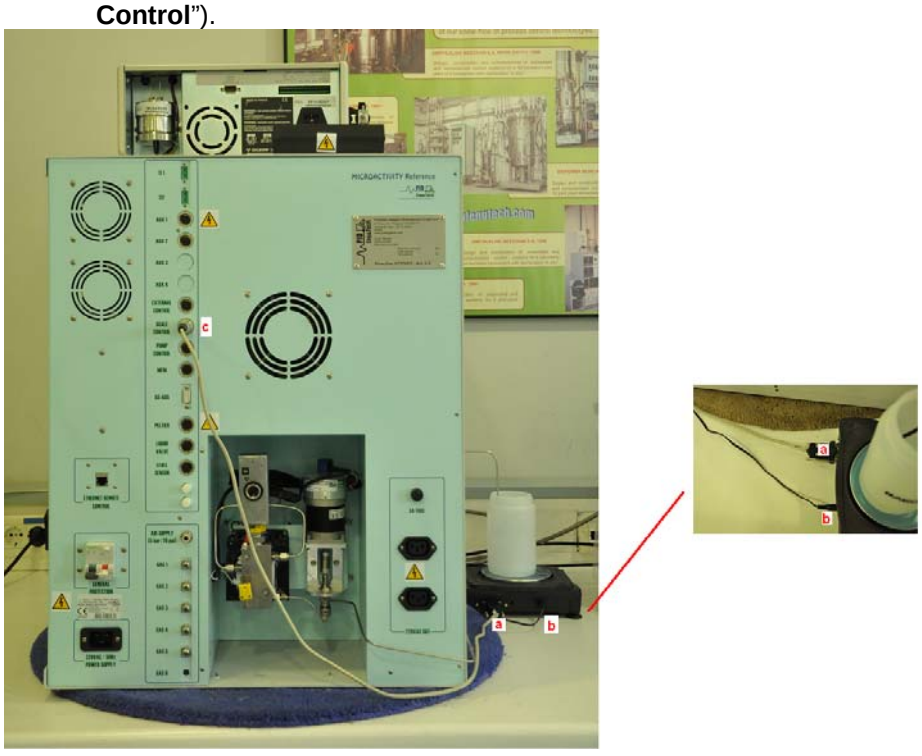

Figure 3-6

- Installation of the MFM (see figure 3-7):

    a. Connect the sub-D type connector (digital communications) to the rear side of the MFM.
    b. Connect the round connector on the end of this same cable to the "**MFM**" on the rear side of the Microactivity-Reference.

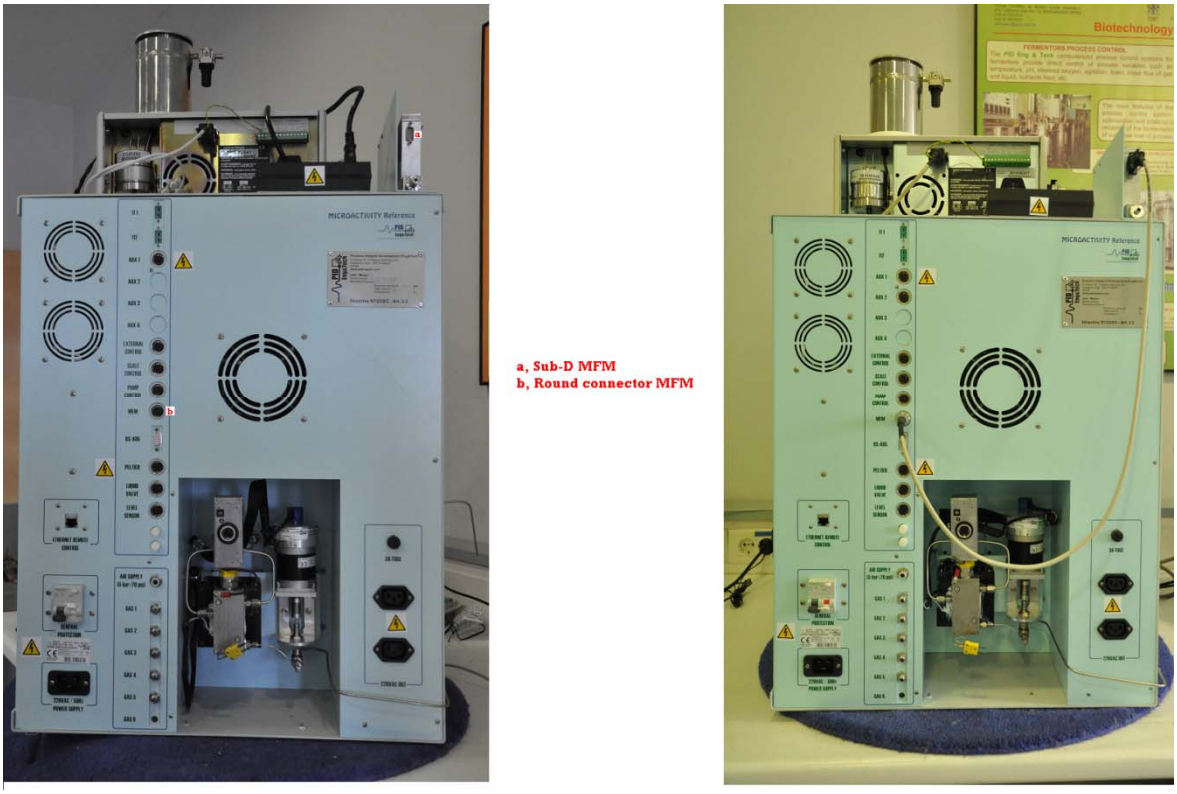

Figure 3-7

- Installation of the level of liquids in the condenser "level sensor" (see figure 3-8):

    a. Connect the round connector (level sensor) to the rear side of the level sensor.
    b. Connect the round connector on the end of this same cable to the "level sensor" on the rear of the Microactivity-Reference.

Figure 3-8

- Other components: On the rear side of the Microactivity-Reference's hot box there is a circular type connector for each one of the devices that may be connected to the unit, such as:
    - Valve for regulating the level of liquids in the condenser ("**Liquid Valve**").
- Installations of the thermocouple for the liquid-gas separator:
    a. Connect the thermocouple connector to the "TI 2" in the rear side of the Microactivity (see figure 3-9).

Figure 3-9

- Installations of the liquid-liquid-gas (L-L-G) separator (see figure 3-10)

    a. Connect the sub-D connector (digital communications), on the rear side of the Microactivity Reference and connect the round connector on the end of this same cable to the “RS-485” on the rear of the L-L-G separator.
    b. Connect the round connector (peltier), on the rear of the Microactivity Reference and connect the round connector on the end of this same cable to the “Peltier” connection on the rear side of the L-L-G separator.
    c. Connect the round connector (AUX2), on the rear side of the Microactivity Reference and connect the round connector on the end of this same cable to the “Alarm” connection on the rear of the L-L-G separator.
    d. Connect the cable with a thermocouple connector to the TI 1 in the rear of the Microactivity-Ref unit.

    Note: If you connect the L-L-G separator you have to disconnect necessary connections of the L-G separator.

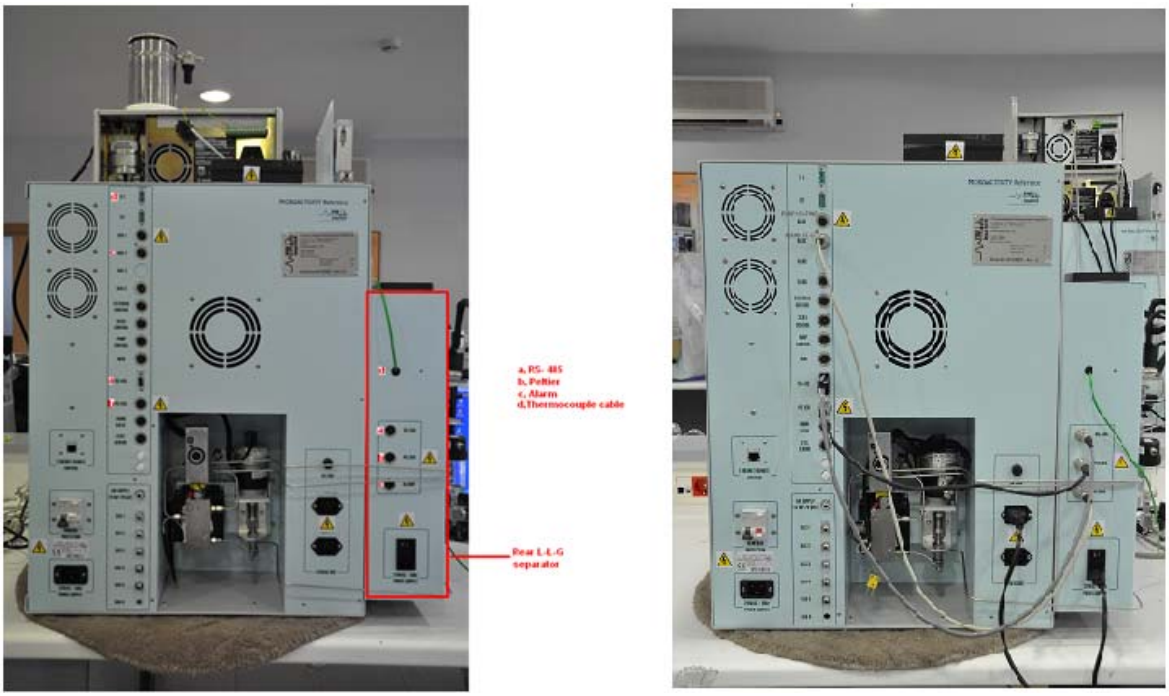

Figure 3-10

- Gas outlet on the system: Leading to the analysis system. A heater is included for this line (see Figure 3-11):

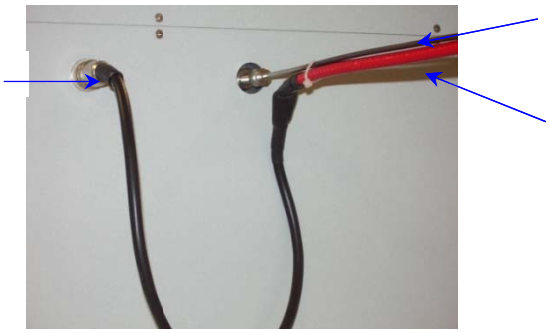

Figure 3-11

- Connection to Ethernet: The direct connection between the Microactivity-Reference and the control PC is performed by means of the crossed cable supplied with the equipment, connecting it on the rear of the reactor box ("Ethernet Remote Control", Figure 3-12). When the connection is made via Ethernet, it is made with a category 5 UTP connection cable for Ethernet networks with a RJ45 connector. The Ethernet connection between the PC and the Microactivity-Reference is reduced to 10 Mbts base-T.

Figure 3-12

- The reactor's power socket is on the lower rear of the reactor (Figure 3-13).

WARNING: Before connecting the equipment's power supply, make sure that the main circuit breaker is in the "OFF" position (Figure 3-14).

Figure 3-13

Figure 3-14

3.2.4 GAS INSTALLATION

Once the electrical installation has been performed, the next step is to install the gases that the Microactivity-Reference unit is going to work with. To do so, all that is required is to connect a 1/8´´ line, preferably of 316 stainless steel, between the pressure reducers on the gas cylinders and the system's gas inlet, which is to be found on the upper part of the equipment (Figure 3-1).

The connection is to be made as follows:

- **Synthetic air**:
  - Inlet pipe: Polyethylene 6×4 mm pipe, supplied with the equipment (3 m).
  - Connection: Quick-fit connection, pressing the pipe against the adapter.
  - Inlet pressure: 5 bar
  - It operates on the pneumatic systems for door and oven opening, 6-port valves, etc.

- **Gases 1, 2,.. etc.**: Reaction gases.
  - Inlet pipe: 1/8´´ pipe in 316 stainless steel.
  - Connection: Gyrolok 1/8´´ adapter.
  - Inlet pressure: 5/10 bar above the operating pressure. The inlet pressure for each one of the gases depends on the mass flow controller installed, whereby its specifications should be consulted before making the gas connection.
  - The gas inlet position (1, 2, etc) depends on the arrangement of the mass flow controllers on the equipment

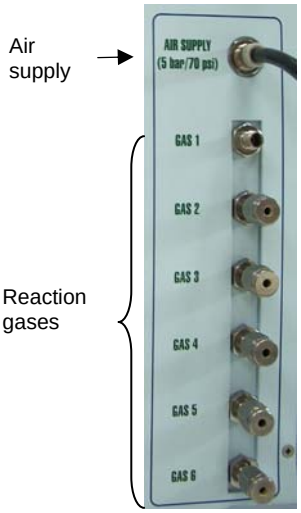

Figure 3-15

Once the installation has been made, the following steps are to be performed in order to introduce gases into the system:

1. Open the pressurised gas cylinders.
2. Adjust the inlet pressure for each one of the gases by means of the pressure reducers.
3. Open the on/off valves for each gas on the lower part of the front panel.

At this point, the system is ready to operate. Inversely, upon concluding operations with the Microactivity-Reference, proceed as follows:

1. Reduce the inlet flows to zero for each one of the reactant gases.
2. Preferably flush the installation with inert gas for 5 min.
3. Close the on/off valves on the front panel.
4. Whenever possible, close the reactant gas cylinders and reduce the pressure of the pressure reducers to zero (if the system is leak-free, the inlet lines to the system will register the inlet pressure). In the case of compressed air, the installation is to remain permanently pressurised in order to permit the pneumatic operation of the valves and the door on the hot box.

3.2.5 TURNING THE POWER ON

Verify that the power switch is in the OFF position (o). Plug the power cord into the power receptacle. Put the circuit breaker in ON position and turn the power on with the frontal switch (position I).

4. COMPONENTS OF THE MICROACTIVITY-REFERENCE UNIT

Figure 4-1 shows a diagram of the items that constitute the Microactivity-Reference reactor's arrangement of lines and instrumentation, including 3 mass flow controllers for the gas inlets, as well as the pressure control options in the reactor and liquid level control in the liquid – gas separator.

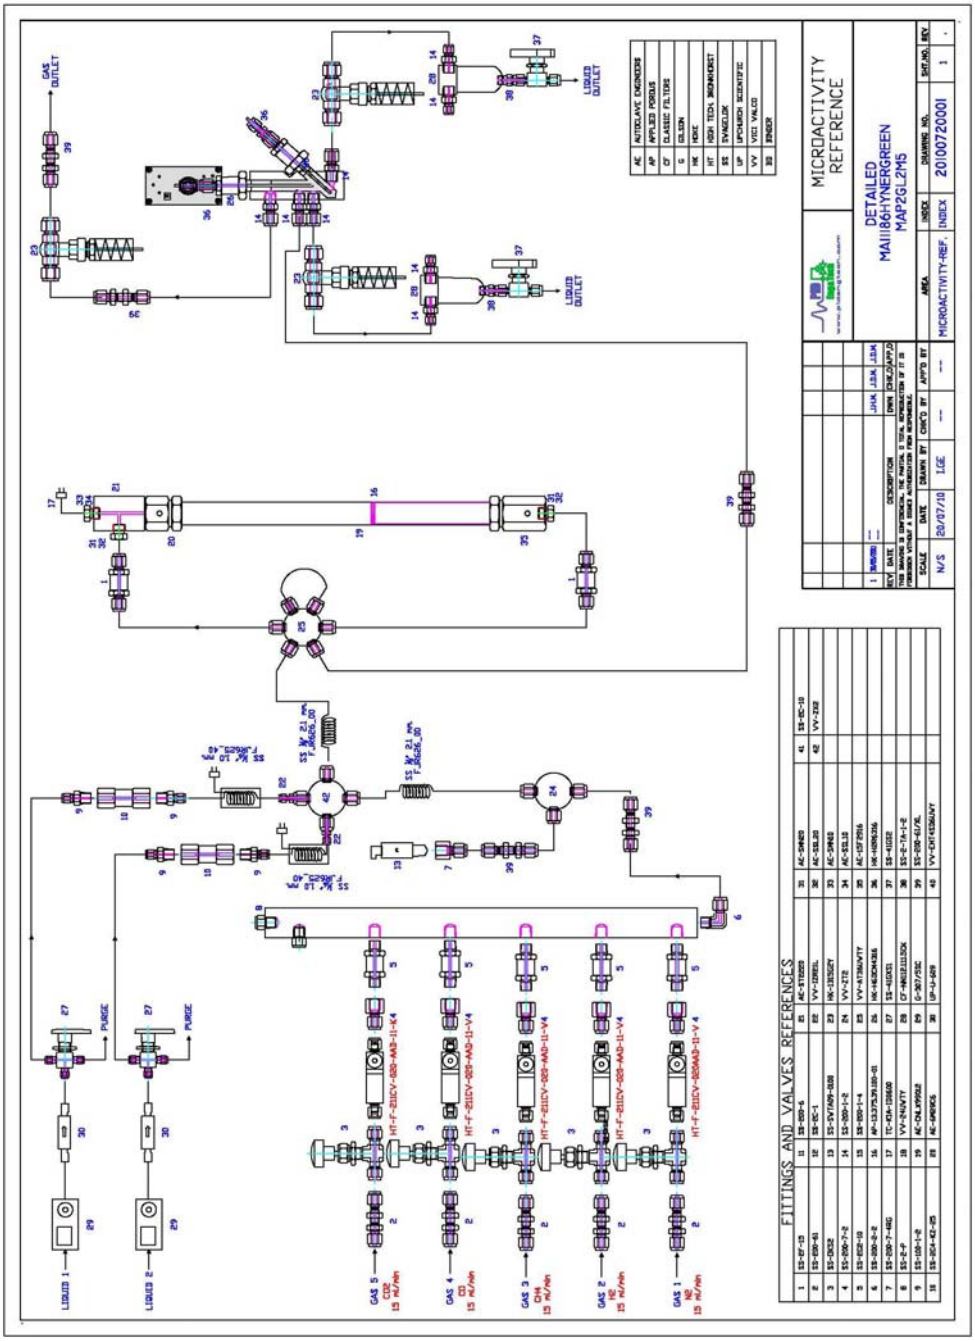

Figure 4-1

4.1. THE REACTOR AND THE HOT BOX

The tubular reactor consists of a nipple made by Autoclave Engineers, model CNLX99012, whose standard model has the following specifications:

- Length: 305 mm
- External diameter: 14.5 mm
- Internal diameter: 9 mm
- Material: 316-L Stainless steel
- Internal volume: 20 ml
- Connections: SF562CX
- Seals: AE-6F2986
- $T_{max.}$ recommended: 700ºC
- $P_{max.}$ recommended: 1350 bar at 25ºC; 400 bar at 482ºC (P_{max} reactor: 100 bar)

The following graphic illustrates the maximum working pressure for an Autoclave Engineers 316 stainless steel type nipple depending on the temperature.

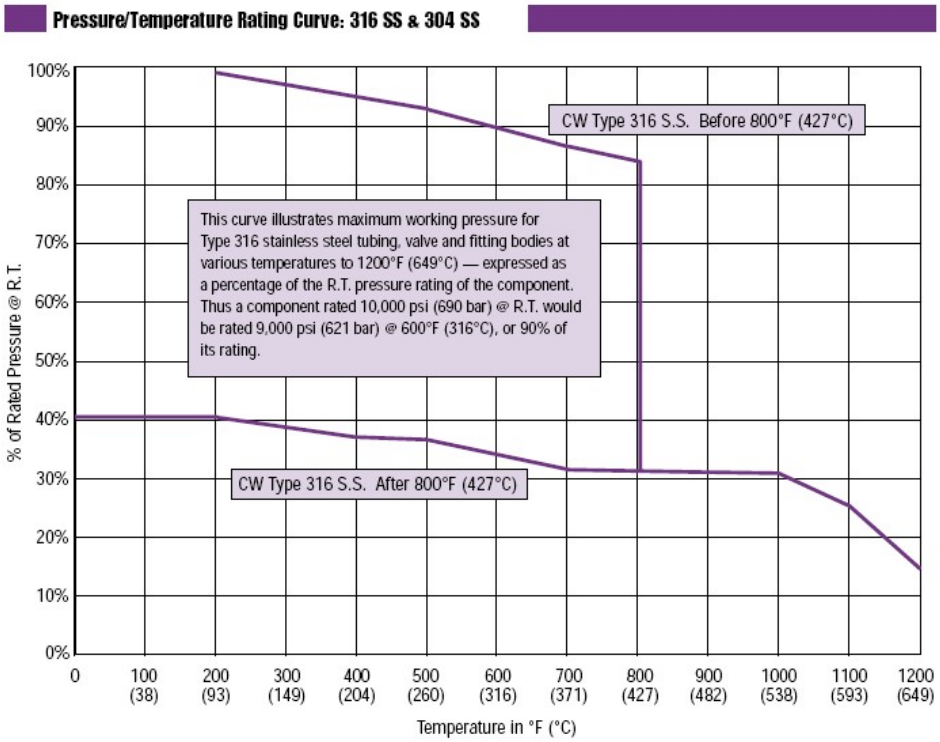
Pressure/Temperature Rating Curve: 316 SS & 304 SS
CW Type 316 S.S. Before 800°F (427°C)
This curve illustrates maximum working pressure for Type 316 stainless steel tubing, valve and fitting bodies at various temperatures to 1200°F (649°C) — expressed as a percentage of the R.T. pressure rating of the component. Thus a component rated 10,000 psi (690 bar) @ R.T. would be rated 9,000 psi (621 bar) @ 600°F (316°C), or 90% of its rating.
CW Type 316 S.S. After 800°F (427°C)
% of Rated Pressure @ R.T.
100%
90%
80%
70%
60%
50%
40%
30%
20%
10%
0%
0
100 (38)
200 (93)
300 (149)
400 (204)
500 (260)
600 (316)
700 (371)
800 (427)
900 (482)
1000 (538)
1100 (593)
1200 (649)
Temperature in °F (°C)

Figure 4-2

Depending on the user's requirements, any other reactor size (diameter or length) or any other construction material (Monel 400, Inconel 600, Titanium Grade 2, Nickel 200, Hastelloy C276, Titanium 6AL4V, etc) can be used.

As can be seen in Figure 4-3, the inside of the reactor has been fitted with a 10FR4HC porous plate made by the firm VALCO, in Hastelloy C-276 with a pore size of 2 µm. This plate rests on a 316 stainless steel pipe inserted through the lower end of the reactor, thereby allowing for:

- Reduction to a minimum the dead volume at the outlet
- Replacing the plate whenever so required, without the need to replace the reactor nipple.

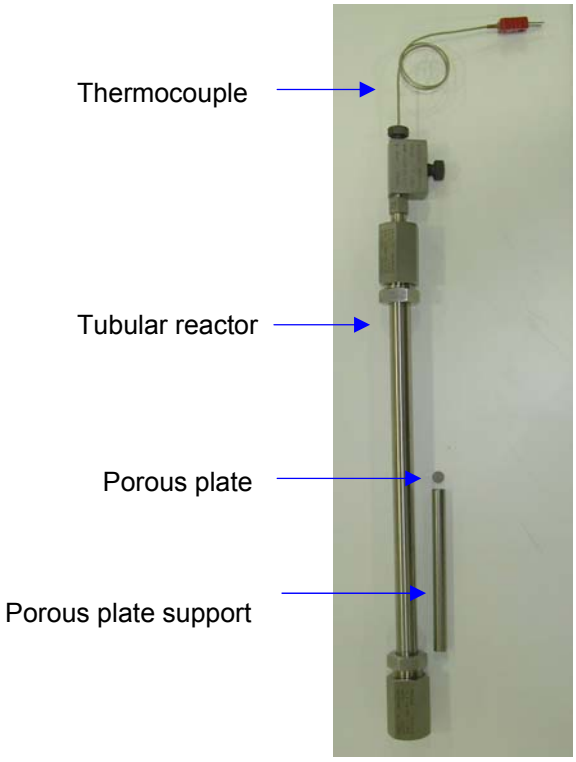

Figure 4-4

The thermocouple, type K (encased in a 1.5 mm diameter Inconel sheath), is inserted through the upper end and is in contact with the catalyst bed without thermowell. This allows for reading reaction temperatures with response times in milliseconds.

The reactor is housed in an oven built without insulation, consisting of a 304 stainless steel chassis, the inside houses the resistance together with a refractory material:

- 550 W / 230 VAC
- Maximum operating temperature: 800ºC.
- Low thermal inertia.
- Automatic opening system with temperature warning system.

The entire system is contained within a hot box made of 304 stainless steel which interior holds an electric convection heater. Its maximum recommended operating temperature is 190ºC.

4.2. THE CONTROLLERS

4.2.1. THE REGULATION PARAMETERS

The Microactivity-Reference unit uses P-I-D controllers for the following control loops:

- *Reaction temperature:* The signal from the thermocouple located in the catalyst bed is analysed by the controller, whose output signal is relayed to a solid-state zero-switching relay that regulates the power supplied to the oven proportionally to the control signal. The power the oven receives corresponds to a signal between 0 and 200 VAC, typically between 0 and 140 VAC, proportional to the control signal.

- *Hot box temperature*: The signal from the thermocouple located inside the hot box is analysed by the controller, whose output signal is sent to a relay that regulates the power supplied to the box's heater proportionally.

- *Pressure control:* The signal from the pressure transmitter installed upstream of the reactor is analysed by the controller, whereby its output signal determines the position of the pressure control valve.

- *Level control:* The signal from the capacitive level sensor installed in the liquid – gas separator is analysed by the controller, whereby its output signal determines the position of the level control valve located in the base of the separator.

The controllers used are made by the firm TOHO, model TTM-005, catering for RS-485 digital communications, and are shown in Figure 4-5:

Figure 4-5

The process value of the controlled variable is displayed in the upper window on the controller (green), whereas the set-point or the % control output (depending on whether operation is in automatic or manual mode) is displayed in the lower window (red). This set-point may be changed by pressing the "**Func**" key, which allows for selecting each one of the different digits and, subsequently, changing the value of each digit using the ▲and▼ keys. The "**Mode**" button is used to access the different control parameters configured in the controller:

- **-** : Process value.
- _ **P**: Proportional band.
- _ **I**: Integral action (s).
- _ **d**: Derivative action (s).
- _ **nd**: Control mode. Select with the ▲and▼ keys:

- *Run*: Automatic mode. The user is to set the desired value or set-point of the variable controlled on the lower screen of the controller, which will automatically act on the variable's control output.
- *Rdy*: Control start at a given moment. When this mode is activated, the red LED "RDY" on the front of the controller is lit up.
- *Man*: Manual mode. The user is to set the variable's control output (e.g. heating power: 0 – 100%) on the lower screen of the controller.

As a general rule, the user has to operate under *RUN* mode (when the variable's set-point is set) or *MAN* (when the control output is set), but never under *RDY* mode (the LED "RDY" on the front is to remain off).

- _ **nu1**: The variable's control output (%). This parameter will be modified by the user whenever operating under manual mode (never under automatic).
  - Regarding the temperature control, this parameter indicates the % of heating of the heater.
  - Regarding the pressure and level controls, this parameter indicates the % of opening of the control valve (fully closed at 0% and fully open at 100%).

    The parameter "_ **AH1**" on the **SET 2** set-up menu represents the maximum control output for the controller (access this menu by depressing the "**Mode**" key for 2 sec., press the "**Func**" key and enter a 2 in the cursor using the ▲ key. Move through the different menu parameters by pressing "**Mode**" until the desired parameter is reached).
- _ **E1H**: Upper alarm limit. Value of the variable above which the system's alarm is to be triggered.

Although these parameters have already been set with their optimum control values for operation of the Microactivity-Reference unit, they may be modified whenever necessary by using the "**Func**" button to go to each one of the digits and then use the ▲ and ▼ keys to increase or decrease the value.

The standard set-up for the Microactivity-Reference reactor is detailed in Table 4-1:

Table 4-1

Control parameter	Reactor temperature	Hot box temperature	Pressure	Level
_ P	24.0	9.0	25.0	110.0
_ I	180	120	90	50
_ d	20	20	0	0
_ nd	run	run	run	run
_ nu1	-	-	-	-
_ EH1	700	40 (do not modify)		

Other parameters of major importance that configure this type of controller are those that are shown below in Table 4-2, with their standard values for operation with the Microactivity-Reference unit (these parameters may vary from one unit to another. For verification of a reactor's specific set-up, consult the technical documentation that is supplied with the equipment):

		Reactor Temperature	*Hot Box Temperature*	*Pressure*	*Level*	*Aux 1*	*Aux 2*
SET1	**LnP**	0	0	22	22		
	PuG	1.00	1.00	1.00	1.00		
	PuS	0	0	0,9	0.00		
	PdF	1	1	1	1		
	DP	0	0	0.0	0.00		
	Fu	1	1	1	1		
	LoC	0	0	0	0		
SET2	**SLH**	800	200	250	10.00		
	SLL	0	0	0.0	0.00		
	Nd	run	run	run	run		
	Cnt	110	110	110	110		
	Dlr	0	0	1	1		
	Nul	-	-	-			
	TUn	1	1	1	1		
	AtG	1.0	1.0	1.0	1.0		
	AtC	2	2	2	2.00		
	P1	45	16.0	25.0	110		
	I	550	120	50	50		
	D	20	20	0	0		
	T1						
	ArW	100.0	100.0	100.0	100.0		
	MH1	80	95.0	85	85.0		
	ML1	0.0	0.0	0.0	0.0		
	Pbb	0.0	0.0	0.0	0.0		
SET3	**E1F**	6	6	6	6		
	E1H	700	40	100.0	2.00		
	E1C	0	0	0.0	0.00		
	E1t	0	0	0	0		
	E1b	0	0	0	0		
	E1P	0	0	0	0		
SET6	**Con**	b8n1	b8n1	b8n1	b8n1		
	bPS	19.2	19.2	19.2	19.2		
	Adr	1	2	4	5		
	AWt	0	0	0	0		
	nod	ry	ry	ry	ry		
SET7	**tno**	0	0	0	0		
	rP1	0.0	0.0	0.0	0.0		
SET0	**Pr11**	P1	P1	P1	P1		
	Pr12	I	I	I	I		
	Pr13	d	d	d	d		
	Pr14	Nd	Nd	Nd	Nd		
	Pr15	Mu1	Mu1	Mu1	Mu1		
	Pr16	E1H	OFF	E1H	E1H		
	Pr17	rP1	OFF	OFF	OFF		
	Pr18	OFF	OFF	OFF	OFF		
	Pr19	OFF	OFF	OFF	OFF		

Table 4-1

P-I-D values depend on the operation conditions. As an example, in Table 4-3 the PID parameters for the reactor oven are shown, depending on the working temperature:

Reactor Temperature		
	600ºC	**300ºC**
P1	40	40
I	460	350
D	65	100
MH1	30%	30%

Table 4-3

There now follows a brief introduction to the different methods that are used for tuning proportional, integral and derivative (PID) controllers and the criteria that are followed for considering that optimum control of the process has been achieved.

4.2.2. CONTROL STABILITY CRITERIA

Stability is the control system feature that makes the variable return to the set-point following a disturbance. The most commonly used criteria for determining control stability are the following:

A) Criterion of minimum area or of damping ratio

This is the criterion of widest application, especially regarding processes in which the duration of the deviation is as important as the value of the same. According to this criterion, the control is to ensure that the area of each oscillation in the control output signal following a disturbance is minimum (experience shows that stability criteria should be applied onto this signal and not on the process variable). In other words, to achieve a minimum error in the shortest time possible.

Experience in industrial control processes indicates that this area will be minimal when the proportion between the peak-to-peak amplitudes of the first two consecutive cycles, immediately following the disturbance, is 1/4. In other words, the damping ratio between these consecutive peaks must be 25%. It is a compromise criterion between stability in the controller's response and the speed or rapidity with which the manipulated variable returns to a stable value:

- Proportions percentage higher than 25% gives greater stability, but they lengthen the time required for attaining stationary state.
- Proportions percentage lower than 25% may reduce the time it takes to reach stationary state, but they cause instability in the system.

B) Criterion of minimum amplitude

The control system is to keep the amplitude of the deviation to a minimum. It is used in processes in which the equipment may be damaged by sudden large-scale deviations. For example, in reactions with thermal self-ignition, equipment featuring rupture discs, etc.

C) Criterion of minimum disturbance

The control system is to provide a non-cyclic recovery curve, precisely to ensure that the cyclic variants do not disturb or influence other system processes. This situation is forthcoming in concatenated processes, in which the oscillations in one subsystem are the result of oscillations in others. In a case like this, the decision must be taken to overdamp the control systems or perform the start-ups as per manual procedures.

4.2.3. CONTROLLERS TUNING

The values of the proportional band (inverse to the gain), integral action time (seconds / repetition) and derivative action time (seconds of advance) need to be conveniently dovetailed with all the other elements in the control loop so that, in the event of a disturbance in the system, the latter's response fulfils the control stability criterion.

The adjustment systems are classified into two categories:

- Experimental methods: applied when the process model is unknown. They determine the process's static and dynamic characteristics on the basis of one of several measurements obtained from the real process. The two most frequently used for closed control loops are: the trial and error method (test-error-test) and the ultimate gain method, developed by Ziegler & Nichols.

- Analytical methods: applied when the process model or the equation relative to the system's dynamics are known. They are difficult to apply in pilot plant control systems, given the absence of reliable processes data, and they are only applied when sufficient information is available for the perfect identification of the process model (transfer function), usually in industrial environments.

It is worth noting here that the procedures referred to as auto-tuning are based on empiric experiences and results obtained in industrial environments, which have nothing to do with the processes taking place in a laboratory pilot plant.

4.2.3.1. Ziegler & Nichols method

It is the most widespread experimental method for tuning the regulation parameters of a PID controller, although it is not recommended when the tuning is carried out mainly with a view to stable transition between different process states (variations in reaction temperature for the screening of catalyst activity at different temperatures) instead of seeking the long-term stability of the same.

The method allows for calculating the three values of the PID actions on the basis of the data obtained in a quick test of the characteristics of the closed control loop.

In short, it consists in gradually narrowing the proportional band from an initial value (e.g. 15 %) with I=0 and D=0 whilst small disturbances are created, until the process begins to oscillate continuously. This value of P receives the name of "ultimate proportional band" or "critical proportional band", Pc. Measurement is now made of the period of these oscillations (Tc, in seconds), that is, the time that elapses between two consecutive oscillations when the system is at its critical proportional band.

The controller parameters that will produce a response with the 25% damping ratio are calculated as per:

Proportional band (%)= 1.5 · Pc
Integral action (s)=0.5 ·Tc
Derivative action (s)= 0.1 · Tc

The optimum selection of the controller parameters is always a compromise solution and one that depends on the skill of the operator. Thus, for a process in which there is a considerable transport delay, it will be advisable to use high values of the proportional band. On the other hand, high values of P imply considerable sluggishness in the system's response to external disturbances or those of the system itself.

Typical values in semi-industrial processes for the P, I and D control parameters are:

Fast systems (pressure, flow):	P = 0 – 25% I = 1 – 120 s D = 0 – 10 s
Slow systems (temperature):	P = 0 – 50% I = 60 – 600 s D = 2 – 60 s

4.2.3.2. Method of trial and error

This is carried out with the controller and the process operating in standard mode. The general procedure basically involves starting up the process and performing repetitive tests on each control action (beginning with the proportional band), introducing disturbances by changing

the set-point and returning to its initial value. The adjustment is gradually fine-tuned by observing the control output signal and its response to the disturbance created (not too severe, so as to avoid damage in the process).

Begin by observing the system's behaviour in on-off status. A proportional action is then generated whereby the oscillations are suitably attenuated. Begin with a wide proportional band (small gain), which is then gradually narrowed, in line with the system's evolution, until the required stability is attained (damping ratio of 25% between two successive waves).

Once a suitable value of parameter P has been achieved (compromise between stability and error offset), the elimination of the offset will be achieved by means of the addition of an integral control action, also by trial and error.

As integral action compromises control, the proportional band is to be raised slightly (lower gain) and, beginning with a high value for the integral action (in seconds), slowly decrease it, whilst at the same time creating disturbances in the process by means of changes to the set-point.

Once the proportional and integral action parameters have been tuned, the derivative action is increased in small jumps, from D=0, whilst at the same time creating disturbances in the process by means of changes to the set-point, until the process obtains its characteristic cyclic behaviour. A suitable value for the derivative action should lead to the stabilisation of the controlled variable a few cycles after a disturbance.

4.2.3.3. Method proposed by PID Eng & Tech

Based on the accumulated experience of PID Eng & Tech in the tuning of pilot plant or laboratory processes, where the system gains are high (transport delays are lower than normal in industrial environments) and where the system's readiness to respond to changes in the set-points is especially prevalent, a new method has been designed for tuning said parameters, based on the experience acquired in the control of processes.

It is relatively easy to predict the value of the proportional band that is suitable for a process if one bears in mind the physical interpretation of this concept. If the proportional band located around the set-point is understood to be the area within which the controller goes from providing a control output of 0 to 100%, and if manual manipulation has been made beforehand of the final control element in the process conditions, the operator may know, for example, that in a pressure control system, the valve must remain closed until a pressure of 86 bar is achieved when the aim is to reach 90 bar, and as of that moment, the control action may be performed to regulate the set-point. This indicates that the proportional band should have a value of 8 bar (4 above and 4 below the set-point). If it is taken into account that the operating interval is 100 bar, this 8 bar proportional band corresponds to a value of P = 8% (% F.S.).

If this is the first time this process is initiated, precautions may be taken such as increasing this value with a view to overdamping the system and, in addition, carrying out the system's first start-up below a hazardous position, remembering that the offset in this system is unknown, and may equally be positive or negative.

The application of this procedure to any kind of system may allow for foreseeing the suitable value of P by simply sensing when the controller should begin to change its control outlet so as not to overrun the order.

An interesting possibility for advanced operators is to perform this initial trial and error on the value of P with a high value of integral action, which will avoid the offset phenomenon without affecting the stability of the solely proportional action. This high value of integral action should correspond to, for example, 2 or 3 values of the oscillation period, which for rapid systems (pressure, flow, level, etc.) will correspond to 20 - 60 s, and for slow systems (temperature, pH in

buffered solution, etc.) to 200 - 600 s. It tends to be relatively easy to deduce a system's period of oscillation by bearing in mind the characteristics of the same.

Once the system has been started up with this estimated value of P, in all probability following one or two trial runs around the set-point, the value of Pc is found, whereupon the critical oscillation period will also be known.

As has been noted on several occasions, pilot plant operation involves the scanning of different conditions around the operating variables. Given that this is the case, it is bad practice to select a value of P similar to that of Pc, given that a modification in the set-point, or a modification involving another operating variable, may suddenly change the system's gain and destabilise it (if the value of P remains below the value of Pc).

Accordingly, as with what is recommended in other empirical methods, an appropriate value for P in these systems may be:

$$P = 1.6 \cdot Pc$$

Concerning the appropriate value of I, the procedure in which this control action operates may be understood as follows: the control algorithm assesses the area comprised between the variable's oscillation curve and the straight line delimited by the set-point. Accordingly, if the time in which the totalling of this area coincides with the period of oscillation, its positive part is cancelled out by the negative and the result, for the action that is superimposed onto the proportional action, is zero.

If this operation is performed in a short period of time, the result will not reflect the true situation and the resulting control action will destabilise the control system. On the other hand, if this assessment is performed over the course of two or three cycles, the result will continue to be zero, with the eventuality that too long will have been spent waiting to undertake an action that would have corrected the error earlier, a situation that is clearly never desirable. Therefore, low values of I are damaging and high values of I, albeit not damaging, are not convenient.

But if the value of I in these pilot plant systems is adjusted to the period of oscillation, the situation resulting from a significant change in a process variable or set-point in which the system's gain becomes more pronounced and, therefore, a change occurs in the system's period of oscillation, could lead to process instability, as the time spent in calculating the area of this new situation has not been sufficient to allow for the compensation of the positive and negative areas of this oscillation.

Thus, for this type of systems, it is advisable to select a value for parameter I that is higher than the critical oscillation period (Tc):

$$I = 1.2 \cdot Tc$$

Concerning the derivative action, and always bearing in mind how problematic its use is for non-advanced operators, the option should be taken not to use it in rapid systems (the gains on pilot systems are very high due to the immediate response to a disturbance, as a result of their low damping capacity).

For systems that evolve slowly, and due to their nature of "overtaking" the process's evolution, relatively narrow values improve systems' response to overshoot phenomena during start-up procedures. Thus, for systems in which these phenomena are frequently repeated during the operating procedure, desirable values may be:

$$D = 0.07 \cdot Tc$$

Clearly, experience will determine the optimum values for the tuning of a control loop, with these recommendations being nothing more than an approximate departure value. It is important to stress that by making use of these parameters, an advanced operator will be able to “draw” a variable’s approach curve to its situation of stability following a disturbance.

4.3. THE LIQUID – GAS SEPARATOR

The Microactivity – Reference unit includes a liquid – gas separator of low dead volume consisting of a stainless steel tank on whose walls liquids condense at high pressure and low temperature. Once they have passed through the reactor, the reaction gases are drawn outside through the rear of the hot box, where the separator is located (see Figure 4-6) and where liquid condensation takes place. Upon leaving the separator, the gases are again introduced into the hot box, flowing to the pressure control system (provided that the unit has this set-up option).

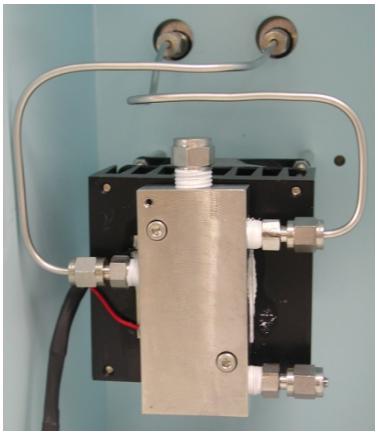

Figure 4-6

The separator consists of a solid piece of 316 stainless steel in which a perforation of 65 mm in depth and 8.5 mm in diameter has been drilled, as well as other machining corresponding to the system's inlet and outlet, and which acts as a condenser by means of a Peltier cell.

A Peltier cell consists of two facing ceramic panels between which there are hundreds of thermoelectric couples. Just as a thermoelectric couple generates a difference of potential when its connections register different temperatures (Siebeck effect), when a difference of potential is applied to the thermoelectric couple, a difference of temperature is generated between the connections (Peltier effect).

The application of a 15 VDC difference of potential and a 3 A current in the Peltier cell generates a temperature difference between the panels of approximately 30ºC. If a forced convection heat sink is used to bring the temperature of the hot panel to 25ºC, then, and to uphold this temperature difference of 30ºC, the temperature of the cold panel must fall below –5ºC, and when placed in contact with a metallic block, temperatures of around 0ºC will be achieved in that block.

The cooling of said container may be activated in two ways:

- Via the main screen of the touch screen (see section 4.5.1 of this manual).
- Via the process@ control software (see section 5.5.3 of this manual).

Regarding equipment that is not fitted with a level control in the separator, the removal of the condensed liquid is to be performed manually.

4.4. THE PRESSURE SENSOR (FOR EQUIPMENT AT ATMOSPHERIC PRESSURE)

This device is only available in those pieces of equipment that operate at atmospheric pressure, which do not include the pressure control option in the reactor (chapter 4.6.2 in this manual). Its purpose is to register the pressure drop inside the reactor.

APPEARANCE OF THE DEVICE

- 1): Display. It shows the value of the pressure measurement, adjustments, error messages and the keypad blocking status.
- 2): Indicator that lights up when the operation of comparative action of output 1 has been activated.
- 3): Indicator that lights up when the operation of comparative action of output 2 has been activated.
- 4): Increase button.
- 5): Decrease button.
- 6): Key for selection of operating mode.

Figure 4-7

SPECIFICATIONS OF MODEL DP2-21

- Range of read-out: 0 – 100 kPa (0 – 1 bar). The application of pressures above the maximum read-out pressure could damage the device.
- Maximum pressure admissible: 490 kPa (4.9 bar).
- Units of measurement: bar (by default in the Microactivity-Reference unit, although these may be modified by the user).
- Fluids applicable: Non-corrosive.
- Response time: $\leq$ 2 ms.

METHOD OF OPERATION

Once the Microactivity-Reference unit has been switched on, the pressure sensor will at all times display the pressure drop in the system.

SYSTEM ALARMS

By pressing twice the "**Mode**" button, the device's screen displays the upper pressure limit. If this is exceeded, the system's pressure alarm is triggered. The actions to be performed by the system in the event of such an alarm are as defined by the user on the pressure alarm screen on the Microactivity-Reference's touch screen (see section 4.5.2 of this manual).

By pressing once the "**Mode**" button, the device's screen displays the pressure value below which the system's pressure alarm will be shut off, once the situation that triggered the alarm has been resolved.

ERROR MESSAGES

Message	Cause	Corrective action
	Current surge due to a short circuit.	Reboot the device.
	Pressure is being applied to the device during the adjustment of the zero-setting.	Carry out the adjustment of the zero-setting at atmospheric pressure.
	The pressure applied exceeds the upper limit of the pressure range that can be shown.	The pressure applied must be within the range that can be shown on the screen.
	The pressure applied exceeds the lower limit of the pressure range that can be shown.	

Table 4-4

For more information on the different operating modes, as well as the different possible configurations for the device, consult the manual for the series DP2 pressure sensor.

4.5. THE TOUCH SCREEN

The Microactivity-Reference unit has a touch screen, which allows for adjusting the various process parameters, it displays the following:

- o A main screen, which shows a P&I diagram of the process
- o Different set-up screens, which are accessed from the main menu.

4.5.1 MAIN-SCREEN FUNCTIONS

The main screen presents the process flow, and has the appearance shown in Figure 4-8. Pressing on the different icons and buttons grants access to the different functions:

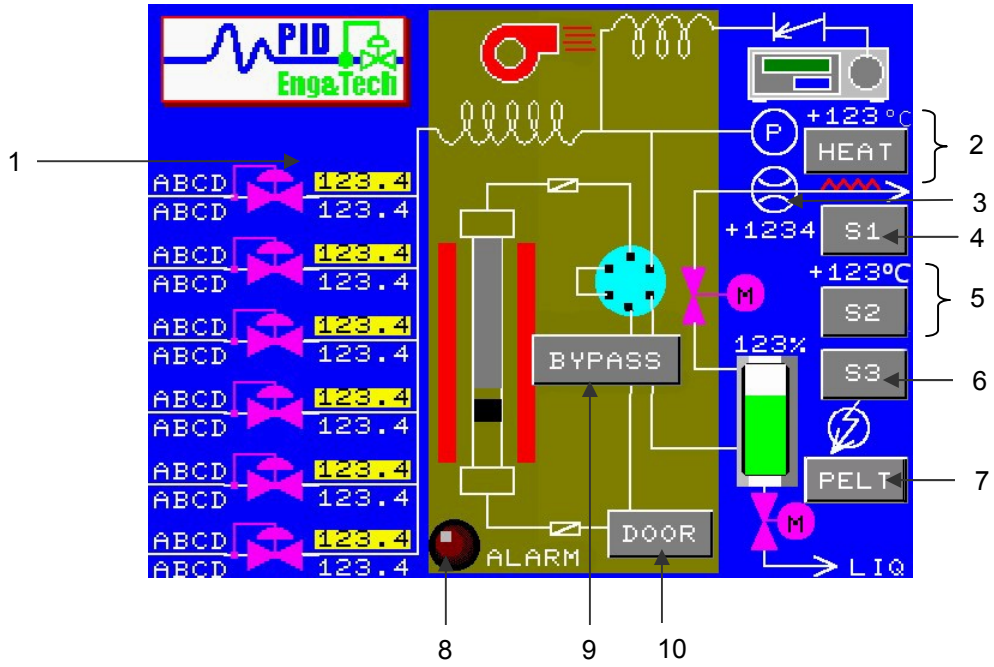

Figure 4-8

The buttons can be in two different states:

- o Green background: Activated
- o Grey background: Deactivated

1. Control of gas inlet streams: The screen depicts each one of the mass flow controllers integrated within the system, showing:
   - o Set-point (yellow background): set by the user. Pressing on the value calls up a numerical keyboard for entering the desired set-point, which is stored in the system by pressing the "**Enter**" key.
   - o Current process value (on the lower part): This cannot be modified by the user.

2. **HEAT**: Heating of the system's gas outlet line.
   It is possible to incorporate a thermocouple in this line (opt.), checking the line temperature on the touch screen, over the button. If the unit does not incorporate this option, this temperature reading appears as a line of points. The configuration of this control loop can be set in the screen "**MISC SETUP**" in the main menu of the touch screen.

3. Read-out of the gas flow at the reactor outlet, provided by a mass flow meter (MFM) situated on the gas outlet line (if this set-up option has been installed). This value can not be modified manually by the user.

4. **S1**: Additional control options for special configurations of the unit.

5. **S2**: Actuator for an additional loop control (opt). Both sensor and final control element (heaters) have to be connected to the "**AUX 2**" connector of the unit. Its P-I-D´s parameters and mode control (auto or manual) can be set in the "**MISC SETUP**" screen. If the unit incorporates the thermocouple for this option, the temperature loop control is shown over the "**S2**" button.

6. **S3**: Additional control options for special configurations of the unit.

7. **PELTIER**: Cooling / heating of the liquid-gas separator. The peltier configuration can be done in the "**PELTIER CONTROL**" menu of the touch screen, where the user selects the action (cooling / heating) and the desired output control for regulating the separator temperature. If this function is deactivated, the separator will be at ambient temperature. A display on the upper part of the tank shows the read-out for the liquid level in the liquid – gas separator, expressed as a percentage of the total volume of the tank (if the level sensor has been installed in the equipment). This value cannot be modified manually by the user.

8. **ALARM**: Consultation and deactivation of the system's alarm. When an alarm is triggered in the system, the icon "**Alarm**" will begin to flash, accompanied by a buzzer. By pressing on this icon, the alarm panel will be displayed (see Figure 4-9) where the cause of the alarm may be consulted (the icon that is flashing) and deactivated:

    - *RESET BUZZER* button, for deactivating the buzzer.
    - *RESET ALARM* button, for deactivating the alarm, provided that the situation of risk that triggered the alarm has been corrected in the system.

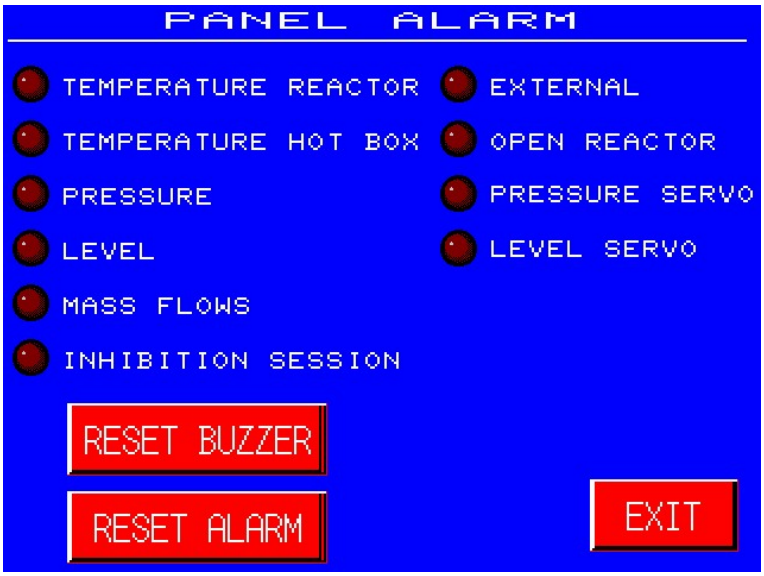

Figure 4-9

    - *Temperature Reactor*: The reactor temperature exceeds the maximum limit specified in its controller.

- *Temperature Hot Box*: The hot box temperature exceeds the maximum limit specified in its controller. By default, this limit is set at 40ºC, when this temperature is exceeded the forced convection is activated in the hot box. Accordingly, this alarm will normally be triggered, although this does not mean that the system is operating out of control.
- *Pressure*: The pressure in the system exceeds the maximum limit specified in its controller.
- *Level (only for old Microactivity units)*: The level in the liquid - gas separator exceeds the maximum limit specified in its controller.
- *Mass Flows*: Alarm for deviation of the flow of any one of the system's mass flow controllers regarding its set-point (consult the screen Mass Flow Set-up).
- *Inhibition Session*: Whenever an alarm is triggered in the system, an inhibition session will be activated, interrupting the sequence of sessions programmed in the control software and so avoiding situations of risk in the system.
- *External*: External alarm, additional to the reactor.
- *Open Reactor*: Detection of open oven.
- *Pressure Servo*: Alarm in the Digital Servo of the micrometric valve for pressure regulation in the system.
- *Level Servo*: Alarm in the Digital Servo of the micrometric valve for regulating the liquid level in the liquid – gas separator.

Press the "**Exit"** key to return to the main menu.

9. **BYPASS**: Operating the reactor's by-pass valve. Access is provided by means of the "**Bypass**" key. When this icon is depressed, the valve is in by-pass mode, isolating the reactor.

10. **DOOR**: Opening / closing of the hot box door. It is operated by pressing the "**Door**" key.

4.5.2 MAIN MENU

Press the "**F1**" key on the touch menu to access the main menu, from where the following set-up screens can be accessed:

Figure 4-10

- *MASS FLOW SETUP*: Set-up menu for the mass flow controllers (MFC). The following is displayed for each one of the system's MFC's:

- Maximum flow: These values are determined in accordance with the number of controllers of the equipment.
- Units in which the gas flow is expressed.
- Name of the gas.
- % of alarm: Deviation alarm. This alarm is inhibited during the time specified in the *Delay Time Alarm* (in sec.), being triggered if the specified deviation persists during this time with respect to the set value

All these parameters may be modified by the user by pressing on their corresponding yellow boxes and entering the new values by means of the keys that are displayed on screen. Before beginning to work with the equipment, it is important to ensure that each reactant gas MFC installed has been properly set up, and that all the other MFC's not installed have their fields set to zero.

If the unit incorporates a mass flow meter (MFM), the user has to set its maximum flow in this screen, in ml/min. If the unit does not incorporate this option, this field must be set to 0 ml/min.

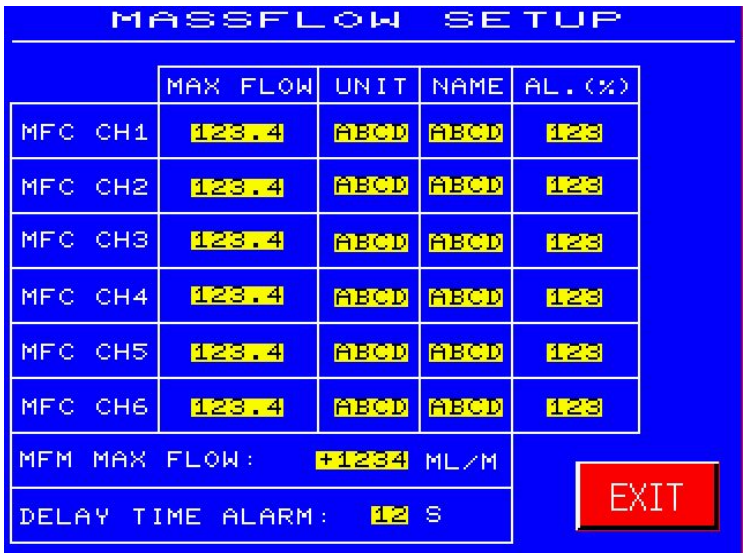

Figure 4-11

Press the "**Exit"** key to return to the main menu.

- *ALARMS SETUP:* This screen allows the user to select the actions the system is to carry out in case an alarm goes off. The alarms that can be configured are four: temperature, pressure, level and external alarm.

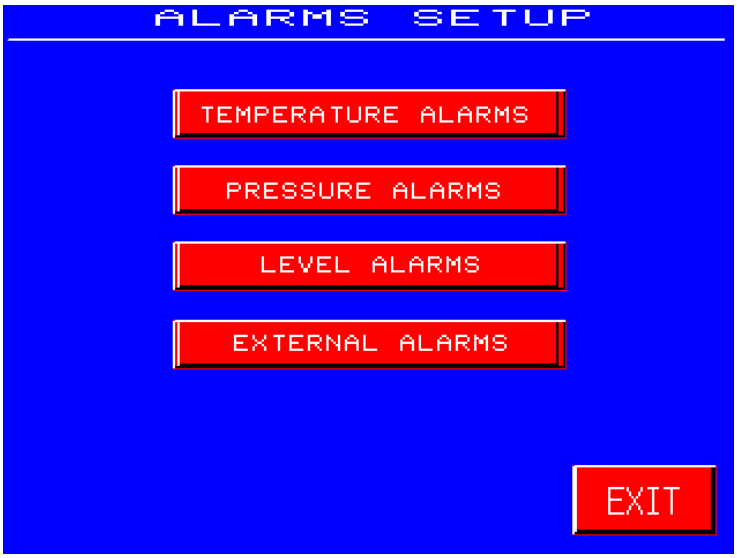

Figure 4-12

⇒ *TEMPERATURE ALARMS*: Set-up menu for the temperature alarm.

This screen allows the user to select the actions the system is to carry out in the event of a temperature alarm. Pressing on the keys selects one of the following options for each:

- **OFF:** Gases that will be shut down during the alarm (fuels, inflammables, reactants, etc.).
- **FREE:** Gases that will maintain the same status they had prior to the alarm (Inerts, for diluting the concentration of reactants inside the reactor).

Press the "**Exit"** key to return to the main menu.

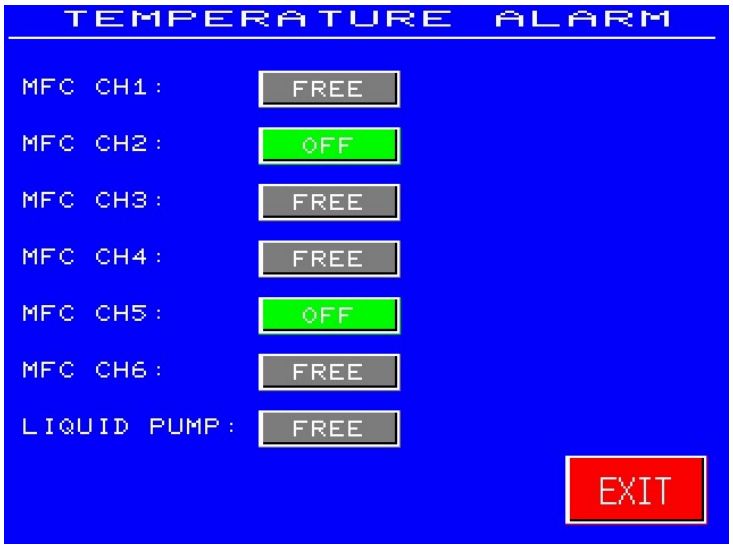

Figure 4-13

⇒ *PRESSURE ALARMS*: Set-up menu for the pressure alarm.

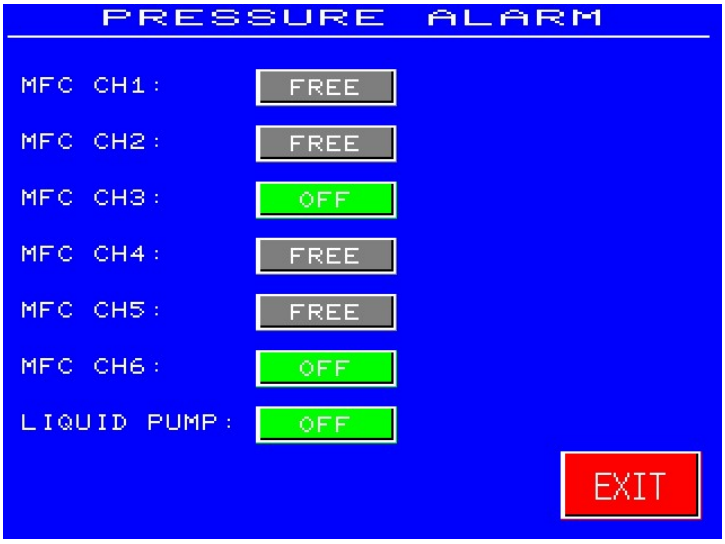

Figure 4-14

As in the previous menu, this screen allows the user to select the actions the system is to carry out in the event of a pressure alarm. In this case, it is advisable to close off all gas and liquid inlets to the system in order to reduce the pressure within it (set them to **OFF**).

This alarm will remain locked and has to be reset manually on the alarm panel pressing the key “Reset Alarm”.

Press the “**Exit”** key to return to the main menu.

⇒ *LEVEL ALARM (only for old Microactivity units)*: Set-up menu for the level alarm.

In this screen, the user can configure the unit in order to stop the liquids and the gasses when the alarm in the liquid/gas separator goes off.

Figure 4-15

⇒ *EXTERNAL ALARM*: Set-up menu for external alarm.

In this screen, the user can configure the unit in order to stop the liquids and the gasses when the alarm in the liquid/gas separator goes off.

Figure 4-16

- *LEVEL SETUP (only for old Microactivity units)*: Set-up screen for the level sensor (for equipment with this option).The description of this screen and the procedure for making the level sensor calibration is described in the section 4.6.3.3 of this manual.

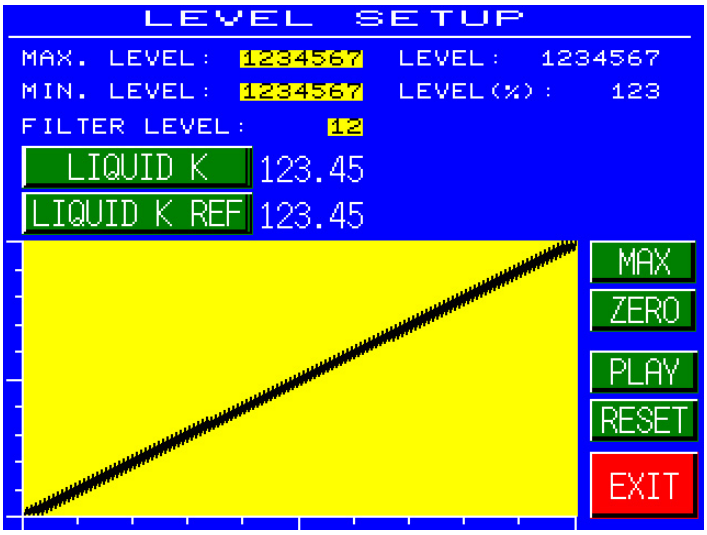

Figure 4-17

Press the "**Exit"** key to return to the main menu.

- *MISCELLANEOUS SETUP*: For setting up the following parameters:

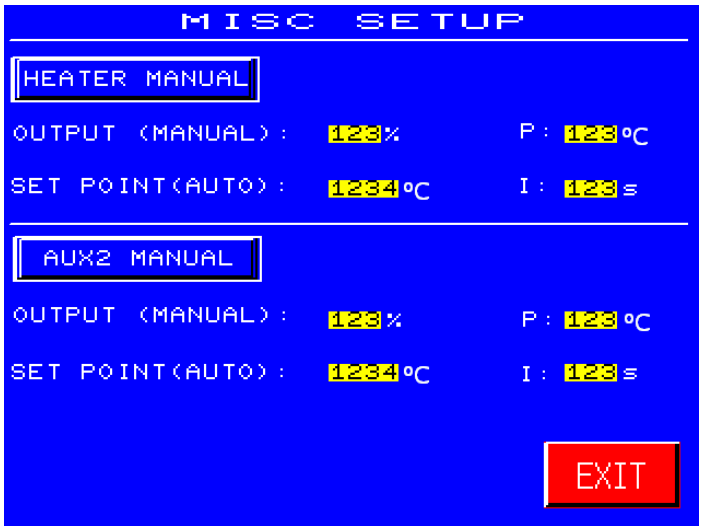

Figure 4-18

- HEATER: Heating of the system's gas outlet line. The heater control can be set as:
  - "Heater Manual": By default. In this mode, the user can set the control output (%) of the heater in the "Output (manual)" field:
    - 0%: No heating
    - 100%: Maximum power of heating.

In this mode, the controller ignores the P-I parameters and the set point fixed by the user.

  - "Heater Auto": For using this mode of control, the unit has to incorporate a thermocouple in the system's gas outlet line. Working with this mode, the user can set the desired set point and the P-I parameters for the loop control (The controller adjusts the control output).

***CAUTION**: If the unit does not incorporate this thermocouple, the selection of "Auto" mode of control inhibits the line heating (even when the button "**HEAT**" is activated in the main screen).*

- AUX2: Auxiliary control loop for temperature control (opt). If the unit includes this option, the heater must be plugged to the "**AUX2**" connector on the rear panel of the unit. The operation with this device is the same as it has been described in the previous section "HEATER".

Press the "**Exit"** key to return to the main menu.

- COMMUNICATIONS SETUP: Set-up parameters for the communications via Ethernet between the devices. By default, the unit is configured with the appropriate parameters to connect it directly with the control PC with a crossed serial cable:

IP ADDRESS:	192.168.0.5
IP MASK:	255.255.255.0
GATEWAY:	192.168.0.1
TCP PORT:	1234

Figure 4-19

Press the "**Exit"** key to return to the main menu.

- PELTIER CONTROL: Selection of the Peltier mode:
    - **COOL**: For reducing the L/G separator temperature (Minimum: about -1ºC)
    - **HEAT**: For increasing the L/G separator temperature (Maximum about 60ºC). *This mode is the recommended for working with high viscosity hydrocarbons, in order to avoid plugs in the liquid lines.*

- Peltier Control (%): This parameter is directly proportional to the cooling / heating power supplied to the L/G separator (values between 0 and 100 %)
- Duty time (s): Time of the cooling / heating cycle (typically 10 seconds).

Figure 4-20

- ADMIN SETUP: Screen for the system configuration by a PID Eng & Tech administrator. The password is not available for the user of the unit.

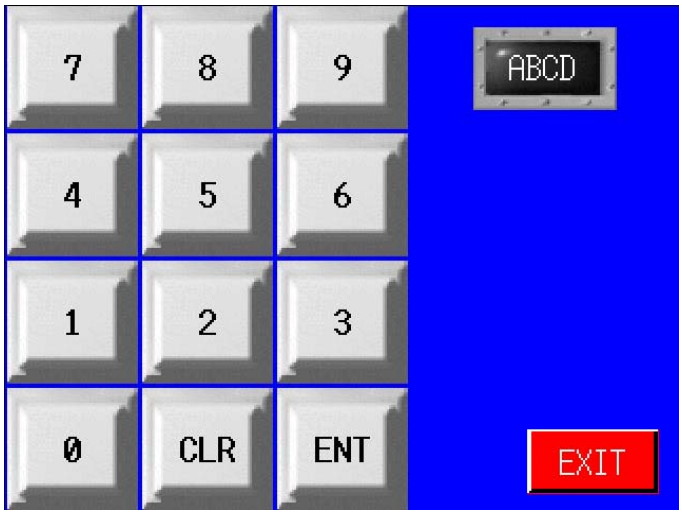

Figure 4-21

- ABOUT PID: Product information

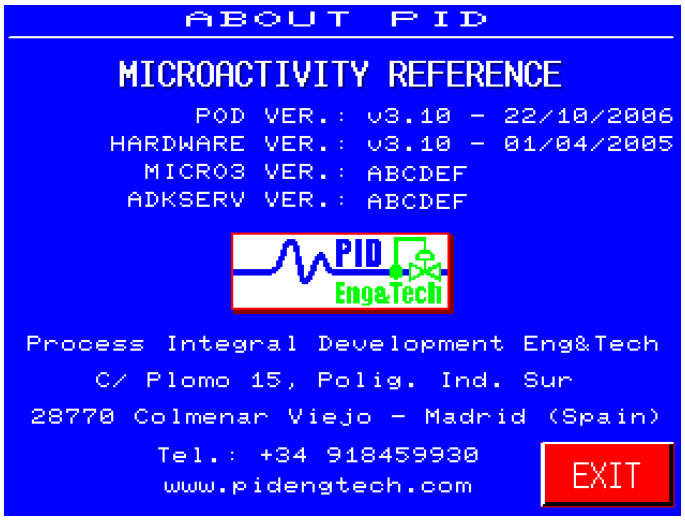

Figure 4-22

This screen provides information regarding the company PID Eng&Tech as well as the software versions installed in the unit:

- Pod Ver.: Software for the touch screen
- Hardware Ver.: Software for the control panel
- Micro3 Ver.: Control software
- Adkserv Ver.: Embedded software

Press the "**Exit"** key to return to the main menu.

4.5.3 OTHER FUNCTIONS

- Adjustment of contrast of the touch screen: This function is accessed by means of the "**System**" key on the touch screen, and may be increased or decreased using the "**F3**" and "**F4**" keys.

4.6. SPECIAL CONFIGURATIONS OF THE MICROACTIVITY-REFERENCE

4.6.1 THE GILSON 307 HPLC PUMP

The Microactivity-Reference reactor provides the option of working with liquids introduced into the system. When this option is required, the system is fitted with a HPLC positive alternative displacement pump made by the firm GILSON.

4.6.1.1 Front view

1 – Digital screen
2 – Numerical keypad
3 – Pump head
4 – Pump head fastener
5 – Inlet to pump head
6 – Outlet from pump head
7 – Connections to manometer module
8 – Side attachment
9 – Side screws

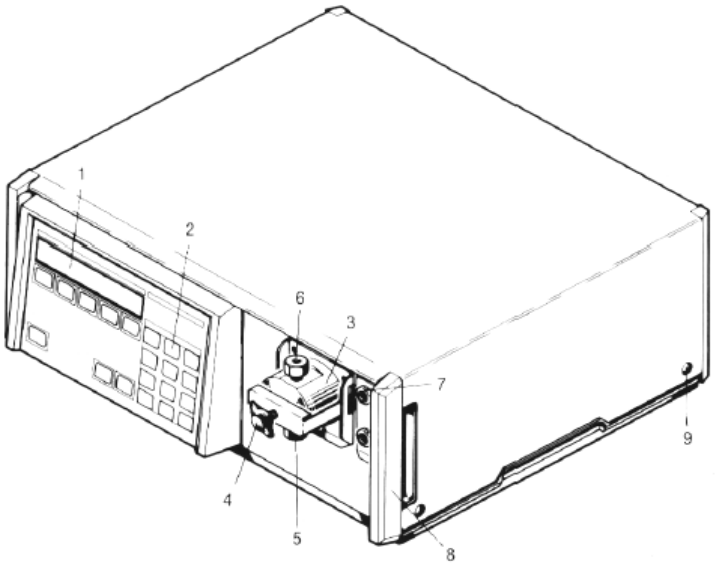

Figure 4-23

4.6.1.2 Keyboard

1 – Power indicator
2 - Screen
3 – Function keys: Their function is displayed on the screen and changes according to the menu.
4 - *PRIME*: The pump runs with maximum flow until *STOP* is pressed.
5 - *HELP*: Displays messages and instructions related to the system, with no effect on pump operation.
6 - *CANCEL*: Clears the last entry without storing it in the memory.
7 - *ENTER*: Confirmation key
8 – Numerical keypad.

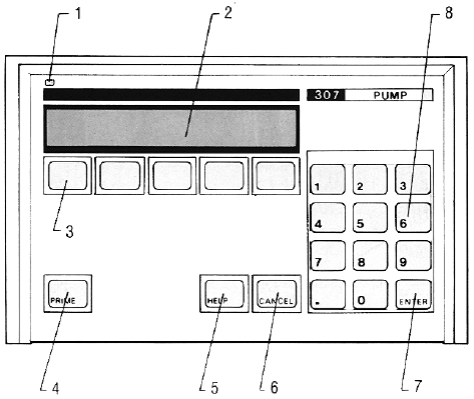

Figure 4-24

4.6.1.3 Technical Specifications

Pump	Programmable reciprocating pump with single-piston interchangeable head, constant stroke and fast refill motion, internal pulse dampener and pressure feedback
Pump Heads SC = stainless steel W = rinsing compartment for aqueous salt solutions (≥0.1M) Ti = titanium	**Pump Head Model** / **Flow Rate Range (mL/min)** / **Pressure Range** psi / bar 5SC — 0.010–5 — 14.5–8700 psi — 1–600 bar 10WSC — 0.050–10 — 14.5–8700 psi — 1–600 bar 10WTi — 0.050–10 — 14.5–8700 psi — 1–600 bar
Mixing Modules	811D Analytical Mixer: 1.0–10 mL/min, 1.5 mL; 110/220V 811D Titanium Analytical Mixer: 1.0–10 mL/min, 1.5 mL; 110/220V 811D Titanium Analytical Mixer: 0.1–3.0 mL/min, 0.7 mL; 110/220V 811D Microbore Mixer: <0.1 mL/min, 65 µL; 110/220V
Operating Modes	Constant flow rate (Flow), constant volume (Dispense) and time-based sequence (Program)
Pump Parameters	Head number: 5 or 10 Liquid compressibility: 0–2000 $Mbar^{-1}$ Refill time: 125–1000 ms Inlet pressure: 0–10 MPa
Programmable Parameters	• Timed events for programming four output contact closures and one input to wait for injection • Time, adjustable from 10^{-2}–10^{4} min with increments from 0.01–1 min depending on the range used • Flow control adjustable in mL/min from 0.01%–100% of the maximum flow rate of the pump head being used • Up to 999 loops with unlimited linking of files • Storage for 10 user programs and four error files with a maximum of 25 points and timed events in each program
Flow Rate	Flow rate: 10 µL/min–10 mL/min Coefficient of variation: 0.1%–0.6% with aqueous solutions or hydro organic polar solvent mixtures; 0.3%–1% with hydrocarbons or chlorinated volatile solvents Maximum accuracy error: ±1% with water over the full flow rate and pressure ranges
Pressure	0.1–60 MPa (600 bar, 8700 psi), depending on pump head used Accuracy: <±1% or 0.1 MPa (1 bar, 15 psi) Repeatability: <1% or 0.1 MPa (1 bar, 15 psi)
Pulse Dampening	Pulsation: <1% with water at 1 mL/min and pressure >8 MPa Dampener volume: 0.6 mL at atmospheric pressure, 1.6 mL at 60 MPa
Software	Via Gilson UniPoint® System Software
Communication Interface	RS-232 or GSIOC; four inputs and four relay outputs
Display Panel	2 x 24-character LCD
Front Panel	Keypad and built-in help messages
Liquid Contact Materials	316L stainless steel, titanium, sapphire, ruby, PTFE, PCTFE and HDPE
Power Requirements	Frequency: 50–60 Hz Voltage: 100–120 or 220–240V; mains voltage fluctuations not to exceed ±10% of the nominal voltage
Environmental Operating Temperature	0–40°C
Manufacturing Standards	Meets applicable Safety and EMC certification standards; CE certified
Instrument Dimensions (w x d x h)	33 x 33 x 15 cm (13 x 13 x 6 in.)
Instrument Weight (with head)	11.5 kg (25.4 lbs.)
Shipping Weight (with head)	15.4 kg (34 lbs.)

4.6.1.4 Switching on the pump

Before operating the liquid pump, the electrical and mechanical installation of the system needs to be performed, at this point it is advisable to consult the pump's user handbook.

When the pump is switched on (the switch is to be found on the rear), the screen displays a message indicating the model of the pump as well as the version of the control software, as shown below.



Following this message, the pump's main operating screen is displayed.

4.6.1.5 Setting up the pump

Once the electrical installation is completed (as described in the chapter 3.2.3 of this manual), it is necessary to configure the pump (if the MA-Ref reactor includes the pump, it is already configured at PID Eng & Tech laboratories, so it is not necessary for the customer to do it again):

Setup pump hardware (PUMP): Press "Menu" and "Pump". The sequence of parameters is:

- ***Refill time:*** It is the time required for the piston return stroke. Normally it is set at the lowest value (125 ms). If cavitation from degassing occurs, then a higher value must be used. The minimum value is 125 ms and the maximum value is 1000 ms.

  The maximum flow rate depends on the refill time. If the refill time is too long, a message "Invalid settings" flashes when you run the program. The refill time or flow rate must be lowered.

- ***Pump Compressibility***: This data is used to calculate the flow rate compensation for the compressibility of the solvent. The minimum value is 0 and the maximum is 2000 $Mbar^{-1}$. The default value is 46 (compressibility value for the water). Compressibility values for the common solvents at atmospheric pressure are listed:

Solvent	***Xo (Mbar-1)***
Carbon Dioxide	1150
Water	46
Methanol	123
Acetonitrile	99

- ***Pump Head Size***: This parameter is the size of the pump head. Possible values are 5, 10, 25, 50, 100 and 200. It is possible to use any head size with the Gilson 307 pump. However, to ensure accuracy, reproducibility and efficient pulse dampening, the flow rate should not exceed 5 ml/min.

- ***Inlet pressure***: This is the pressure at the inlet of the pump head. This allows the accurate pumping of liquefied gas. It must be set to the same as the pressure of the aspirated liquid, that is the saturating vapour pressure at the ambient temperature for the liquefied gas delivered from a pressurized cylinder. When using carbon dioxide at a temperature of 22ºC, the value of the inlet pressure should be defined as 6 MPa. A table of inlet pressures is shown below:

Ambient temperature (ºC)	15	20	22	25	30	31	(Tc)
Pressure Po (Mpa)	5.1	5.8	6.0	6.5	7.2	7.4	(Pc)

  The default value is 0 Mpa.

- Input / Output parameter setup (I/O): Press "Menu" and "I/O". The sequence of parameters is:

- ***High pressure limit:*** If the pressure reading from the manometric module rises above this limit, the pump will stop. The sequence following a high pressure error is described later in this chapter. The pressure can be displayed in three different units, bar, MPa or kpsi. Change the units by pressing the soft key below the units display, bar, MPa or kpsi. The maximum value is 600 bars. The default value is 600.

- ***Low pressure limit***: If the pressure reading from the manometric module drops below this limit, the pump will stop. The minimum value is 0. Default value is 0.

- ***Alarm***: The alarm is a buzzer which sounds every time there is an error or an invalid setting. It can be programmed to be either On or Off. This function only controls the operation of the buzzer, it does not affect the operation of the pump when there is an error. If the alarm is On, the warning buzzer will sound every time there is an error. An error can be a pressure limit, or an invalid setting. This parameter can be changed from On to Off and vice versa by pressing the soft key Change.

- ***GSIOC Unit identification number***: A Gilson system can be controlled from a computer using a GSIOC interface and GSIOC cables. Each instrument in a system must have a unique identification number to distinguish it from other equipment connected to the GSIOC communications channel. The GSIOC identification number in the 307 can be set between 0 and 63.
  The default value is 1.

- ***Output XX is open/Closed:*** There are four relay outputs in the 307 pump numbered 1, 2, 3 and 4. These outputs are used to control other instruments. They can be programmed to open and close during a method run. They can also be opened and closed manually.
  The default state is open.

- ***Zero pressure reading***: The Zero soft key is used to set the pressure reading to zero when there is zero pressure in the system. This ensures accurate pressure readings when the pump is running. Before pressing Zero, make sure that the pump has stopped and the pressure has dropped to zero, otherwise further pressure indications will be incorrect. If the operation is successful, the message 'Pressure reading is zero' is displayed. If the operation is not successful due to pressure in the system, the message 'Not done, check pressure' is displayed.

4.6.1.6 Venting the pump

The system needs to be vented before the liquids pump is operated. This involves filling the inlet tank with the liquid that is going to be used and following these steps:

- Remove the threaded plug back pressure (Figure 4-25) and press the "**Prime**" key. The pump will start pumping liquid at its maximum capacity (5 ml/min) until the liquid drops in continuous mode that means all the bubbles has been removed.
- Press "**Stop**" key to finish venting the pump and connect the threaded plug back pressure. Putting the 3-port valve in the position "**a**"(Figure 4-25) then press the "**Prime**" key. The liquid will drops in continuous mode and the pressure value at pump´s screen will be around 30 bar.
- Press the **"Stop**" function key to finish venting the pump and set the valve to its normal operating position (Figure 4-25, position **"b**").

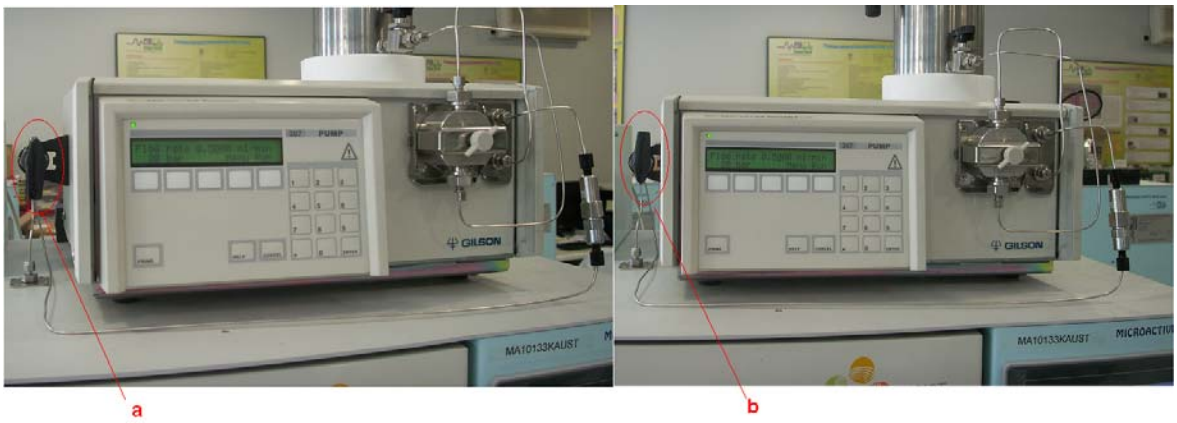

Figure 4-25

4.6.1.7 Pump operation

After entering the data about the pumping system, the pump is ready to run. The 307 pump can operate in 3 different modes. These modes are:

- **Flow**: The 307 pump provides a constant flow rate. The pump starts when the "**Run**" key is pressed and stops when the "**Stop**" key is pressed.

- **Dispense**: The 307 dispenses a specified volume. The pump starts when the "**Start"** key is pressed and stops when the specified volume has been dispensed.

- **Program**: The 307 controls a complete system. In this mode, the 307 pump can create gradients of flow rate, open and close outputs to control other instruments and wait for signals from other instruments.

By default, the pump is programmed to operate in **Flow** mode, meaning that it will always provide a constant flow, determined beforehand by the user. This means that operating the pump is perfectly straightforward:

1- Enter the desired flow in ml/min using the numerical keypad and press "**Enter**". Any flowrate may be set that ranges between 0.01% and 100% of the size of the pump head (5SC head = 5 ml/min). If the flow introduced exceeds this value, the message "**Invalid settings**" is displayed on the screen after pressing "**Run**". In such a case, the value has to be modified. During pump operation, the flow may be modified as often as required without having to stop it.
2- Press "**Run**" to start up the pump.
3- Press "**Stop**" to stop the pump.

This is the normal operating mode. For further information regarding all the other operating modes, as well as the different set-up options for the pump and troubleshooting, consult the Gilson 307 pump's handbook.

Attention!!

It should be noted that the system is usually controlled by the Process@ acquisition software. Therefore, the pump operates on a remote basis by means of digital communications. Control of the pump ceases to be manual, as described above, and all modifications in its operating mode are to be made through the control PC. If it is required to use the pump's keyboard and functions, it will be necessary to reboot the pump.

When the pump is to operate at atmospheric pressure (outlet pressure = atm.), it is necessary to install at the liquid outlet a Back Pressure Regulator, that generates an outlet pressure of 34- 35 bar.

4.6.2 PRESSURE CONTROL

4.6.2.1 Introduction to pressure control systems in microactivity reactors

The use of a reactor, such as the Microactivity-Reference, for catalytic microactivity studies involves the use of extremely low flow streams and usually high pressures. This implies extremely low values for the flow or stream coefficient (Cv) that characterises the regulating valve, of around 10^{-7} to 10^{-4} (with this coefficient being defined as the flow of water in US gallons per minute that passes through a valve in a fully open position and with a loss of load of 1 psi).

To ensure high accuracy in the pressure control of the system in the Microactivity-Reference unit, as well as a non-pulsatile gas flow inside the reactor, there exists several different alternatives that are used commercially in systems such as the following:

- Tescom type backpressure: Control is only proportional, which means it is affected by an offset error. These systems are not suitable for microflow systems and they present high dead volumes. They generate a pulsatile gas-flow through the reactor.

- Electronic back-pressure, with MFC type valve: Despite providing an extraordinarily stable gas-flow in the system's pressure control, its main drawback appears when the system contains products in the vapour phase in the shape of microdroplets that may accumulate on the control valve's orifice. These systems can not be heated, given their electronic nature.

- Control loop with control valve: The problem of control in previous systems was resolved by configuring a control loop for pressure, whereby the signal from a pressure transmitter is received by a PID controller that produces a control signal that is relayed to a control valve that acts upon the system's output current, modulating the circulation flow and thus regulating the pressure.
  The problem posed by this control system is the availability of commercial microvalves that are suitable for microflow systems, basically consisting of a cylindrical orifice through which a round rod is inserted whose purpose is to vary the fluid's length of passage through the microvalve. These systems feature very low rangeability, of around 10 (difference of flow that passes through the valve between the minimum and maximum aperture for a specific pressure), whereby they are not suitable for a system such as the Microactivity-Reference, in which widely differing operating conditions are to be studied and whose regulating valve should have rangeabilities of around 160.

4.6.2.2 The micrometric regulating valve

The Microactivity-Reference includes a micrometric regulating valve for pressure control in the reactor (as well as for level control in the liquid–gas separator in those systems that include this option) of very high rangeability, consisting of a needle whose displacement creates an increasingly tighter fit within an orifice, generating a variable section passage that depends on the distance the needle has been moved (Figure 4-26).

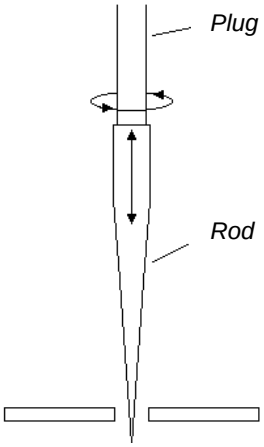

Figure 4-26

This kind of valve furthermore improves rangeability, control precision, as displacement is not performed linearly, but rather by means of the turning action of the rod caused by a micrometric screw. If the shaft of the screw allows for 10 turns from the fully open position through to the fully closed position and each turn is a full 360º, fitted with an actuation system which has been designed for this unit and which distinguishes the position with an accuracy of 1 degree of circumference, there is a total of 3600 possible states for the relative orifice/needle position, which means a precision for the system's pressure control of ± 0.1 bar without permitting sudden variations in the gas-flow at the reactor outlet of more than 5% of the total flow passing through the reactor bed.

In a study carried out with 8 commercial micrometric regulating valves, the one providing the best results in the Microactivity-Reference reactor operating with flows below 50 ml/min and pressures higher than 50 bar is one made by Hoke, model 1315G2Y, which has the following specifications:

- Maximum operating pressure: 345 bar at 21ºC.
- Range of operating temperatures: from –54ºC to 232ºC (it may be found fitted inside the hot box, so avoiding the formation of condensates in the orifice).
- Dyna-Pak gasket, which ensures the tight sealing of the rod without excessive compression of the same.
- Construction material: 316 Stainless steel.
- Dead volume: ≤ 0.2 ml.
- Connections 1/8".
- Original orifice: Replaceable, in 316 stainless steel. The need to operate in the proximity of the close contact between the orifice and the needle inevitably leads to wear on the needle caused by rubbing. Consequently, the disc containing the orifice on these valves (5 mm diameter, 1.8 mm thickness and orifice 1.19 mm) has been replaced by a replica made of PEEK (polyetheretherketone), a chemically inert material that has an excellent mechanical performance, withstanding high operating temperatures and featuring self-lubricating properties with great hardness and resistance to distortion properties. The disc may be replaced as often as necessary if it has been distorted by continuous use of the valve.
- The manufacturer's original C_V curve may be seen in Figure 4-27. Modification of the orifice on the valve and its replacement with another made of PEEK alters its C_V curve near to the closed position. Experimentally, an excellent regulating performance is achieved in C_V scenarios of 10^{-5}, that is, the modified valve accurately regulates flows of even 40 or 20 ml/min with pressures of 60 to 90 bar.

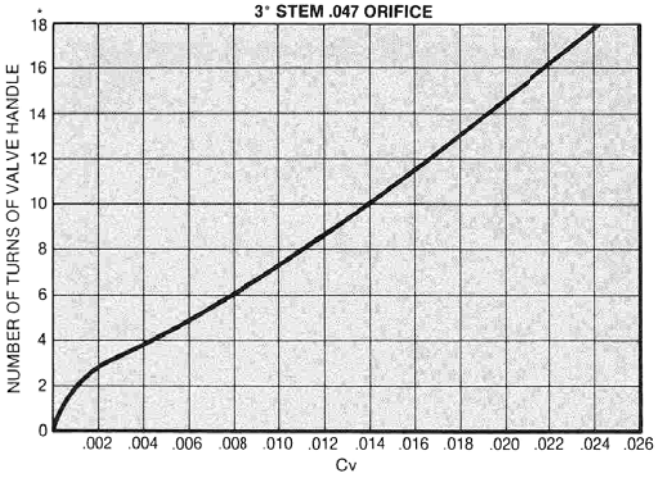

Figure 4-27

The system that has been designed for operating the valve consists of a high-resolution microstep motor. These motors consist of electromagnets that are connected and disconnected alternately so that a rotor (permanent magnet) moves in small steps in the required direction. By multiplying the number of coils on the motor or creating complex systems for the switching of the coils regulated by a microprocessor, use can be made with stepping motors of 200 steps per turn in set-ups with 51,200 steps in one rotation.

The motor's shaft is coupled to the micrometric valve and to a potentiometer, allowing for the position of the valve with 1degree resolution to be read at any given moment. The position's control system operates on a digital basis by successive approximation, comparing the present position (relayed by the potentiometer) to that specified by the demand, then calculating the number of positions that remain to be advanced and all within an infinite loop that constantly corrects the motor's position with the system's extremely rapid response time. To improve the potentiometer's reading of the position, a current generator and an instrumentation amplifier has been used, eliminating errors and noise stemming from the cabling.

The pressure control valve is located downstream of the reactor, once the reaction gases have passed through the separator / condenser.

The following are the characteristics of the pressure control system:

- Range of operating pressures: atmospheric – 100 bar.
- Control accuracy: ± 0.1 bar.
- Variations in gas-flow at the reactor outlet ≤ 5%.
- Maximum heating temperature of the valve: 200ºC (the valve is inside the hot box: see Figure 2-4).

Pressure control is carried out by means of the TOHO TTM-005 controller that is to be found on the front of the reactor (see Figure 2-3), and its operation is described in section 4.2 of this manual.

4.6.2.3 Configuration of the Servo Digital V4.0 unit (microstep positioner)

The Servo Digital V4.0 microstep positioner that is a part of the pressure and level control systems on the Microactivity-Reference units is factory set with the optimum parameters for the equipment correct operation, which means that the end user should not need to configure this unit.

In case that the customer needs to modify these parameters, here we include a detailed description of the printed circuit in the microstep servo digital unit. Access to it involves unscrewing the metal plate on the right-hand side of the reactor, as shown in Figure 4-28:

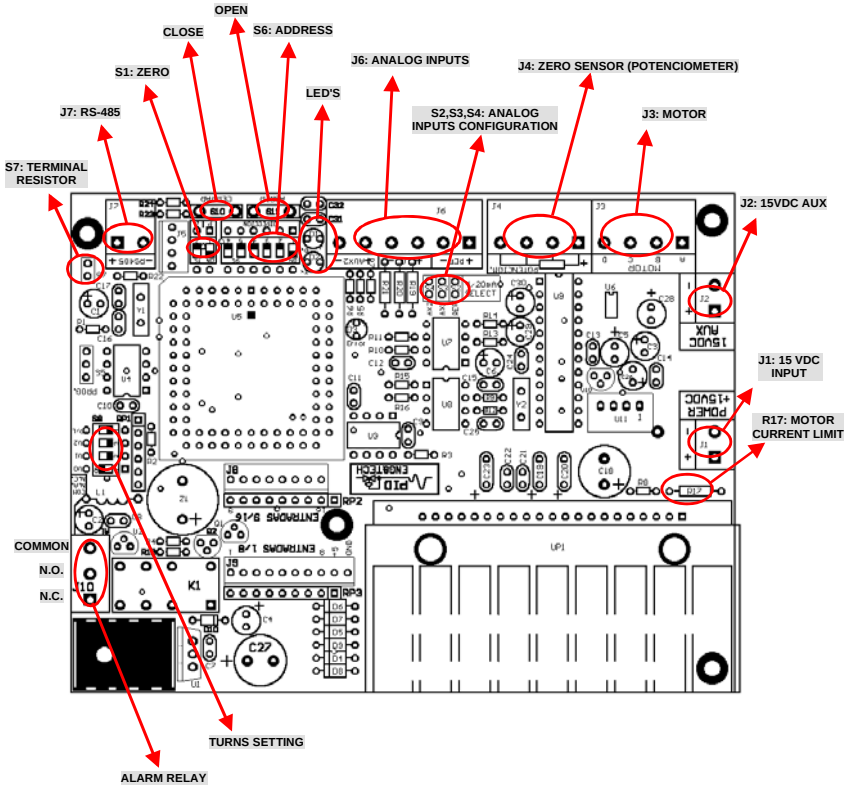

Servo Digital V4.0 unit for the positioning of the micrometric valve for pressure regulation.

In those units that include the level control system for liquids in the condenser, their corresponding Servo Digital unit is to be found to the right of this system.

Figure 4-28

- **Zero calibration (S1):**

The valve's "zero" setting, or the point at which it is fully closed, is factory set, but frequent and constant use of the equipment may alter that point as a result of minor distortion of the PEEK disc that contains the valve orifice. This effect is verified as follows:

- Set the pressure and level controllers to manual mode and fully close the valve (0%). Bring the system up to operating pressure. Submerge the system's gas outlet into a water-filled container and check that there is no bubbling. If gas is observed to be escaping, the values of the valve's zero point will have to be lowered (more closed).

To adjust the valve's zero-setting, set switch "**Z**" on the dip-switch to "**On"**. (S1: zero, see Figure 4-29). The motor is now free for manual positioning (by means of the corresponding TOHO controller in manual mode, acting on the % of control output) or by pressing the microswitches "**Open**" or "**Close**" the valve's new zero-setting (point at which the system's gas outlet ceases to bubble). If the buttons "**Open**" or "**Close**" are pressed, the motor moves the shaft in 5º jumps. Once this has been performed, return the "**Z**" switch to the "**Off"** position. The new zero-setting will be saved in the memory.

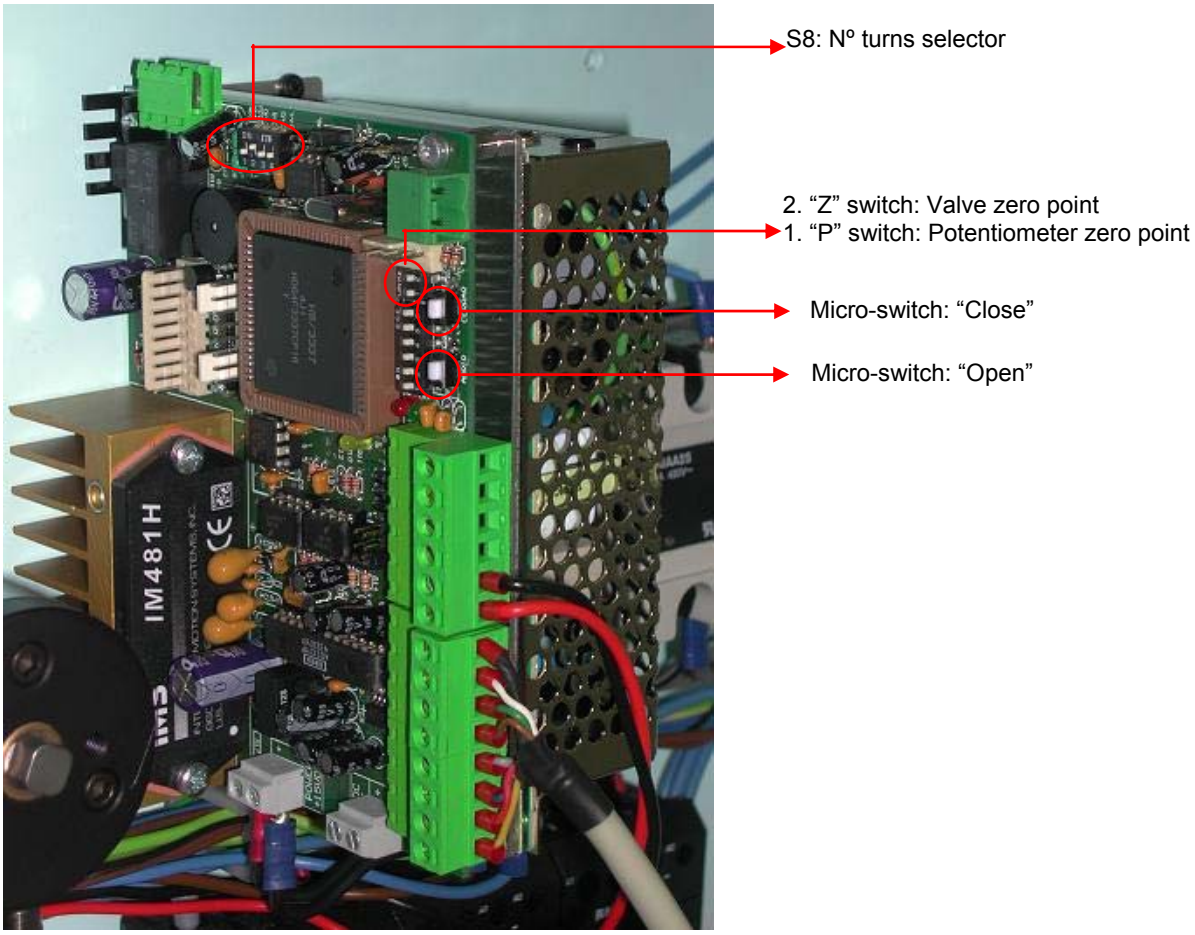

Figure 4-29

To return to the initial default zero-setting (2nd turn of the potentiometer) turn switch "**P**" on the dip-switch S1 to "**On**" and then to "**Off"**. The new zero will be set on the 2nd turn of the potentiometer.

- Turn off the unit
- Turn on the unit again
- Once the previous step has been completed, open the valve 5% and check that the there are bubbles at the gas outlet. If there are not, the values for the valve's zero setting will have to be raised (more open).
- To set the zero point for the liquid valve, the user has to follow the same procedure as the described before.

- **Selecting the number of turns (S8):**

This parameter represents the number of turns that the valve will perform from 0% to 100 % of the control output (from “fully closed” to “fully opened”).

By default, the pressure and level control valves on the Microactivity-Reference are set with the number of turns that ensures optimum performance under the unit’s normal operating conditions.

However, if the user changes the operating conditions (modifying the total gas flow), it would be necessary to change the maximum number of turns:

- If the gas flow increases, and the valve has to open up to 70-75 % for controlling the desired pressure, it would be advisable to increase the number of turns.

- If the gas flow decreases and the valve opens just 5-15 % for controlling the desired pressure, it would be advisable to decrease the number of turns.

It is recommended that the valve opens from between 20 to 65 % for controlling the desired pressure.

For changing the number of turns, proceed as following:

- Locate dip-switch S8 of the driver (see Figure 4-29)

- Check that the switch 4 on dip-switch S8 is in the “**Off”** position (see Figure 4-29)

- The number of turns is determined with switches 1, 2 on 3 on dip-switch S8:



No. OF TURNS	SWITCH POSITION (S8)		
	1	2	3
1	off	off	off
2	on	off	off
3	off	on	off
4	on	on	off
5	off	off	on
6	on	off	on
7	off	on	on
8	on	on	on

- Turn off the unit

- With the help of a screwdriver, change the position of the switches 1, 2 and 3, according to the table above.

- Turn the unit on again

- The valve is now configured with the new number of turns.

4.6.3 LEVEL CONTROL IN THE LIQUID – GAS SEPARATOR

4.6.3.1 Introduction to level control in microactivity reactors

In those systems in which the aim is to monitor the reaction in real time, continuous collection has to be made of the condenser liquid in the liquid – gas separator for its subsequent analysis.

In the reactor operating at atmospheric pressure, the removal of condensed liquids in the separator has to be performed manually by an operator, but this procedure is not possible in equipment that is operating at pressure higher than atmospheric, because the loss of the hydraulic seal on the liquid products at the bottom of the separator would lead to a major leakage of gasses into the atmosphere, and possibly cause an accident. In this case, the liquid-gas separator has to have a control loop at a specific liquid level. A control valve is operated to maintain the liquid level constant, continuously removing each new drop that is formed in the separator.

Other commercial systems applied in pilot plant situations base this level reading on systems that record the differential pressure between the ends of the separator. Thus, the pressure at the base of the separator is that corresponding to the pressure in the installation plus the pressure corresponding to the height of the liquid column present in the separator. Yet this technique presents serious problems when it is used in the measurement of a microvolume: the errors inherent to this technique when measuring the level of a tank that collects the condensates in a system that increases at the rate of, for example, 0.05 ml/min, renders this technique unviable for use in a reactor for studying catalytic microactivity.

4.6.3.2 The capacitive level sensor

With a view to resolving the problems posed in systems of this kind, a liquid-gas separator has been designed with a capacitive type level sensor with a very low dead volume. With this system, when liquid is present between the isolated probe and the chassis on a metal tank, this liquid behaves as a dielectric, altering the electrical capacity of a condenser system. An RC oscillating circuit, such as the one shown in Figure 4-30, will then provide a frequency signal proportional to the system's capacity and which is, therefore, proportional to the amount of liquid in the tank. Without considering geometric issues in the design of the tank, this circuit's output signal will be directly proportional to the height of the liquid in the tank.

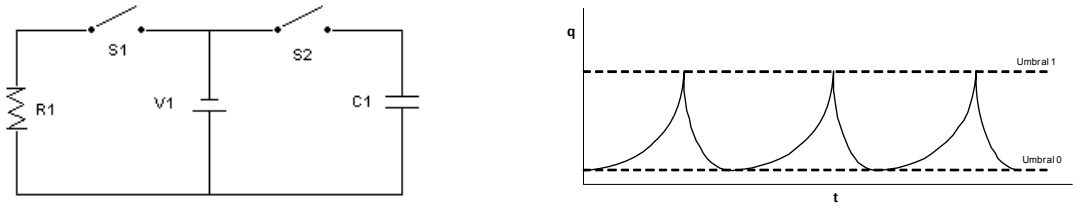

RC Oscillating Circuit *Oscillating Circuit behaviour*

Figure 4-30

This system's output signal is also proportional to the dielectric constant of the substance that acts as the dielectric. Accordingly, the greater the difference of dielectric constant between the process liquid and the air (or gas that occupies the space not taken up by the liquid) the greater the output signal the system will generate.

The capacitive level sensor used is inserted through the upper part of the liquid – gas separator described in section 4.3 of this manual, and consists of a 3 mm diameter probe that is

electrically isolated from the rest of the system by means of elastomer-type seals, chemically compatible and withstanding pressures of up to 400 bar.

The design of the liquid – gas separator with level sensor incorporated is featured in Figure 4-31, where the parallelepiped piece may be observed, as well as the electrical insulator and the probe that, electrically insulated in this tank, becomes the condenser's second plate.

The photograph of the assembly (Figure 4-32) provides a detailed view of the piece that constitutes the system's electrical insulator and other parts, in Teflon, which besides guiding the assembly, serve to eliminate the system's dead volumes.

The separator – level sensor assembly is connected to a micrometric regulating valve that is connected to a microstep motor, like the one used in the system's pressure control (see section 4.6.2 of this manual), which means that recording the level inside the tank and operating said valve allow for the removal and collection of liquids on an automatic and continuous basis in real time, with a control accuracy of ± 0.01 ml.

As in the case of the system's pressure control system, the Servo Digital V4.0 microstep positioner unit that includes the level control system in the separator on Microactivity-Reference units is factory set with the optimum parameters for the correct operation of the equipment, which means that the end user should not, in principle, configure this unit. However, frequent and continued use of the sensor may in time make it necessary to carry out the zero calibration of the valve or select the number of turns of the same. In these cases, the user is to proceed in the same way as outlined in section 4.6.2.3 of this manual, but acting on the V4.0 servo digital unit corresponding to the level control valve, which is accessed by unscrewing the metal plate on the right-hand side of the reactor.

Level control in the separator is carried out by means of the TOHO TTM-005 controller that is located on the front of the reactor (see Figure 2-3), whose operation is described in section 4.2 of this manual.

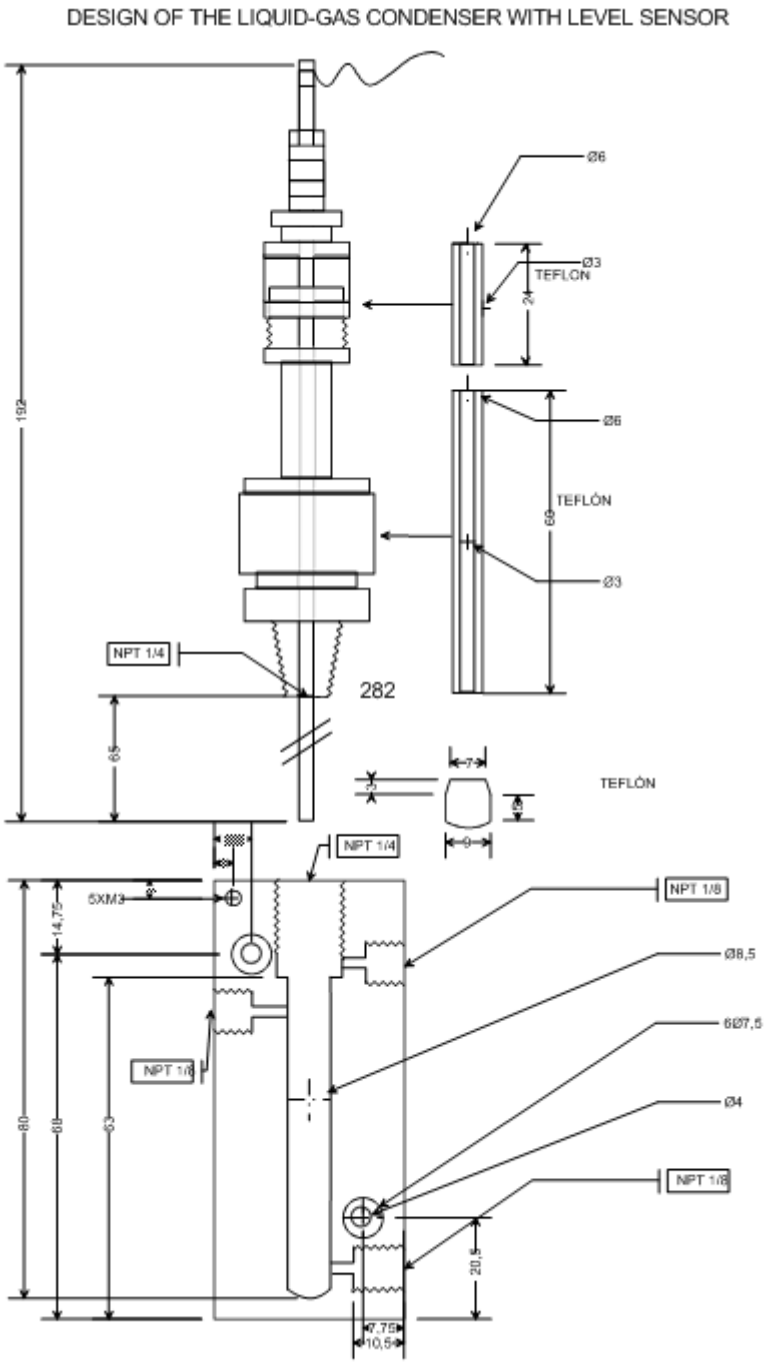
DESIGN OF THE LIQUID-GAS CONDENSER WITH LEVEL SENSOR
Ø6
Ø3
TEFLON
24
192
Ø6
TEFLÓN
69
Ø3
NPT 1/4
282
65
7
3
TEFLÓN
9
NPT 1/4
NPT 1/8
5XM3
14,75
Ø8,5
6Ø7,5
NPT 1/8
Ø4
80
60
53
NPT 1/8
20,5
7,75
10,5

Figure 4-31

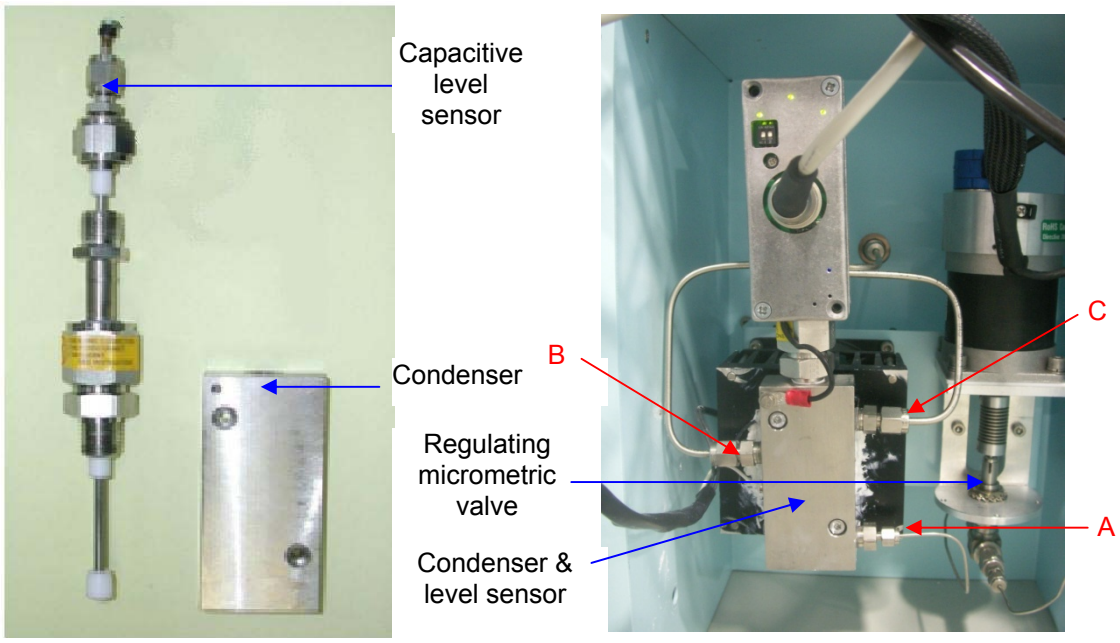

Figure 4-32

4.7. SPECIAL OPTIONS FOR THE MICROACTIVITY-REFERENCE UNIT

Different options can be added to the Microactivity Basic unit depending on the customer process requirements. Any of the options described below can be added to the most common configurations and most of them can be configured simultaneously.

4.7.1. OPTION A - EACH OTHER MASS FLOW CONTROLLERS (UP TO 6)

Microactivity Reference basic unit contains 3 Mass Flow Controllers, including valves and installations. Using this option you can add up to 6 Mass Flow Controllers in a wide range of pressure and flows.

Figure 4-33

Measuring principle is based on a stainless stell capillary tube with resistance thermometer elements. A part of the gas flows through this bypass sensor, and is warmed up by heater Rh.

Consequently the measured temperatures T1 and T2 drift apart. The temperature difference is directly proportional to mass flow through sensor.

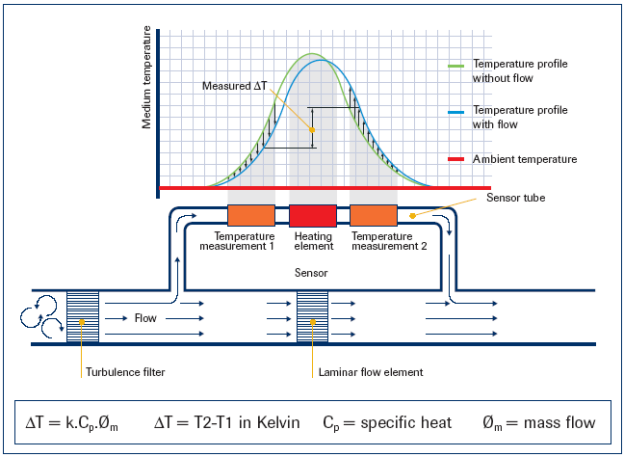

Figure 4-34

Measurement / control system	
Accuracy (incl. linearity)	: standard: ±0,5% Rd plus ±0,1% FS
(based on actual calibration)	(±1% FS for ranges 3...5 ml_n/min;
	±2% FS for ranges < 3 ml_n/min)
Turndown	: 1 : 50 (in digital mode up to 1:187,5)
Repeatability	: < 0,2% Rd
Settling time (controller)	: standard: 1...2 seconds
	option: down to 500 msec
Control stability	: < ±0,1% FS (typical for 1 l_n/min N_2)
Operating temperature	: -10...+70°C
Temperature sensitivity	: zero: < 0,05% FS/°C; span: < 0,05% FS/°C
Pressure sensitivity	: 0,1%/bar typical N_2; 0,01%/bar typical H_2
Leak integrity, outboard	: tested < 2 x 10^{-9} mbar l/s He
Attitude sensitivity	: max. error at 90° off horizontal 0,2%
	at 1 bar, typical N_2
Warm-up time	: 30 min. for optimum accuracy
	2 min. for accuracy ± 2% FS

Mechanical parts	
Material (wetted parts)	: stainless steel 316L or comparable
Surface quality (wetted parts)	: Ra = 0,8 µm typical
Process connections	: compression type or face seal couplings
Seals	: standard: Viton;
	options: EPDM, Kalrez (FFKM)
Ingress protection (housing)	: IP40

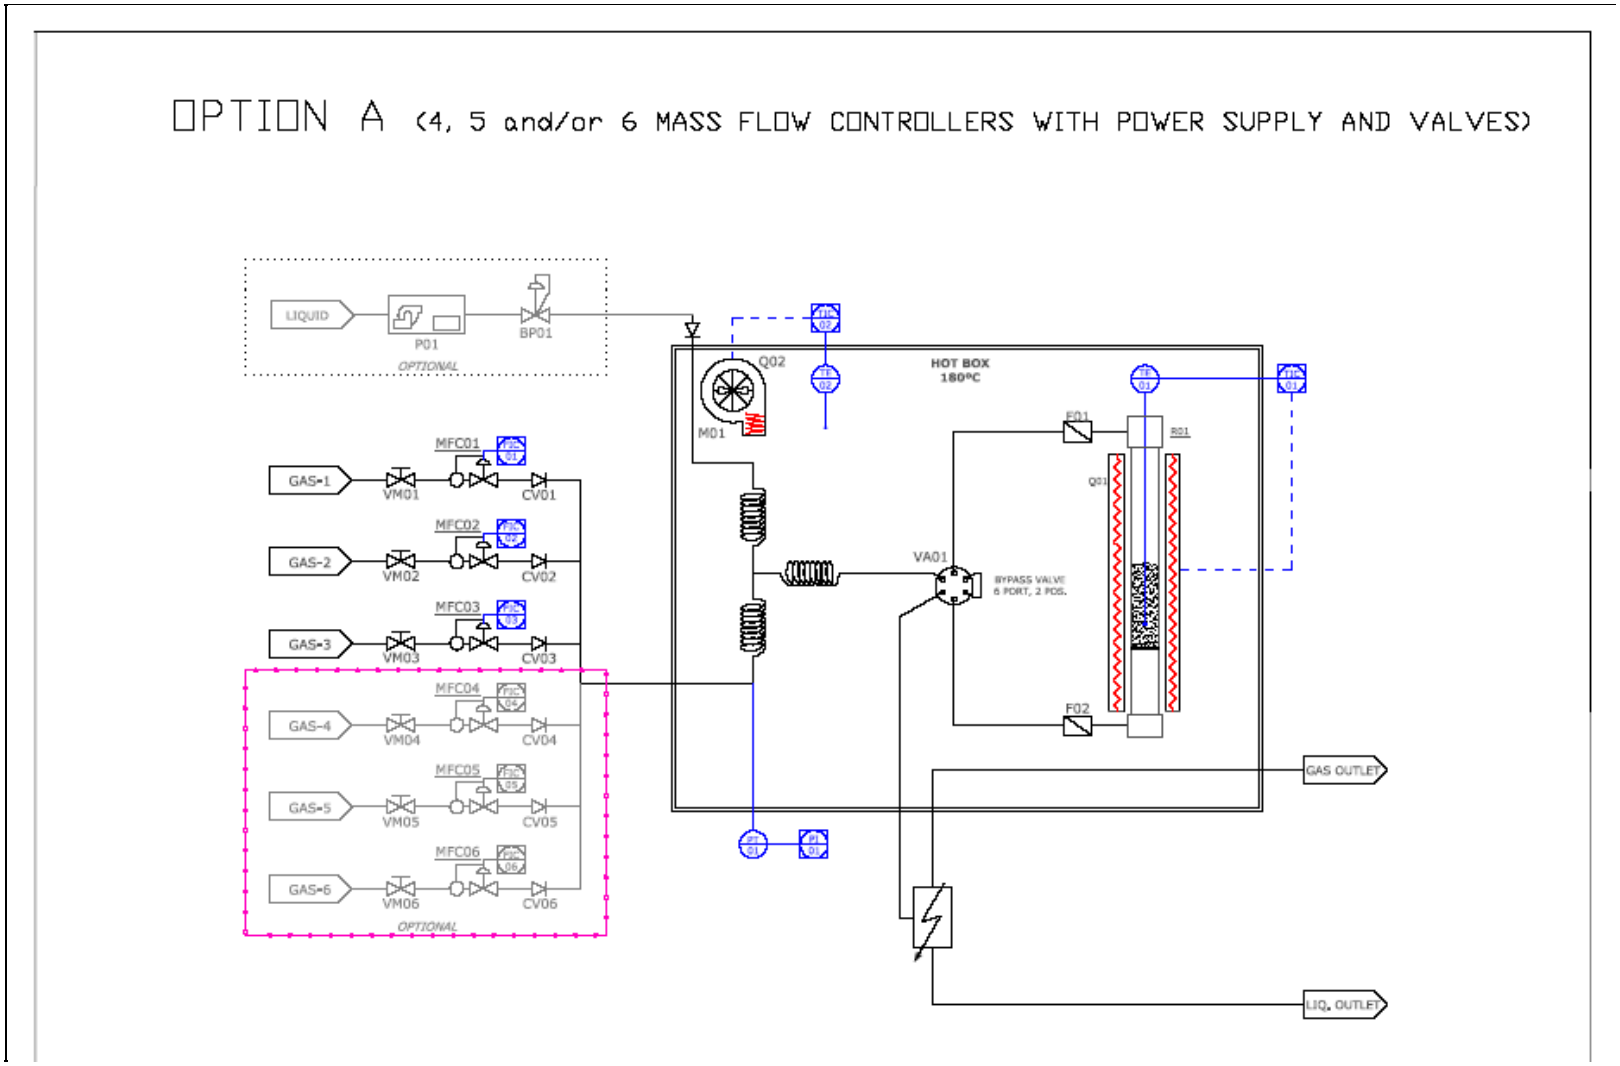
OPTION A (4, 5 and/or 6 MASS FLOW CONTROLLERS WITH POWER SUPPLY AND VALVES)
LIQUID
P01
BP01
OPTIONAL
MFC01
GAS-1
VM01
CV01
MFC02
GAS-2
VM02
CV02
MFC03
GAS-3
VM03
CV03
MFC04
GAS-4
VM04
CV04
MFC05
GAS-5
VM05
CV05
MFC06
GAS-6
VM06
CV06
OPTIONAL
Q02
M01
HOT BOX
180°C
E01
R01
Q01
VA01
BYPASS VALVE
6 PORT, 2 POS.
F02
GAS OUTLET
LIQ. OUTLET

Internal seals for mass flow controllers are chosen depending on the used substance. Next list shows recommended seals.

Nr.	Name	Symbol	Density (g/l) 0ºC, 1atm	Conversion factor 20ºC, 1atm	Recommended seals		
					O-ring	Plunger	Capillary
1	Acetylene (Ethyne)	C2H2	1,172	0,61	E	E	E
2	Air	Air	1,293	1	V	V	V
3	Allene (Propadiene)	C3H4	1,832	0,43	V	V	V
4	Ammonia	NH3	0,7693	0,77	E	E	E
5	Argon	Ar	1,784	1,4	V	V	V
6	Arsine	AsH3	3,524	0,66	V	P	V
7	Boron trichloride	BCL3	5,227	0,44	P	P	P
8	Boron trifluoride	BF3	3,044	0,54	P	P	P
9	Bromine pentaflurine	BrF5	7,803	0,26	P	P	P
10	Butadiene (1,3-)	C4H6	2,504	0,31	V	V	V
11	Butane	C4H10	2,705	0,25	V	V	V
12	Butene (1-)	C4H8	2,581	0,29	V	V	V
13	Butene (2-) (cis)	C4H8	2,503	0,32	V	V	V
14	Butene (2-) (trans)	C4H8	2,503	0,3	V	V	V
15	Carbonylfluoride	COF2	2,983	0,54	V	P	V
16	Carbonylsulfide	COS	2,724	0,65	E	E	E
17	Carbon dioxide	CO2	1,977	0,74	V	E	V
18	Carbon disulfide	CS2	3,397	0,6	V	V	V
19	Carbon monoxide	CO	1,25	1	V	V	V
20	Chlorine	CL2	3,218	0,82	V	V	V
21	Chlorine trifluoride	ClF3	4,125	0,4	P	P	P
22	Cyanogen	C2N2	2,376	0,48	P	P	P
23	Cyanogen chloride	ClCN	2,743	0,61	P	P	P
24	Cyclopropane	C3H6	1,919	0,43	N(P)	N(P)	N(P)
25	Deuterium	D2	0,1798	1	V	V	V
26	Diborane	B2H6	1,248	0,43	P	P	P
27	Dibromo difluromethane	Br2CF2	9,361	0,2	V	P	V
28	Dichlorosilane	SiH2Cl2	4,506	0,41	V	P	V
29	Dimethylamine	C2H6NH	2,011	0,37	P	P	P
30	Dimethylpropane (2,2-)	C5H12	3,219	0,21	V	V	V
31	Dimethylether	C2H6O	2,105	0,39	P	P	P
32	Disilane	Si2H6	2,857	0,31	V	P	V
33	Ethane	C2H6	1,355	0,49	V	V	V
34	Ethylene (Ethene)	C2H4	1,261	0,6	V	E	V
35	Ethylene oxide	C2H4O	1,965	0,52	P	P	P
36	Ethylacetylene (1-Butyne)	C4H6	2,413	0,32	V	V	V
37	Ethylchloride	C2H5Cl	2,878	0,41	V	V	V
38	Fluorine	F2	1,696	0,91	P	P	P
39	Freon-11	CCl3F	6,129	0,35	V	U	V
40	Freon-113	C2Cl3F3	8,36	0,21	N(P)	N(U)	N(P)
41	Freon-1132A	C2H2F2	2,887	0,44	T	T	T
42	Freon-114	C2Cl2F4	7,626	0,23	E	E	E
43	Freon-115	C2ClF5	7,088	0,24	E	E	E

44	Freon-116	C2F6	6,157	0,25	E	E	E
45	Freon-12	C2Cl2F2	5,543	0,37	V	U	V
46	Freon-13	CClF3	4,72	0,4	V	V	V
47	Freon-13B1	CBrF3	6,768	0,38	V	V	V
48	Freon-14	CF4	3,946	0,44	E	E	E
49	Freon-21	CHCl2F	4,592	0,44	N(P)	N(T)	N(P)
50	Freon-22	CHClF2	3,936	0,47	E	E	E
51	Freon-23	CHF3	3,156	0,52	T	T	T
52	Freon-C318	C4F8	9,372	0,15	E	E	E
53	Germane	GeH4	3,45	0,56	V	V	V
54	Helium	He	0,1785	1,41	V	V	V
55	Helium (3-)	3He	0,1346	1,44	V	V	V
56	Hydrogen	H2	0,08991	1,01	V	V	V
57	Hydrogen bromide	HBr	3,646	0,98	P	P	P
58	Hydrogen chloride	HCl	1,639	0,99	V	H	V
59	Hydrogen cyanide	HCN	1,206	0,75	P	P	P
60	Hydrogen fluoride	HF	0,8926	0,96	P	P	P
61	Hydrogen iodide	HI	5,799	0,97	P	P	P
62	Hydrogen selenide	H2Se	3,663	0,78	E	E	E
63	Hydrogen sulfide	H2S	1,536	0,82	E	E	E
64	Isobutane	C4H10	2,693	0,25	V	V	V
65	Isobutylene (Isobutene)	C4H8	2,6	0,28	V	V	V
66	Krypton	Kr	3,749	1,43	V	V	V
67	Methane	CH4	0,7175	0,76	V	V	V
68	Methylacetylene	C3H4	1,831	0,43	V	V	V
69	Methylbromide	CH3Br	4,35	0,61	V	V	V
70	Methylchloride	CH3Cl	2,301	0,64	V	V	V
71	Methylfluoride	CH3F	1,594	0,7	V	P	V
72	Methylmercaplan	CH3SH	2,146	0,53	P	P	P
73	Molybdenum hexafluoride	MoF6	9,366	0,21	P	P	P
74	Mono-ethylamide	C2H3NH2	2,011	0,36	P	P	P
75	Monomethylamine	CH3NH2	1,419	0,52	P	P	P
76	Neon	Ne	0,9002	1,41	V	V	V
77	Nitric oxide	NO	1,34	0,97	V	P	V
78	Nitrogen	N2	1,25	1	V	V	V
79	Nitrogen dioxide	NO2	2,053	0,74	P	P	P
80	Nitrogen trifluoride	NF3	3,182	0,5	P	P	P
81	Nitrous oxide	NOCl	2,984	0,61	P	P	P
82	Nitrosyl chloride	N2O	1,978	0,71	V	V	V
83	Oxygen	O2	1,429	0,98	V	V	V
84	Oxygen difluoride	OF2	2,417	0,64	P	P	P
85	Ozone	O3	2,154	0,7	V	V	V
86	Pentane	C5H12	3,219	0,21	V	V	V
87	Perchlorylfluoride	ClO3F	4,653	0,41	-	-	-
88	Perfluoropropane	C2F8	8,662	0,16	N(V)	N(V)	N(V)
89	Performa-ethylene	C2F4	4,523	0,33	V	P	V
90	Phosgene	COCl2	4,413	0,47	P	P	P
91	Phosphine	PH3	1,59	0,73	V	P	V
92	Phosphorous pentafluoride	PF5	5,694	0,3	P	P	P
93	Propane	C3H8	2,012	0,34	V	V	V

94	Propylene (Propene)	C3H6	1,915	0,4	V	V	V
95	Silane	SiH4	1,443	0,62	V	P	V
96	Silicon tetrafluoride	SiF4	4,683	0,37	-	-	-
97	Sulfurylfluoride	SO2F2	4,631	0,38	-	-	-
98	Sulfur dioxide	SO2	2,922	0,68	E	E	E
99	Sulfur hexafluoride	SF6	6,626	0,27	E	E	E
100	Sulfur tetrafluoride	SF4	4,821	0,34	P	P	P
101	Trichlorosilane	SiHCl3	6,044	0,33	-	-	-
102	Trimethylamine	C3H9N	2,637	0,28	P	P	P
103	Tungslen hexafluoride	WF6	13,29	0,25	P	P	P
104	Vinylbromide	C2H3Br	4,772	0,46	V	V	V
105	Vinilchloride	C2H3Cl	2,865	0,47	V	V	V
106	Vynilfluoride	C2H3F	2,08	0,49	V	V	V
107	Xenon	Xe	5,899	1,38	V	V	V

E=EPDM, N=Neoprene, H=Hypalon, T=Teflon, P= PTFE elastomer, V=Viton.

Mass flow setup menú is configured pressing F1 key in touch screen.

Figure 4-35

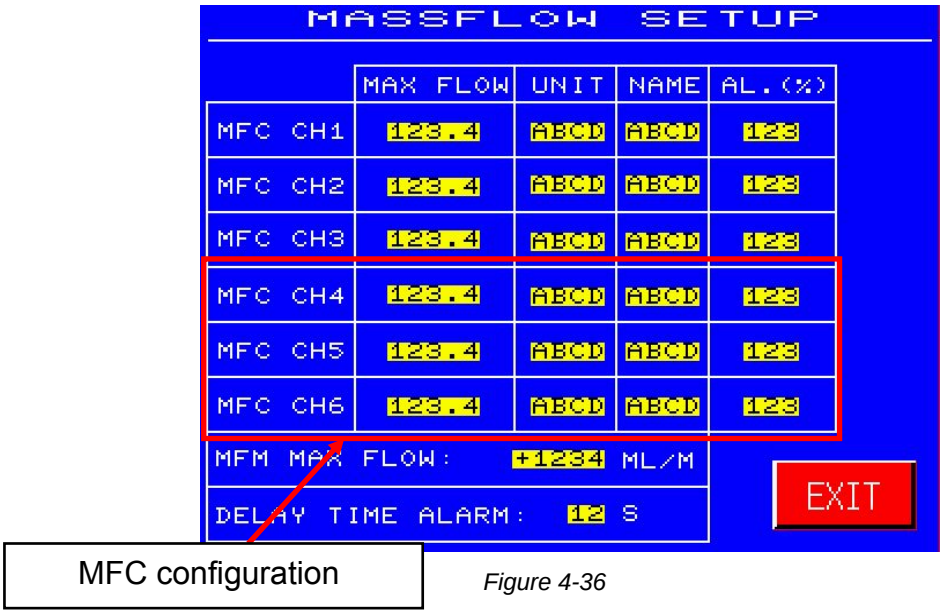

Figure 4-36

4.7.2. OPTION B - SCALE

Scale with digital communications is used for weighing the liquid stream outlet in real time. This option is very interesting to calculate mass balance. Besides, it is easy to detect problems in the reaction system when existing inconsistencies in software graph panel.

Figure 4-37

Weight capacity	610g
Min. display “d”	0.01g
Repeatibility (Std deviation)	0.01
Linearity	± 0.02g
Sensitivity drift	±20 ppm / °C (10°C-30°C / 50°F-86°F)
No. of samples	5, 10, 25, 50 or 100 pieces
Min. unit weight	0.01 g
Min. % display	0.1 %
Min. 100 % weight	1 g
Display	7 segment LCD display with backlight (Character height 16 mm)
Display update	10 times per second

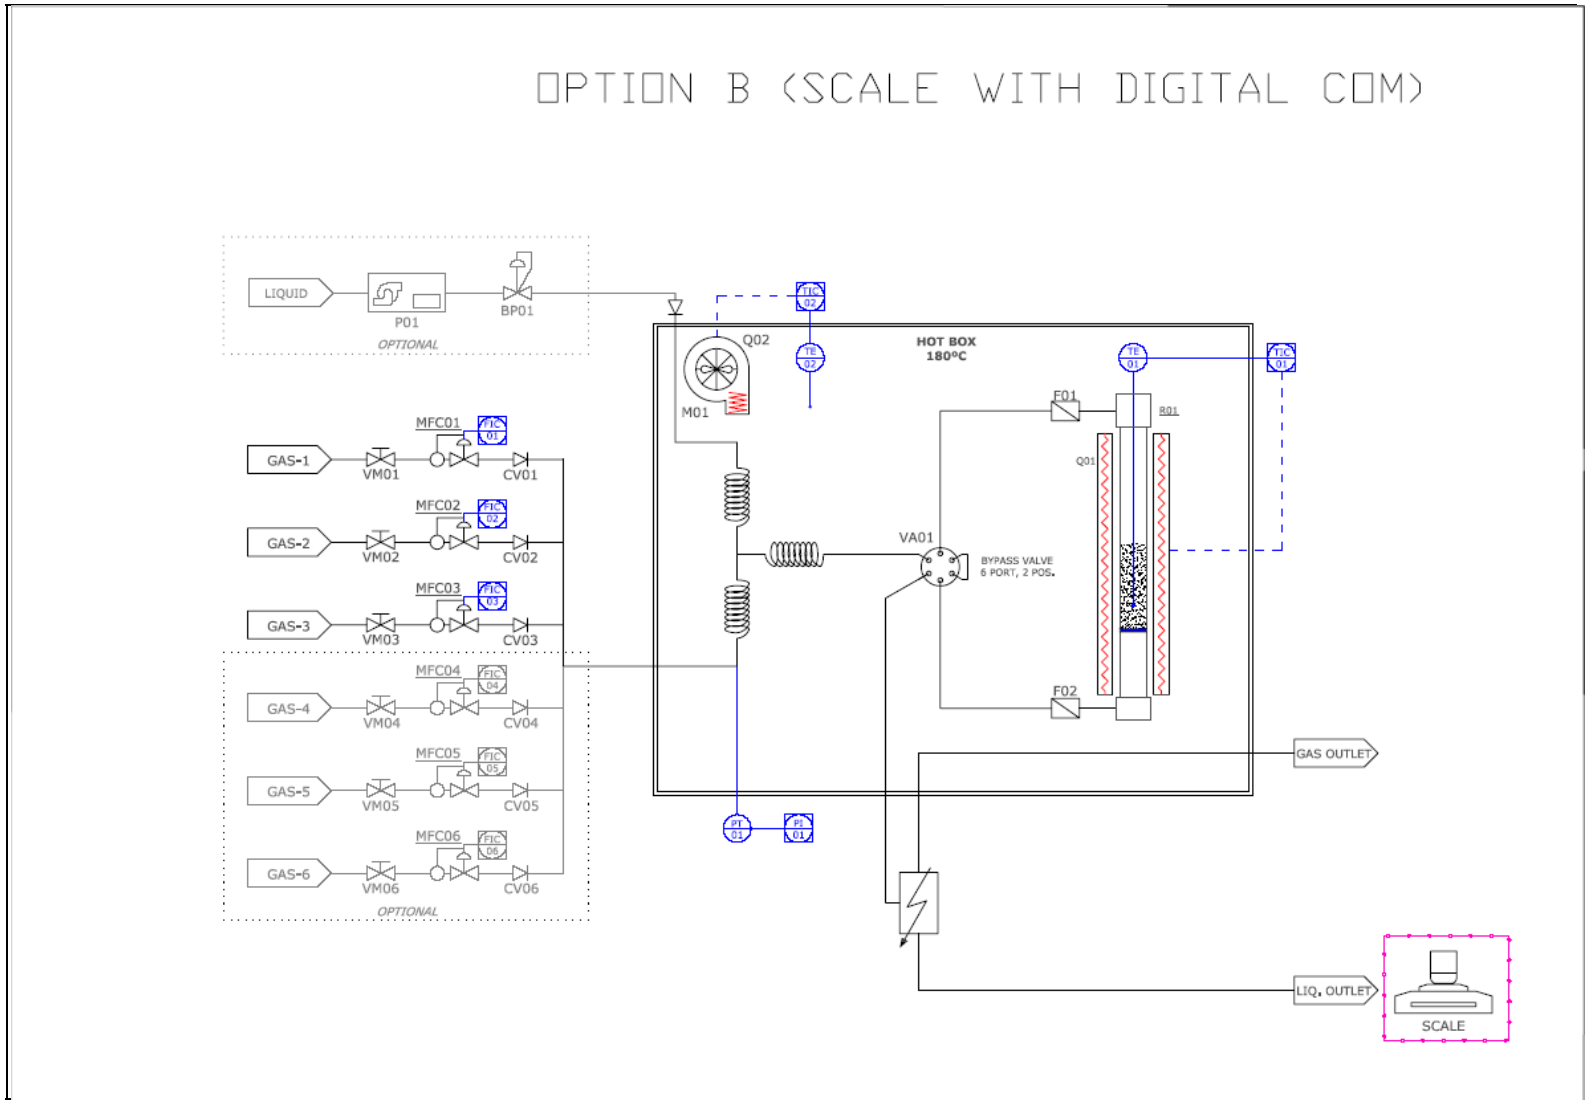
OPTION B (SCALE WITH DIGITAL COM)
LIQUID
P01
BP01
OPTIONAL
MFC01
GAS-1
VM01
CV01
MFC02
GAS-2
VM02
CV02
MFC03
GAS-3
VM03
CV03
MFC04
GAS-4
VM04
CV04
MFC05
GAS-5
VM05
CV05
MFC06
GAS-6
VM06
CV06
OPTIONAL
Q02
M01
HOT BOX
180°C
F01
R01
Q01
VA01
BYPASS VALVE
6 PORT, 2 POS.
F02
GAS OUTLET
LIQ. OUTLET
SCALE

By means of Process@ software measure of scale can be shown in Process Value Graph

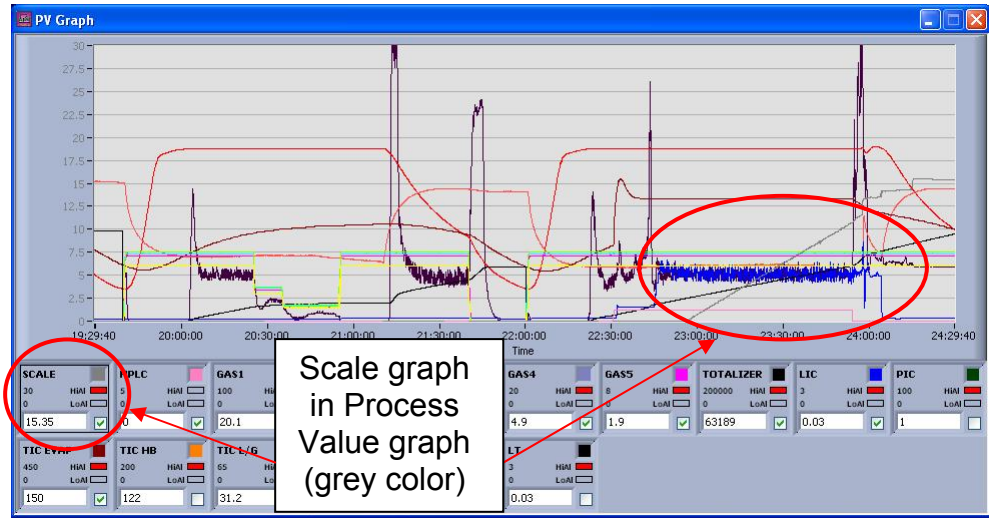

Figure 4-38

Rezero adjustment is possible in every session simply indicating “1” in the scale gap in session table window

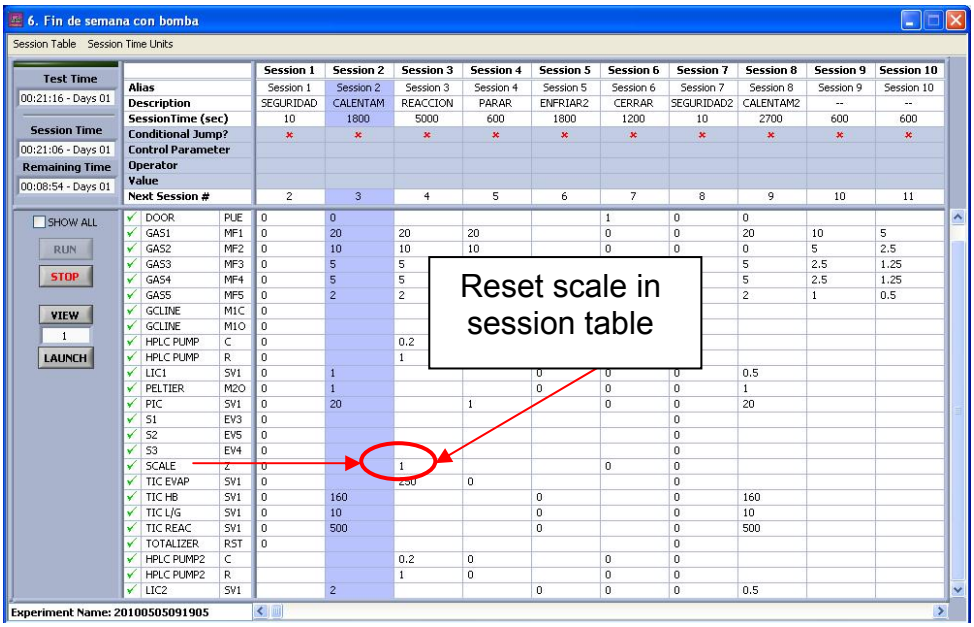

Figure 4-39

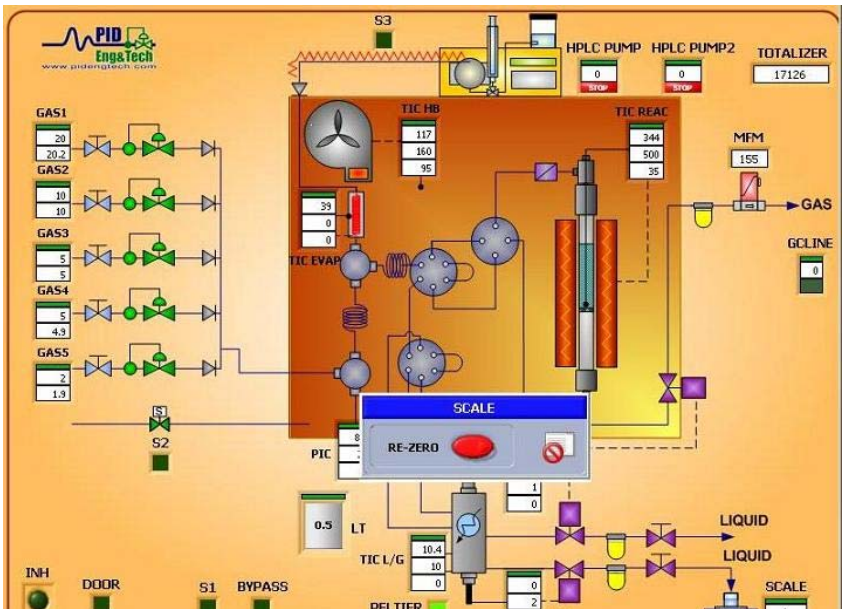

Figure 4-40

Reset scale is possible in any moment of the session by means of right button of mouse over scale icon.

4.7.3. OPTION C - MASS FLOW METER IN GASES OUTLET

Gases flow is counted at the exit of gases through the installation of a mass flow meter. A coalescing filter condenses the liquid before passing through the meter. Liquids condensed are removed via the bottom of the filter. Measuring principle is the same as described in option A.

When chossing this option it is possible to include a calculating device (TOTALIZER) in monitoring Process@ software.

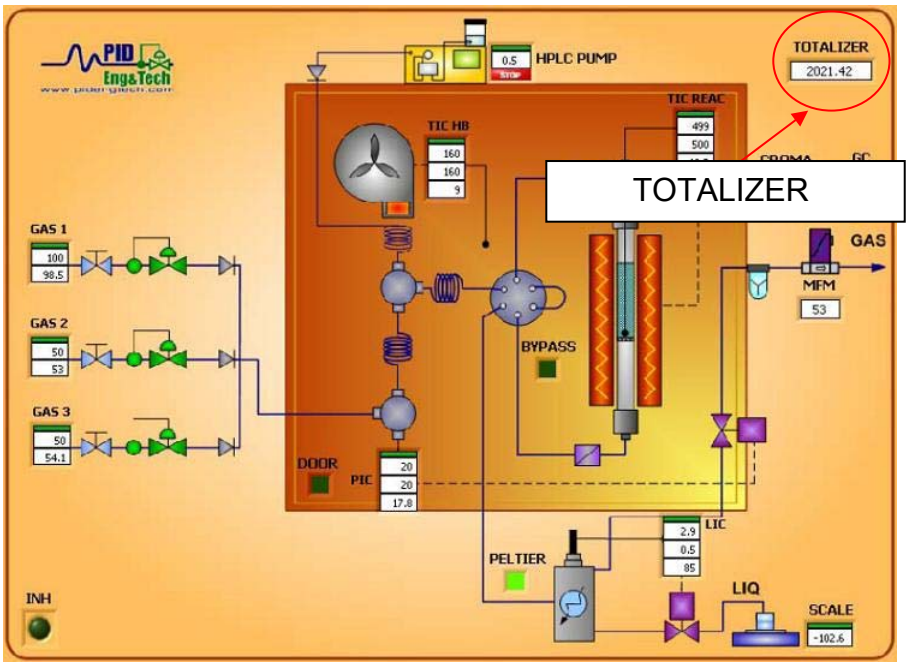

Figure 4-41

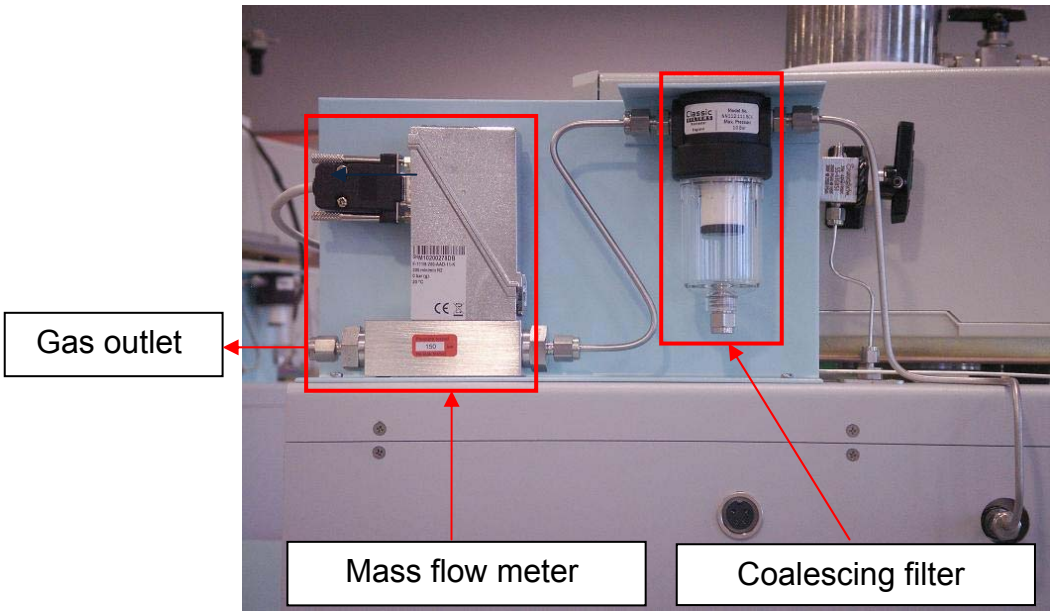

Figure 4-42

As in option B (scale), mass flow meter option makes easier calculating mass balance. Coalescing filter prevent moisture at the mass flow meter inlet.

Maximum flow of mass flow meter have to be introduced in mass flow setup menu.

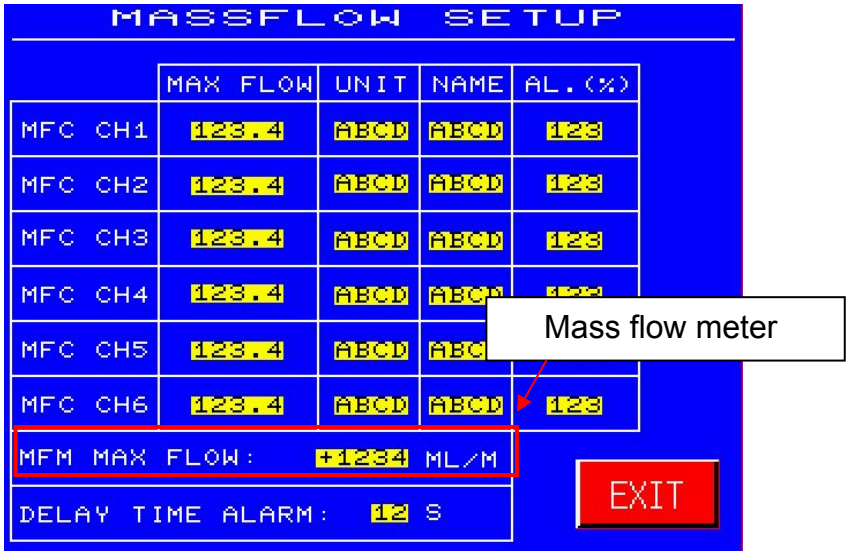

Figure 4-43

MFM value is shown in PVgraph and touch screen as shown below

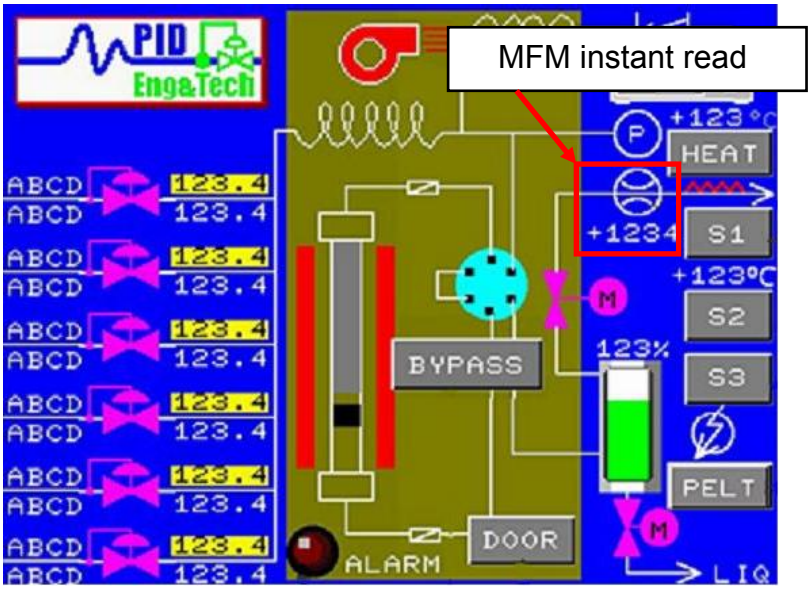

Figure 4-44

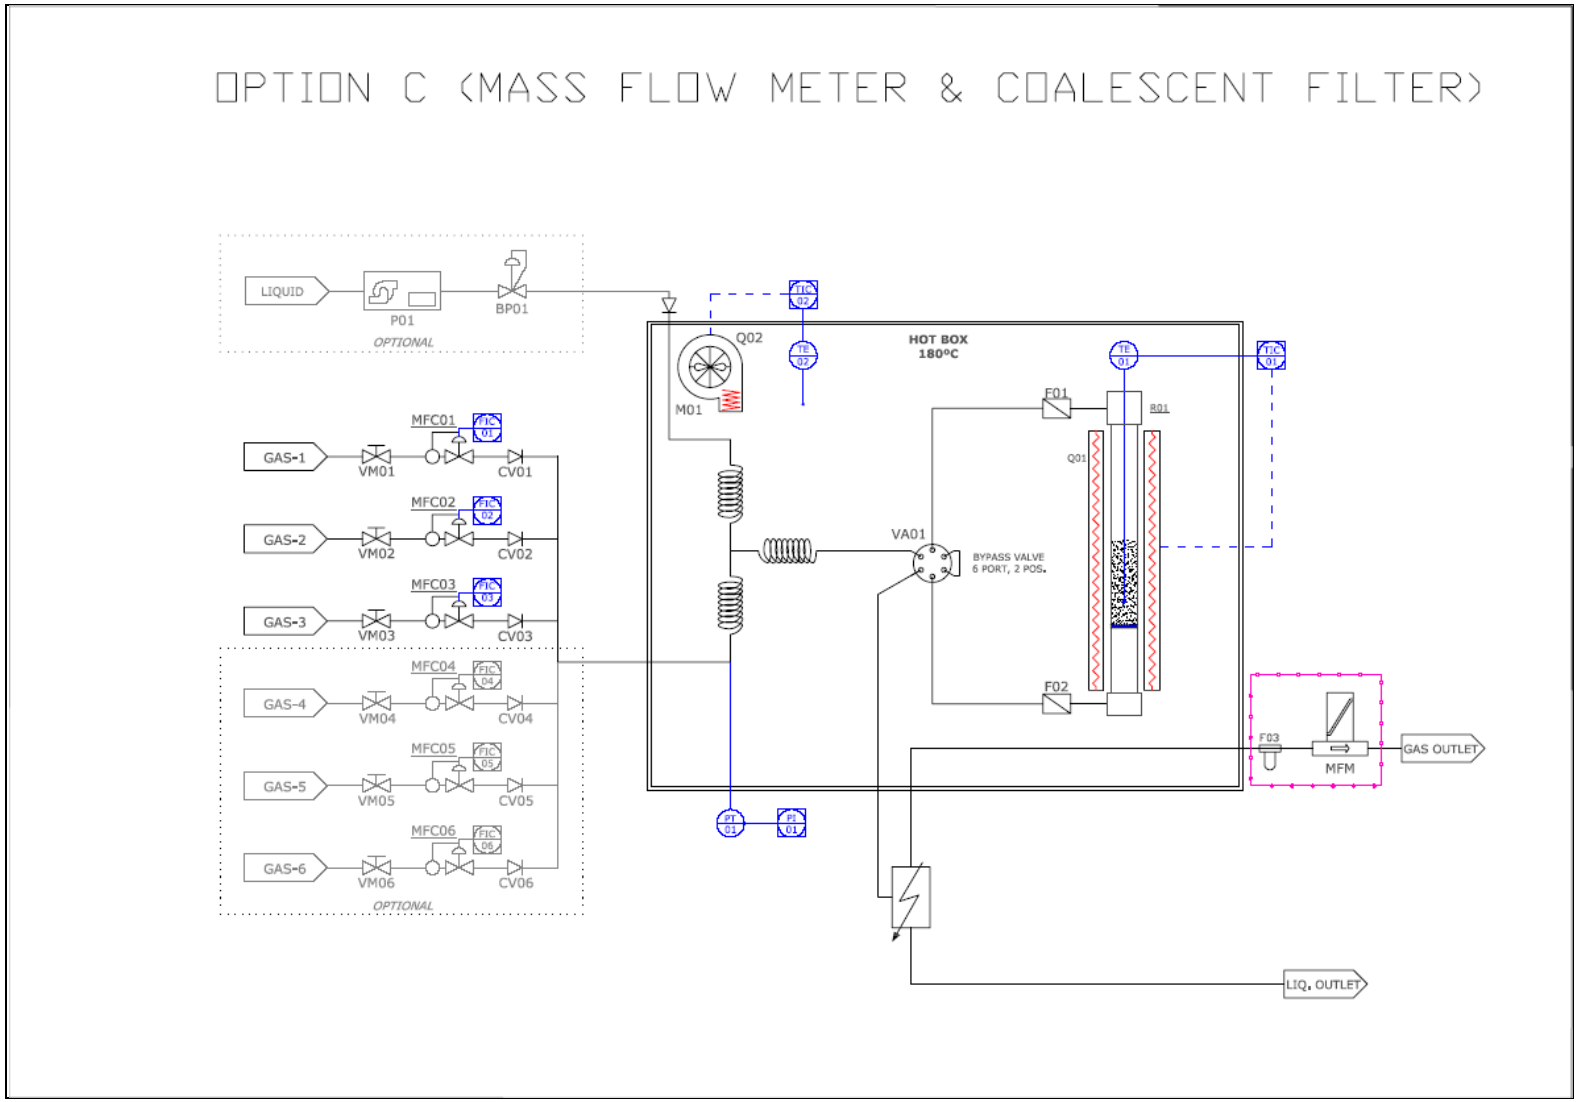
OPTION C (MASS FLOW METER & COALESCENT FILTER)
LIQUID
P01
BP01
OPTIONAL
GAS-1
GAS-2
GAS-3
GAS-4
GAS-5
GAS-6
MFC01
MFC02
MFC03
MFC04
MFC05
MFC06
VM01
VM02
VM03
VM04
VM05
VM06
CV01
CV02
CV03
CV04
CV05
CV06
OPTIONAL
HOT BOX
180°C
Q02
M01
F01
R01
Q01
VA01
BYPASS VALVE
6 PORT, 2 POS.
F02
F03
MFM
GAS OUTLET
LIQ. OUTLET

4.7.4. OPTION D - ADDITIONAL 6 PORT VALVE

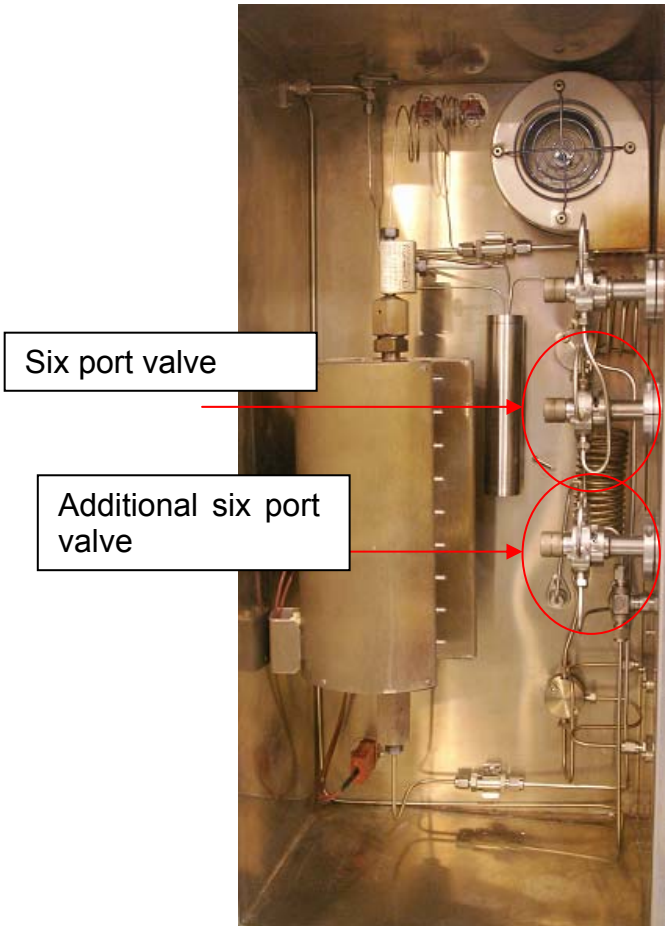

Figure 4-45

One 6 port valve is installed in the Basic Unit.
Additional 6 port valve is installed with one of these purposes, chosen by the user:

- By-passing the L/G separator:

  This option can be useful when there is no need to pass the reactor products through the L/G separator. For example, liquids are not pumped to the reactor, only gases.

- Selecting the reactor flow (UP/DOWN)

Figure 4-46

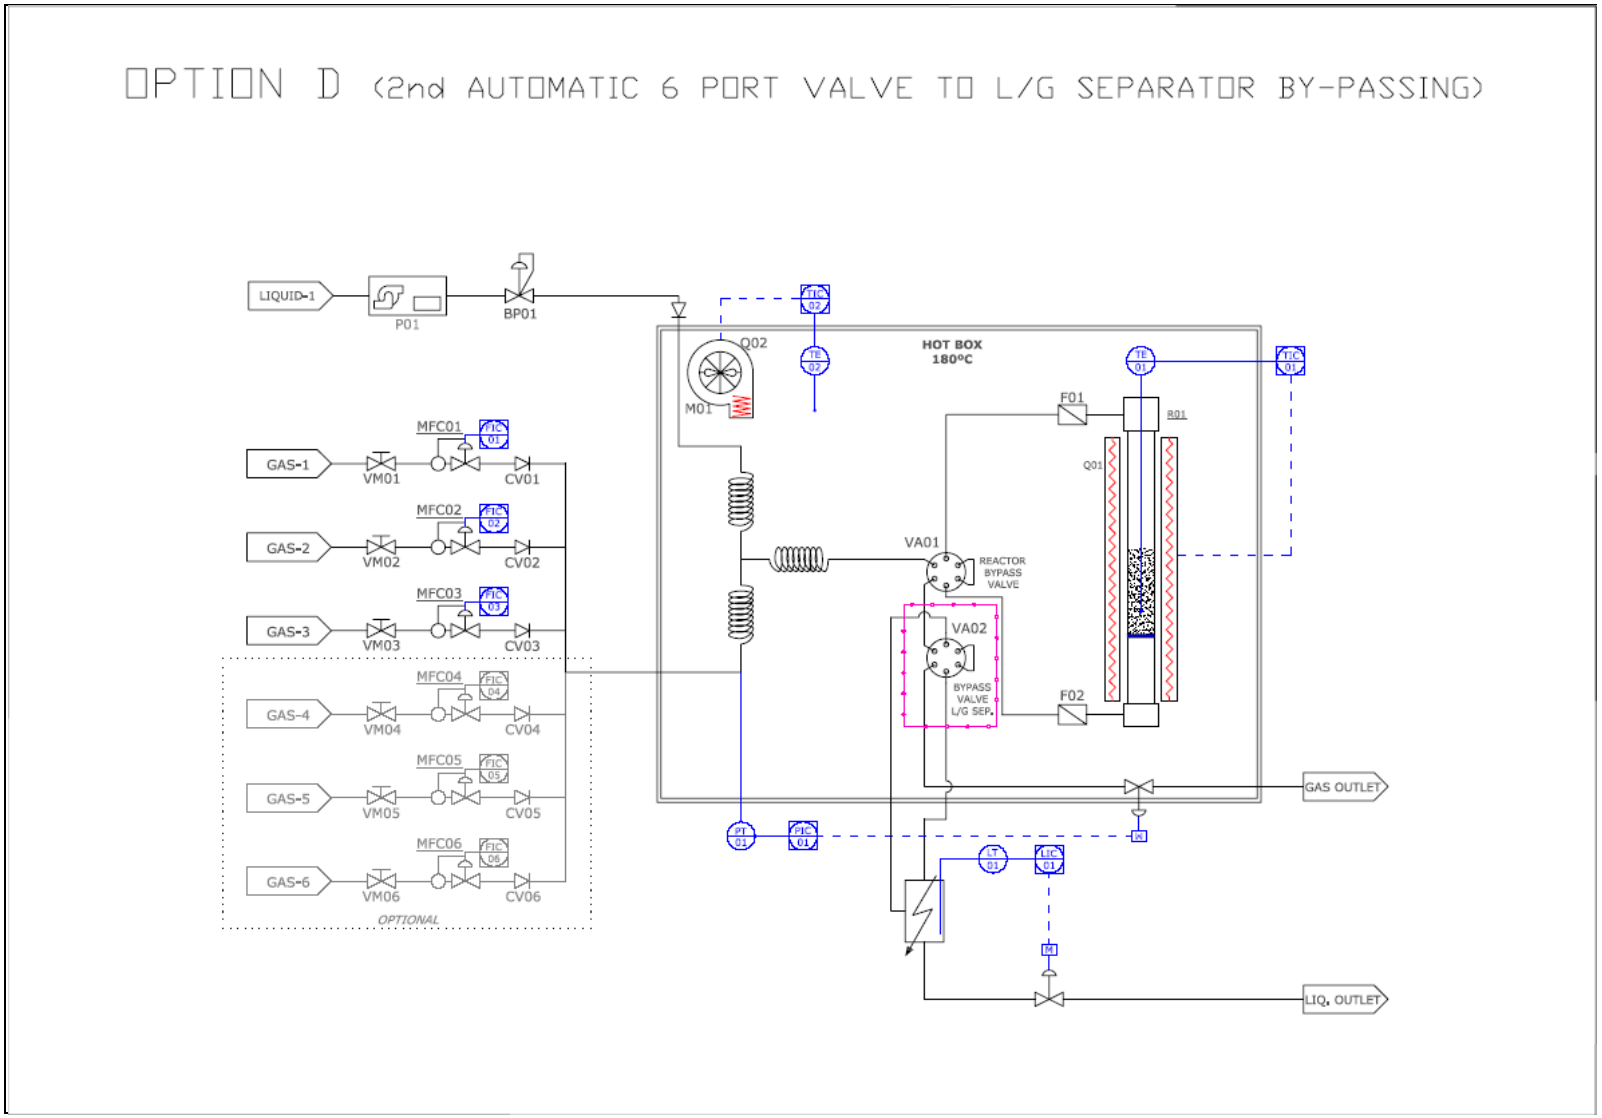
OPTION D (2nd AUTOMATIC 6 PORT VALVE TO L/G SEPARATOR BY-PASSING)
LIQUID-1
P01
BP01
HOT BOX
180°C
M01
Q02
TE 02
TE 01
TIC 01
F01
R01
Q01
VA01
REACTOR BYPASS VALVE
VA02
BYPASS VALVE L/G SEP.
F02
GAS-1
GAS-2
GAS-3
GAS-4
GAS-5
GAS-6
MFC01
MFC02
MFC03
MFC04
MFC05
MFC06
VM01
VM02
VM03
VM04
VM05
VM06
CV01
CV02
CV03
CV04
CV05
CV06
OPTIONAL
GAS OUTLET
LIQ. OUTLET
PT 01
PIC 01
LT 01
LIC 01

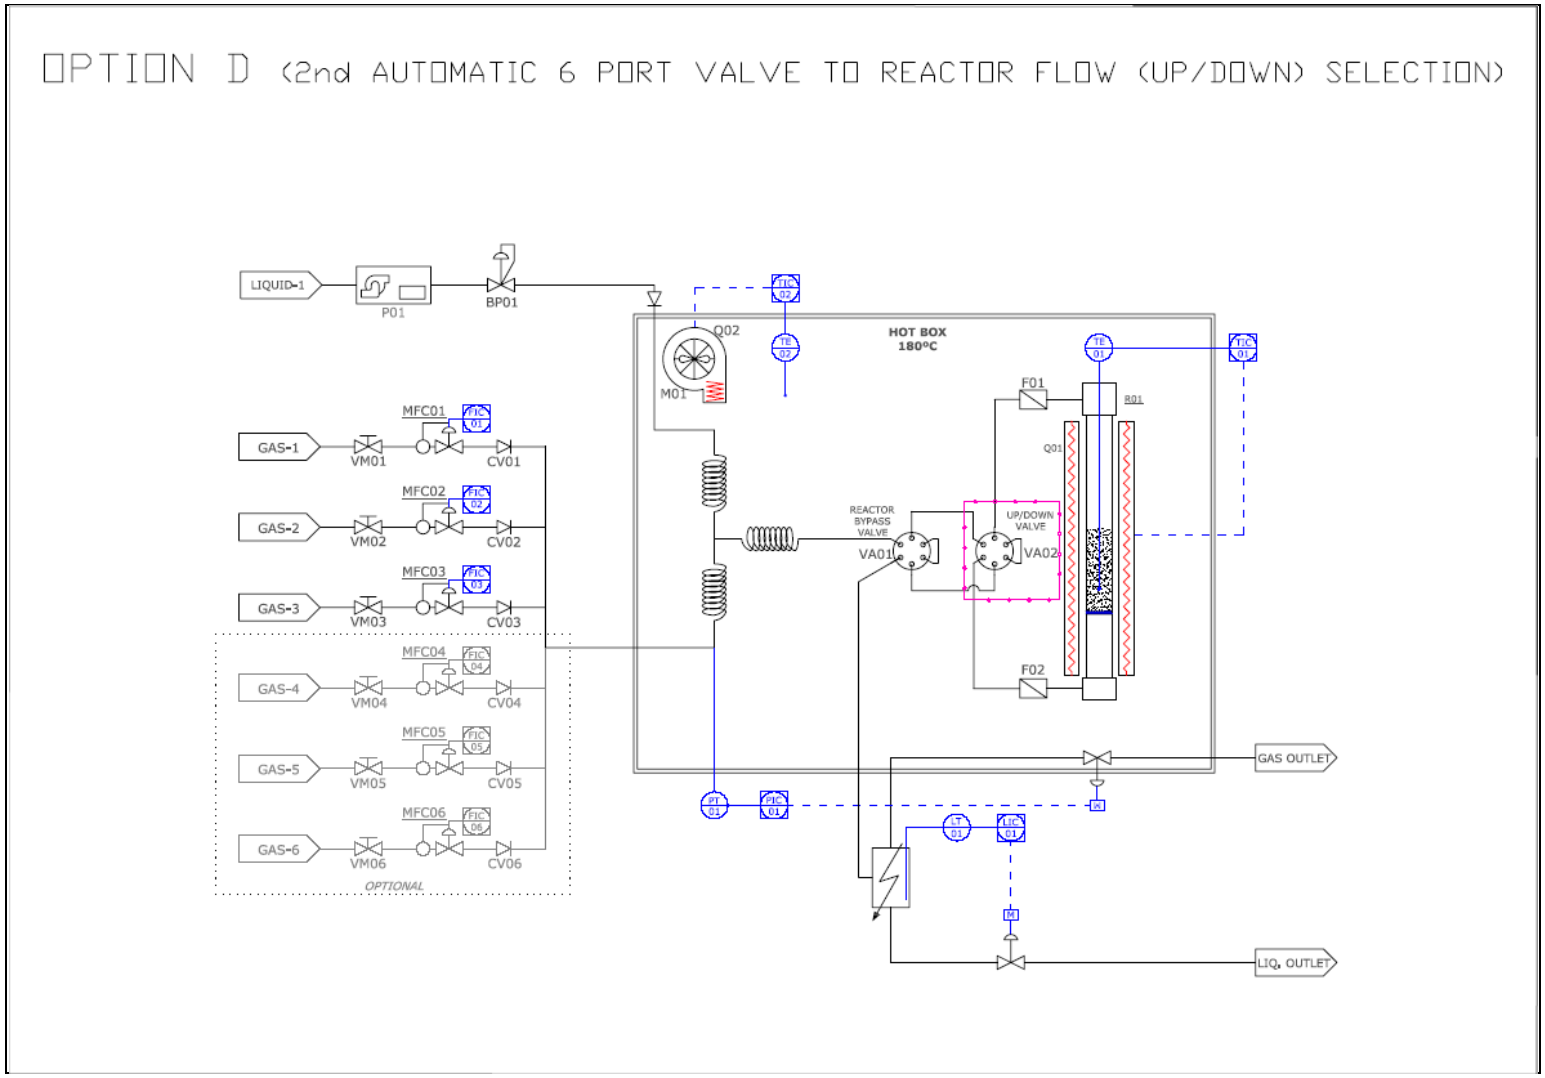
OPTION D (2nd AUTOMATIC 6 PORT VALVE TO REACTOR FLOW (UP/DOWN) SELECTION)
LIQUID-1
P01
BP01
Q02
M01
HOT BOX
180°C
MFC01
GAS-1
VM01
CV01
MFC02
GAS-2
VM02
CV02
MFC03
GAS-3
VM03
CV03
MFC04
GAS-4
VM04
CV04
MFC05
GAS-5
VM05
CV05
MFC06
GAS-6
VM06
CV06
OPTIONAL
REACTOR BYPASS VALVE
VA01
UP/DOWN VALVE
VA02
F01
F02
R01
Q01
GAS OUTLET
LIQ. OUTLET

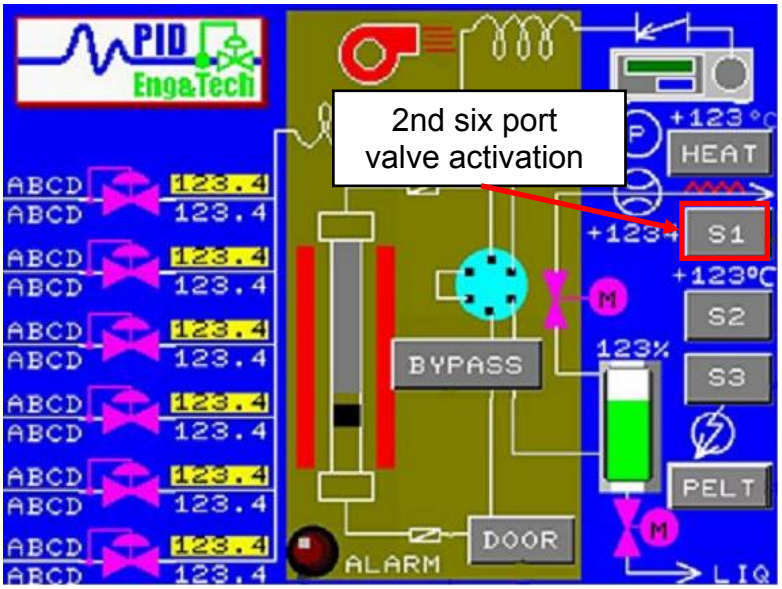

Figure 4-47

4.7.5. OPTION D1 - 4 PORT MANUAL VALVE

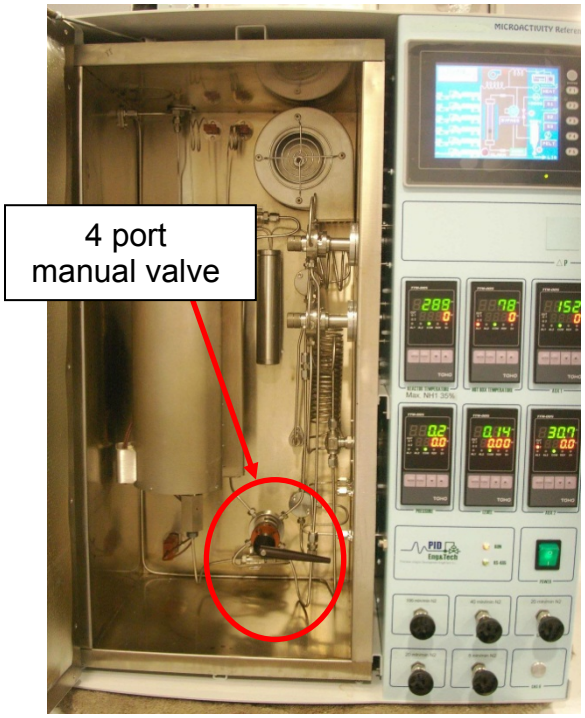

Figure 4-48

4 port valve option is useful to isolate the reactor and prevent contamination inside when necessary to remove the reactor inside the unit. This valve has two positions. One for normal operation and one when removing the reactor

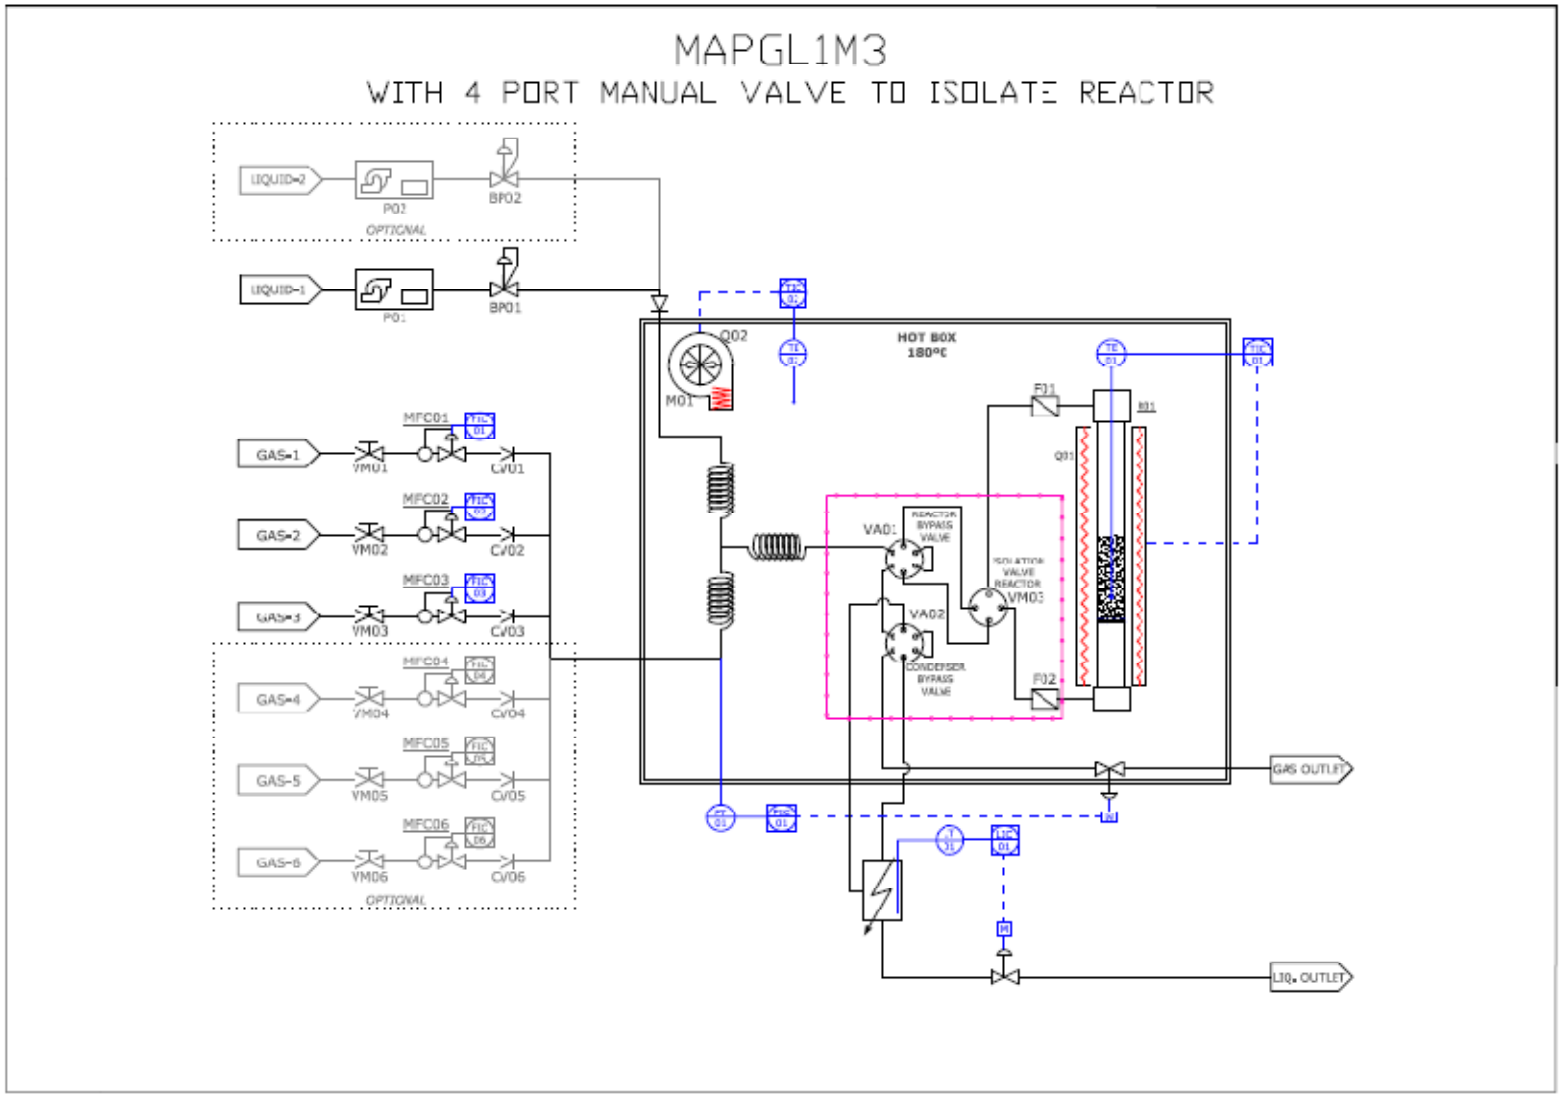
MAPGL1M3
WITH 4 PORT MANUAL VALVE TO ISOLATE REACTOR
LIQUID-2
P02
BP02
OPTIONAL
LIQUID-1
P01
BP01
HOT BOX
180°C
Q02
M01
MFC01
GAS-1
VM01
CV01
MFC02
GAS-2
VM02
CV02
MFC03
GAS-3
VM03
CV03
MFC04
GAS-4
VM04
CV04
MFC05
GAS-5
VM05
CV05
MFC06
GAS-6
VM06
CV06
OPTIONAL
VA01
REACTOR BYPASS VALVE
VA02
CONDENSER BYPASS VALVE
VM03
F01
F02
GAS OUTLET
LIQ. OUTLET

4.7.6. OPTIONS E TO J – DIFFERENT TYPES, SIZES AND MATERIALS FOR SPARE REACTORS, WITH TERMOCOUPLE AND ACCESSORIES.

OPTION	REACTOR
E	Quartz
F	SS316
G	Hastelloy C
H	No Standard SS316 Reactor 13,1 mm ID
H	No Standard SS316 Reactor 17,5 mm ID
I	No Standard Hastelloy C Reactor 13,1 mm ID
I	No Standard Hastelloy C Reactor 17,5 mm ID
I	No Standard Inconel 625 Reactor 13,1 mm ID
I	No Standard Inconel 625 Reactor 17,5 mm ID
J	Hastelloy X Reactor.

When choosing a reactor its composition is a critical factor, since the presence of some elements may affect or catalyze reactions. Also, the reaction itself can attack reactor walls due to corrosion phenomena. The working temperature and pressure are also a determinant factor. For this reason, depending on the application and operation conditions, reactor materials other than **standard SS316** can be recommended for some specific applications.

The three charts below summarize the characteristics of the different materials used in Microactivity reactors:

	Ni	*Mo*	*Cr*	*Fe*	*W*	*Nb+Ta*	*Mn*	*Co*
SS316	10.5-13.5%	2.5%	16.5-18.5%	BAL				
Hast X	47%	9%	22%	18%				**1.5%**
Hast C276	55%	15-17%	14.5-16.5%	4-7%	3-4.5%			
Inconel 600	72		14-17%	6-10%				
Inconel 625	58 % min	8-10 %	20-23 %	5% max		3.2-4.2%		
SS310	**19-22%**		**24-26%**	**BAL**			**2%**	

Table 2 Composition of metal alloys (Source: www.alloywire.com)

		SS316	HAST C276	HAST X	INCONEL 600	INCONEL 625	SS310
	MAX. TEMPERATURE (°C)	800	1093	1200	1212	980	1100
(Inside x Outside Diam.) **9.1 x 14.3 13.1 x 19.1 17.5 x 25.4**	**MAX. PRESSURE (BAR)**	690	418	617	356	827	441
	P(BAR)@500°C	214	364	525	243	728	262
	P(BAR)@650°C	104	155	308	36	414	241
	P(BAR)@790°C			100			

*Table 3 Pressure – temperature rating (*Source: Autoclave Engineers*)*

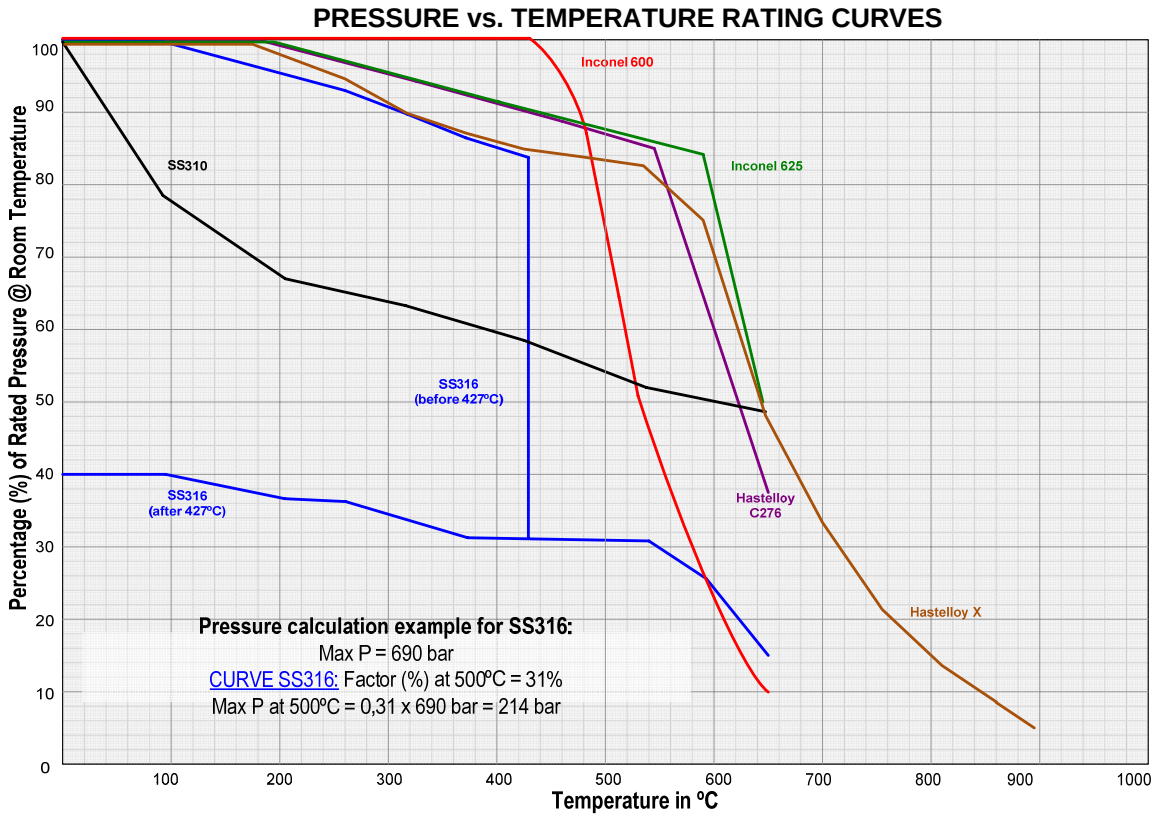
PRESSURE vs. TEMPERATURE RATING CURVES
Percentage (%) of Rated Pressure @ Room Temperature
Temperature in ºC
Inconel 600
Inconel 625
SS310
SS316 (before 427ºC)
SS316 (after 427ºC)
Hastelloy C276
Hastelloy X
Pressure calculation example for SS316:
Max P = 690 bar
CURVE SS316: Factor (%) at 500ºC = 31%
Max P at 500ºC = 0,31 x 690 bar = 214 bar

Figure 4-49

PIDEng&Tech can also install different types of synterized materials for the reactor 20 μm **porous plate**: SS316, Hastelloy C276, Hastelloy X, Inconel 600, Inconel 625 and SS310 are available. Also, when coke formation is possible, no porous plate is recommended. *Selection of the appropriate material for the reactor will be user's responsibility, never responsibility of PIDEng&Tech*

4.7.7. OPTION K – NO STANDARD FURNACE.

When using a no standard dimensions reactor a no standard furnace is required.

Figure 4-50

Figure 4-51

Figure 4-52

	Standard furnace	**No standard furnace**
Max power consumption, W	800W	It depends on the application

4.7.8. OPTION Q - HEATED HEAD PUMP, VESSEL AND LINE FOR LIQUIDS.

This is a special option for pumping heavy hydrocarbons or high viscosity liquids.

HPLC head pump is heated to 70ºC by means of a thermostatic switch while the line is heated by means of an autorregulating heating tape to 100 ºC. This option is particularly suitable for liquids with high viscosity.

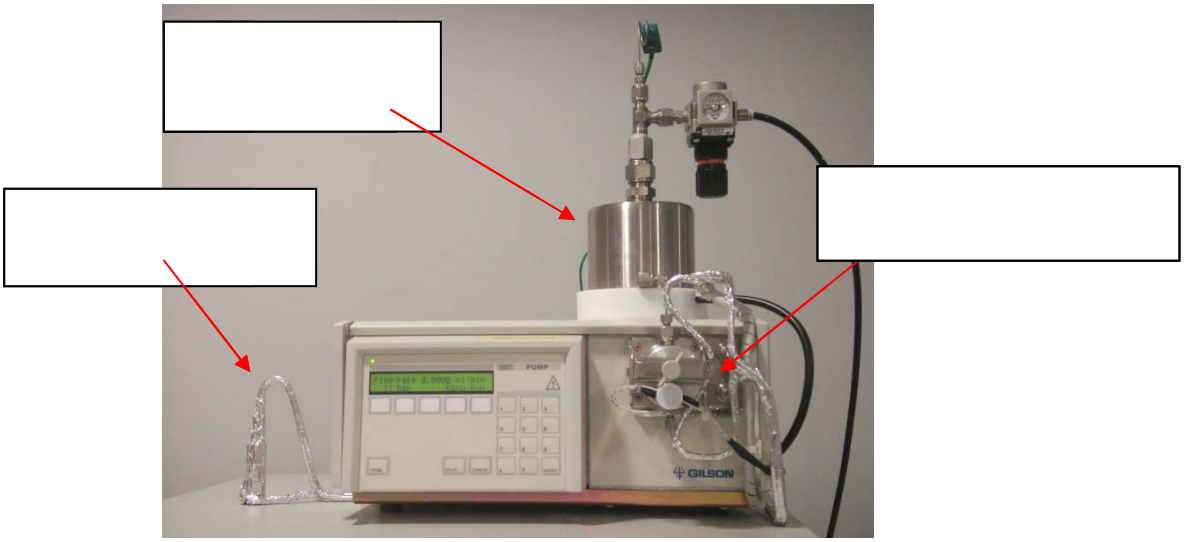

Figure 4-53

Element	Power consumption	Temperature, ºC
Heated Vessel	125 W	70
Heated Head pump	125 W	70
Heating tape	13 W/m	100

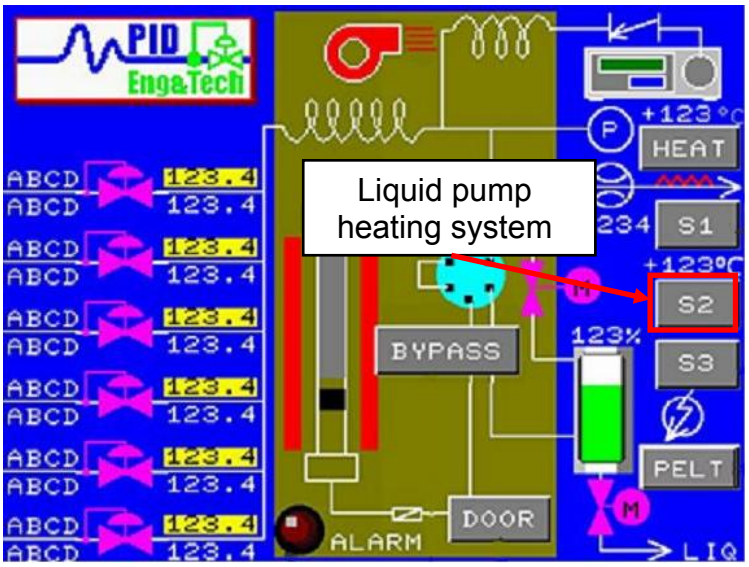
PID
Enga&Tech
ABCD
123.4
Liquid pump
heating system
+123°C
HEAT
234
S1
+123°C
S2
S3
123%
BYPASS
PELT
DOOR
ALARM
LIQ

Figure 4-54

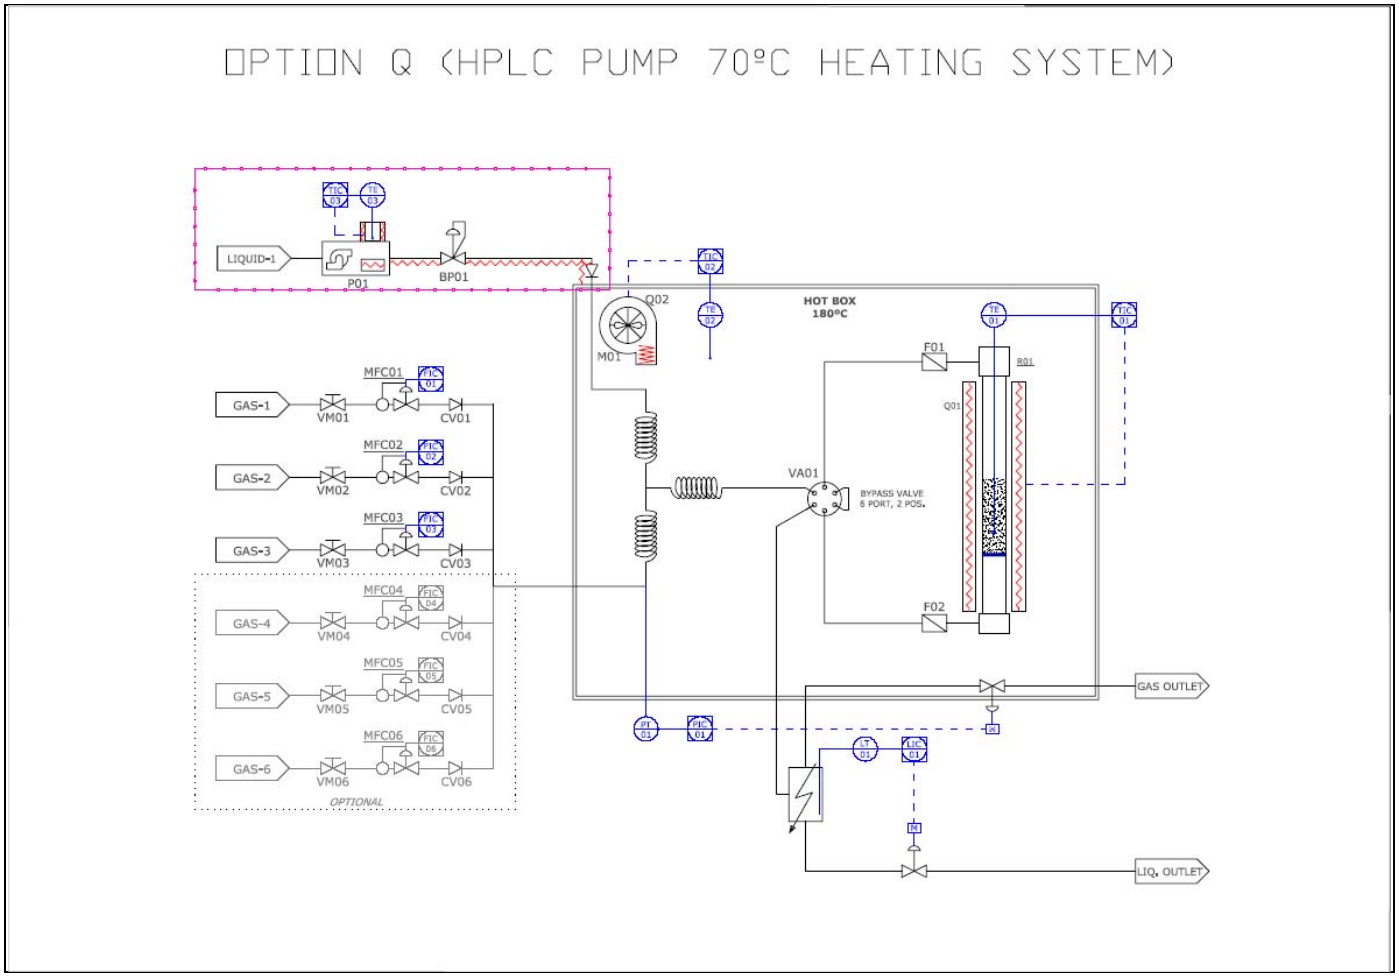
OPTION Q (HPLC PUMP 70ºC HEATING SYSTEM)
LIQUID-1
P01
BP01
HOT BOX
180ºC
Q02
M01
F01
R01
Q01
F02
VA01
BYPASS VALVE
6 PORT, 2 POS.
GAS-1
GAS-2
GAS-3
GAS-4
GAS-5
GAS-6
MFC01
MFC02
MFC03
MFC04
MFC05
MFC06
VM01
VM02
VM03
VM04
VM05
VM06
CV01
CV02
CV03
CV04
CV05
CV06
OPTIONAL
GAS OUTLET
LIQ. OUTLET

4.7.9. OPTION S – EXTRA LIQUID EVAPORATOR WITH TEMPERATURE CONTROL.

When a vaporisation of liquid/s is required upstream of the reactor an extra evaporator/s can be added to the unit.

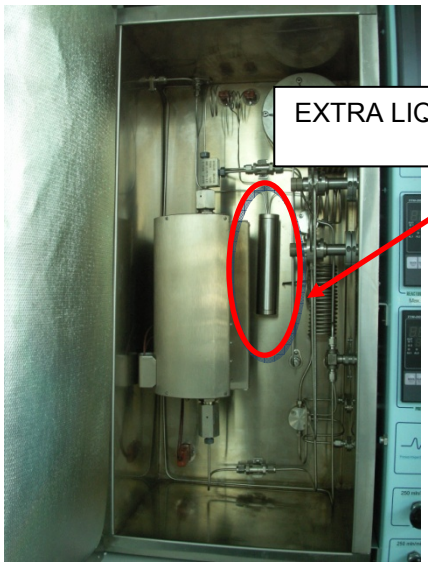

Figure 4-55

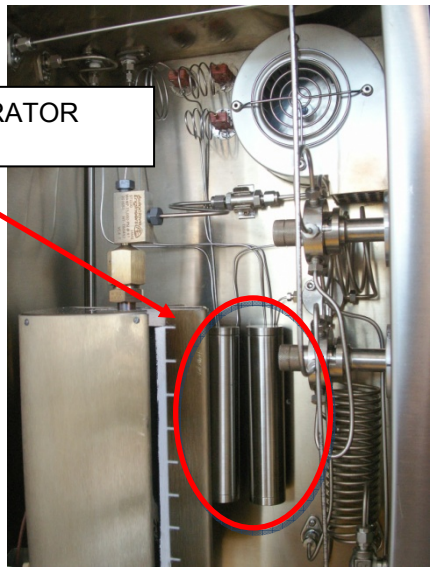

Figure 4-56

If two HPLC pump are installed and vaporisation of both liquids is required then two liquid evaporators can be installed.

- Extra SS316 evaporator with temperature control (50ºC to 450ºC)
- Maximum power consumption: 600 W.
- Maximum liquid flow: 8 ml/min

The precise temperature adjustment is achieved by selection of this variable in the controller.

Figure 4-57

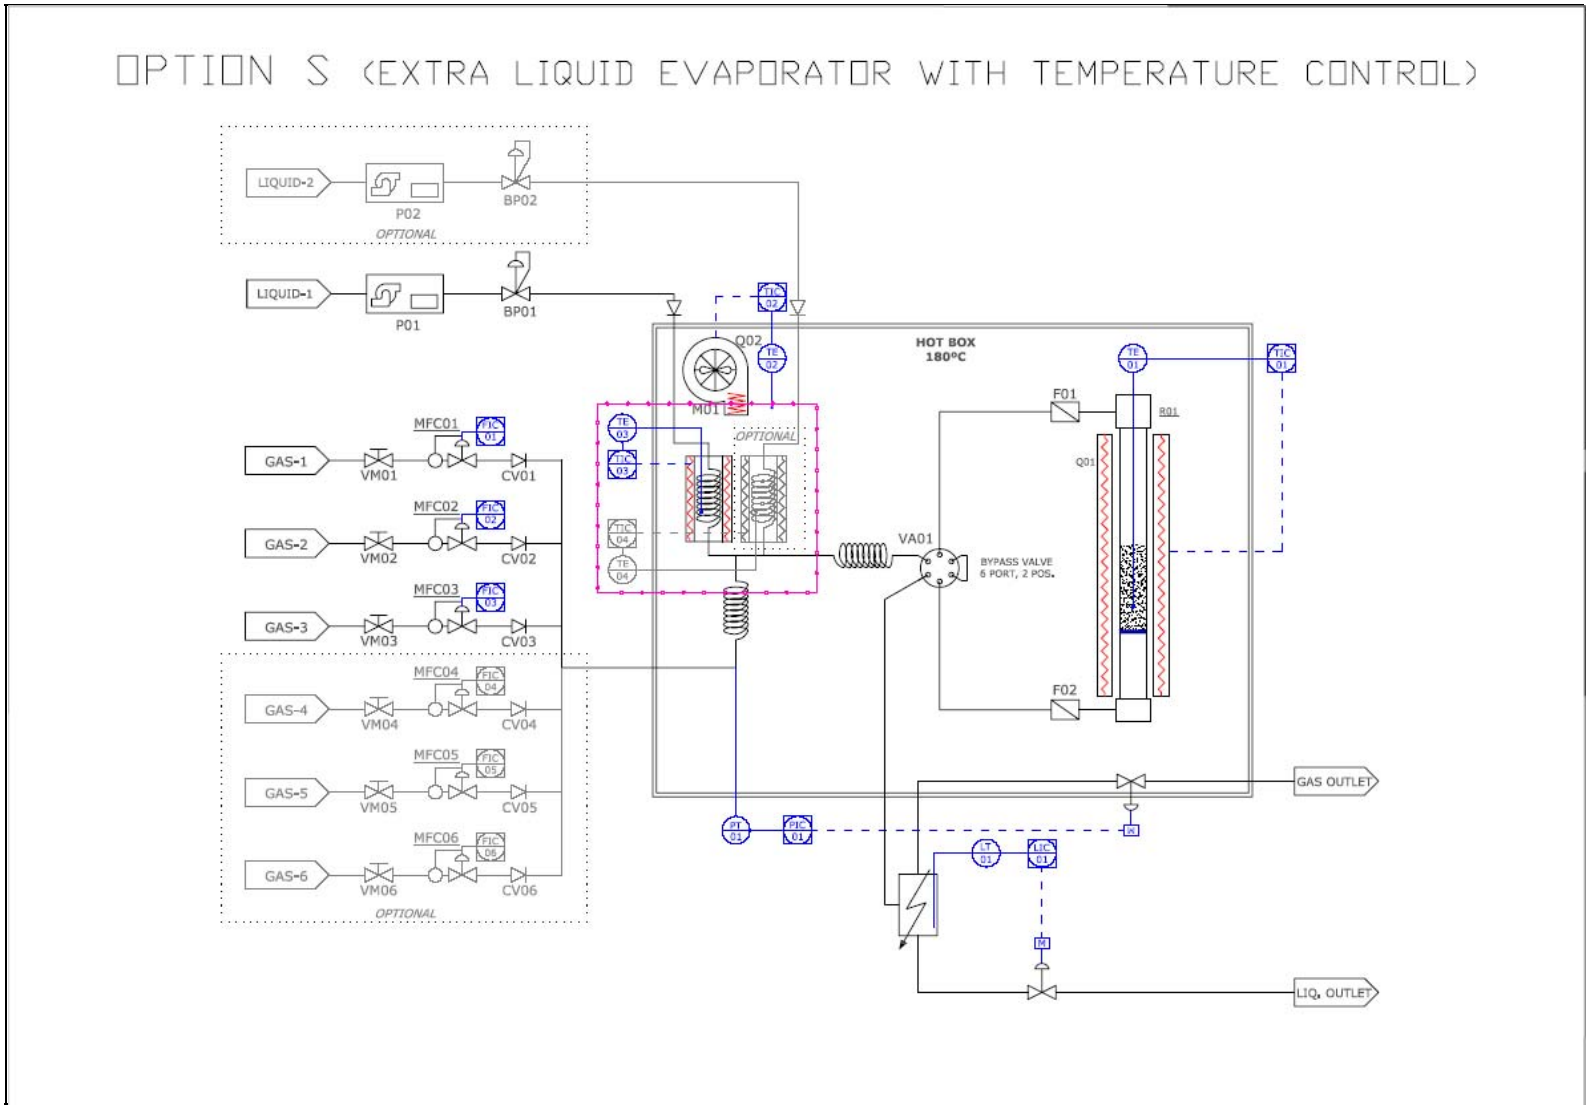
OPTION S (EXTRA LIQUID EVAPORATOR WITH TEMPERATURE CONTROL)
LIQUID-2
P02
BP02
OPTIONAL
LIQUID-1
P01
BP01
HOT BOX
180°C
Q02
M01
OPTIONAL
MFC01
GAS-1
VM01
CV01
MFC02
GAS-2
VM02
CV02
MFC03
GAS-3
VM03
CV03
MFC04
GAS-4
VM04
CV04
MFC05
GAS-5
VM05
CV05
MFC06
GAS-6
VM06
CV06
OPTIONAL
VA01
BYPASS VALVE
6 PORT, 2 POS.
F01
F02
GAS OUTLET
LIQ. OUTLET

4.7.10. OPTION T - TEMPERATURE CONTROL IN L/G SEPARATOR

Liquid/gas separator (included in the basic unit) can incorporate a precise temperature control system in a range from 0ºC to 65ºC when necessary.

Control system is based on a Peltier cell described in chapter 4.3

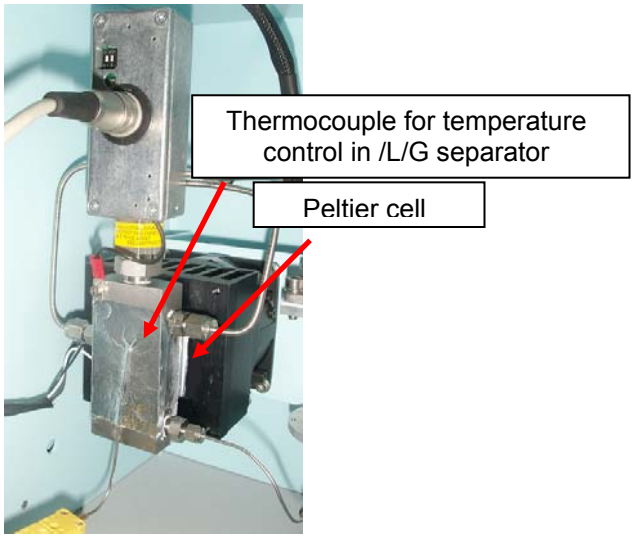

Figure 4-58

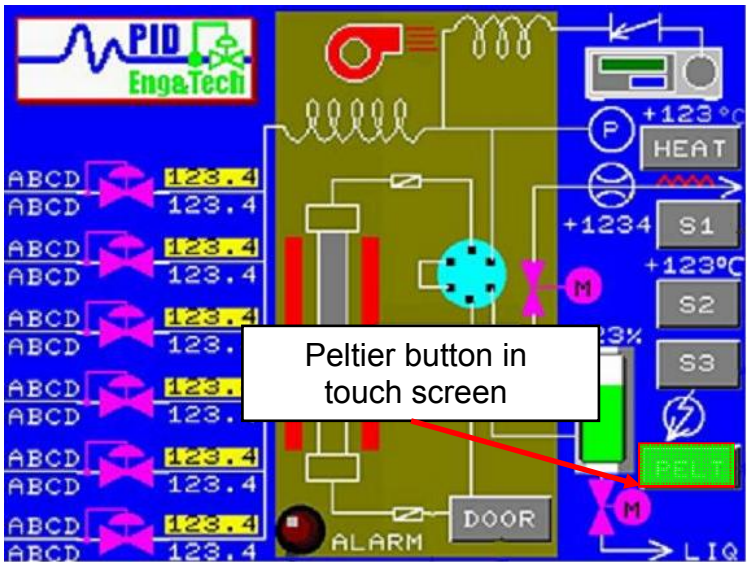

Figure 4-59

As described in liquid evaporator control, temperature control in L/G separator is made by means of a controller, but Peltier button must be “ON” in touch screen to let Peltier cell heating and cooling.

Peltier control setup in screen menu must be configured previously

Figure 4-60

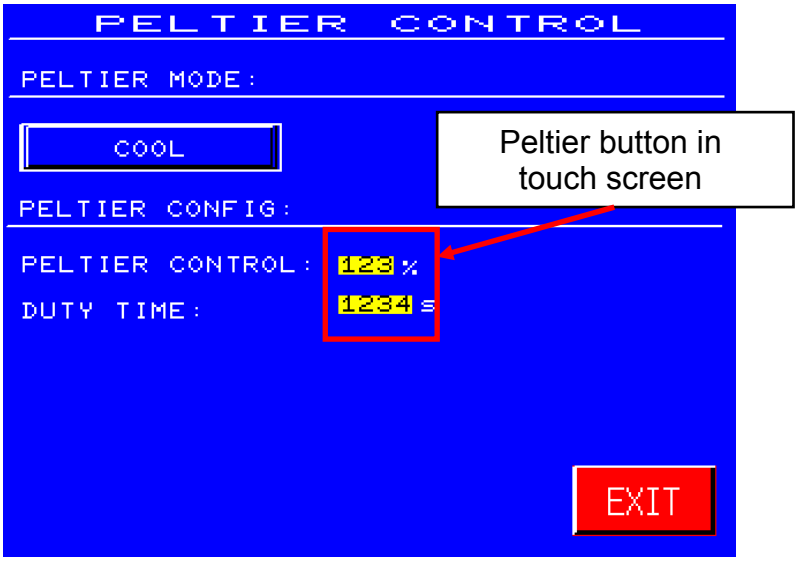

Figure 4-61

Peltier control is usually established in 95% and duty time in 10 s.

OPTION T (TEMPERATURE CONTROLLER FOR L/G SEPARATOR)

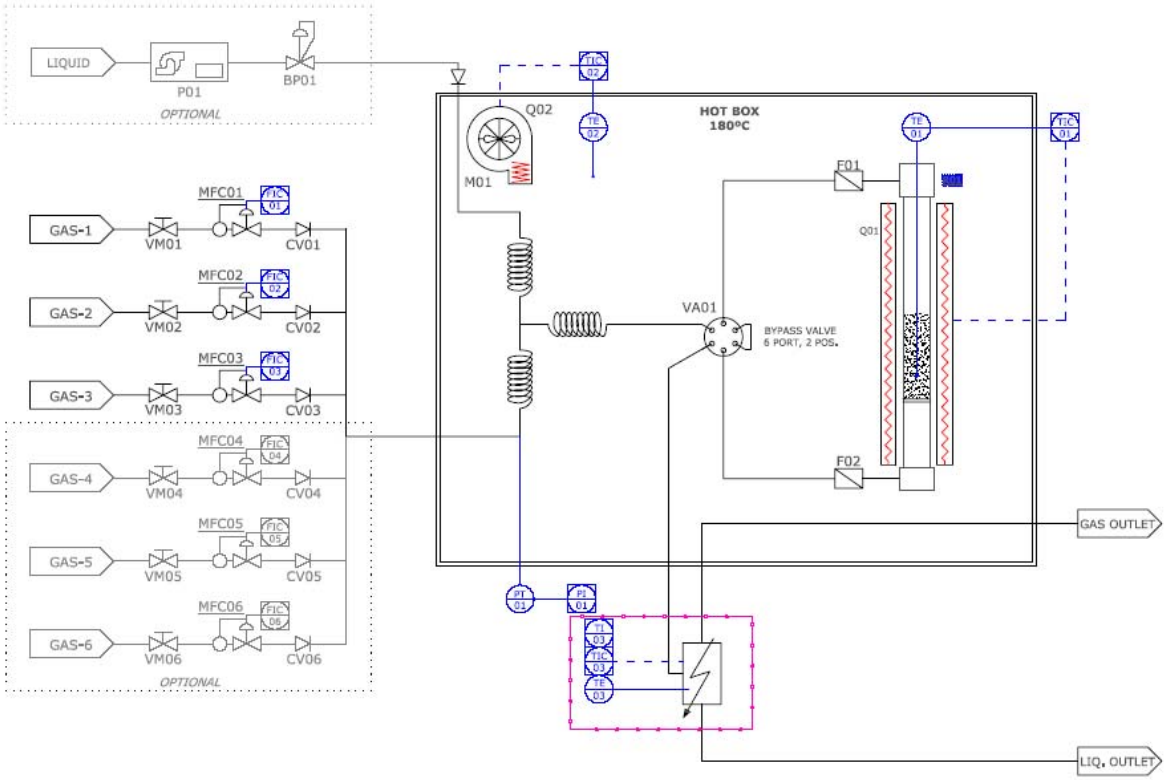

4.8. OTHER COMPONENTS OF THE MICROACTIVITY-REFERENCE UNIT

Connecting pieces, valves, instrumentation and other system components have been carefully selected. There follows a description of the more important ones, or those items that have undergone some form of modification in order to improve the system's performance.

4.8.1 PIPING

The selection of piping has taken several factors into account, such as temperature, pressure and type of compounds that are going to flow through it. The most widely used material is 316L stainless steel, with the maximum operating temperature for the pipe being that determined on the basis of the values for external diameter and thickness, using the ASME table for 316L stainless steel pipes for different temperatures.

For 316 type stainless steel without welding and at 316ºC, the maximum stress value permitted is 17000 psi. The geometry factor for a 1/8" pipe, with a wall thickness of 0.02", is 0.367. By applying the expression:

Maximum operating pressure = Maximum stress permitted x Geometry factor

A maximum operating pressure is obtained of 6239 psi (430 bar) for 1/8" pipes made of 316 stainless steel, with a thickness of 0.02" and at a temperature of 316 ºC.

The pipes selected that constitute the reactor are:

** Pipe:* TSS285.

- 1/8" pipe with internal diameter of 2.1 mm (0.085").
- Declared standards: EN–10204/3.1B – DIN50049/2.2.

** P* TSS120.

- 1/16" pipe with internal diameter of 0.50 mm (0.020").
- Declared standards: EN-10204/3.1B – DIN50049/2.2.

4.8.2 JOINTS AND VALVES

** Check valve for liquid feeding*: SG-SS-2C4-KZ-25.

- Located on the liquid inlet line to the reactor.
- 316 stainless steel valve with Kalrez sealing material.
- Maximum operating pressure and backpressure at 21ºC of 206 bar (3000 psig).
- Trigger pressure of 25 psi.
- Operating temperature of –23ºC to 191ºC.
- C_V = 0.10.

For a valve with a rated pressure trigger spring of 25 psig, true trigger pressure ranges between 21 and 29 psig. The minimum closing pressure is 17 psig.

A series of Teflon pieces have been designed to reduce the flow section to the equivalent of a 1/16" pipe, as well as the dead volumes in the NPT type joints (see Figure 4-66).

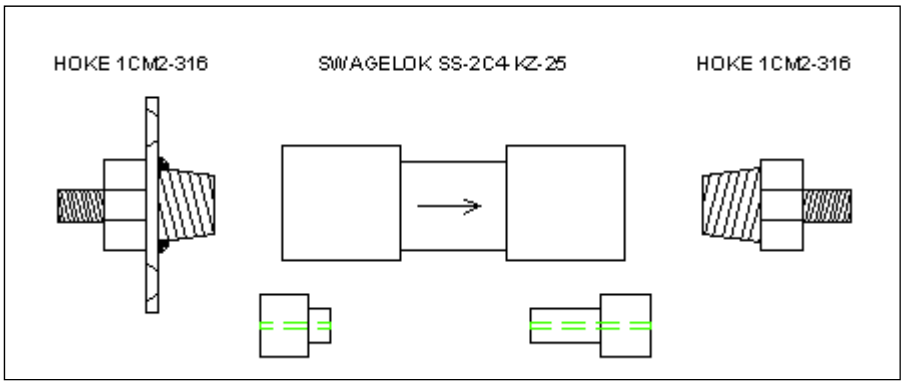

Figure 4-62

** 3-port ("T") connection:* VV-ZT2.

- 316 stainless steel. 1/8" pipe thread connection and orifice of 0.75 mm.
- Operating pressure of 400 bar.

In order to avoid standard wear and tear on the connecting pieces on a reactor (phenomenon that mainly occurs with T-shaped connections given the difficulty in using a "counter-spanner"), selection has been made of VICI-VALCO connecting pieces mounted onto the structure of the hot box, thereby enabling them to be manipulated with a single spanner.

** Bushing*: SG-SS-200-61-PID

- 316 type stainless steel. 1/8" extra-long threaded connection pipe.
- As per Standards ASTM A-182, ASTM A-479 and CMTR certificate.
- Operating temperatures ranging between –200ºC and 426ºC.

Swagelok has custom-made extra-long bushing pieces for the Microactivity-Reference unit. They permit the inlet and outlet of process lines passing through the insulation separating the hot box and the thermal separation chamber from the rest of the mechanical assembly. These pieces are not commercially available.

**Reduction element* : VV-IZR21L.

- 1/8" VICI pipe thread reduction connection to 1/16" pipe thread.
- 316 type stainless steel.

** Non-return valve*: SG-SS-2C2-1 Kalrez.

- 316 stainless steel. Joint in chemically compatible Kalrez (Teflon elastomer).
- As per Standards ASTM A-182, ASTM A-479 and CMTR certificate.
- Maximum operating pressure of 2185 psig (150bar) at 190ºC
- C_V = 0.1

In order to avoid the multiple connections required for the feed arrangement of various gases and so as to favour the mixture of the same, a distributor has been designed in 316 stainless steel that reduces the number of joints and whose interior is fitted with a helicoidal feature that forces the gas stream through the strands on this propeller, encouraging their mixing (see Figures 4-67 and 4-68).

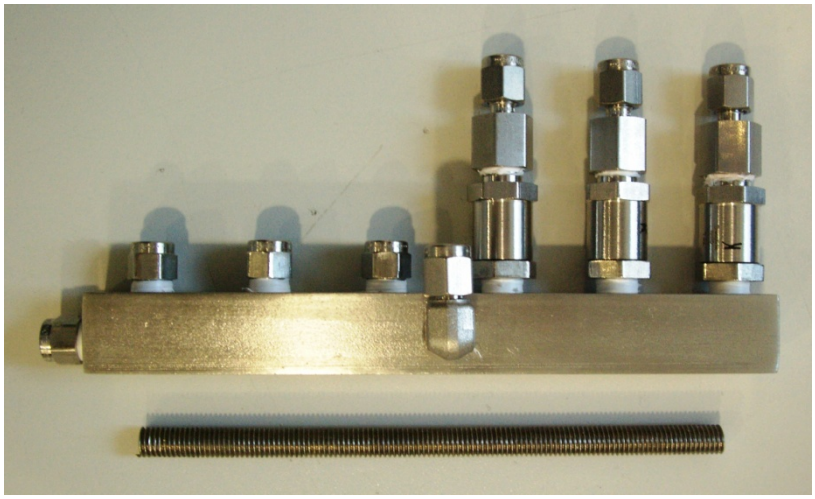

Figure 4-63

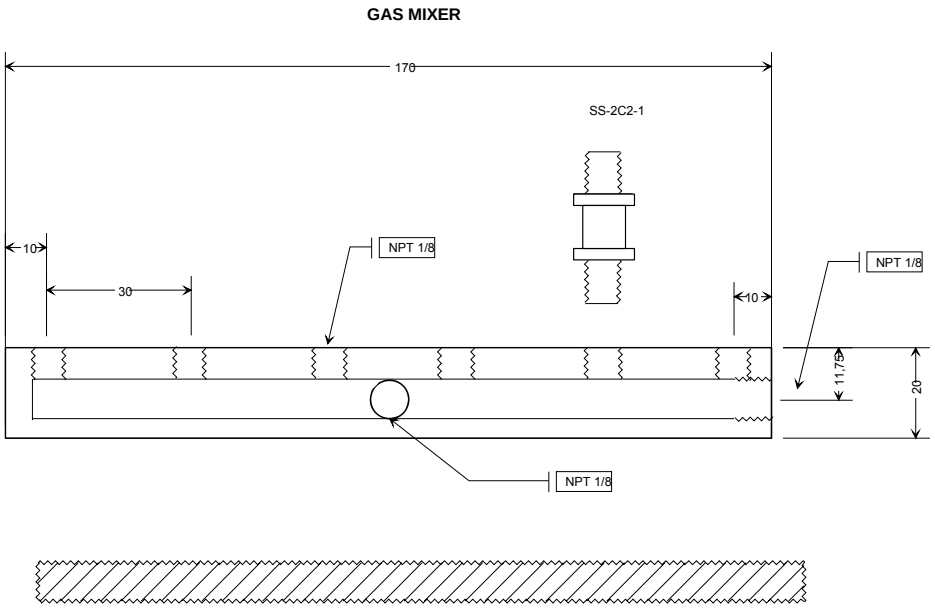

Figure 4-64

** Reactor filters*: SG-SS-2F-15

- Located on the reactor's gas inlet and outlet lines.
- 316 type stainless steel. 1/8" pipe connections.
- Porous panel of 15 µm SS316

4.8.3 INSTRUMENTATION

** Pressure transducer:* SWT A08.

Measurement range	0 -100 bar
Overpressure admissible	200 bar
Linearity	< 0.5% FS
Hysteresis and repeatability	< 0.1% FS
Thermal effect on zero	0.4% FS/10K
Thermal effect on the span	0.2% FS/10K
Operating temperature	(- 40) - 110ºC
Excitation potential	12 - 30 VDC
Output signal	4 – 20 mA
Power connection	M-12 connector, short-circuit protection
Pressure connection	G BSP 1/4" 316 stainless steel
Class of protection	IP65 (connector), IP67 (cable)
EMC	EN 50 081-1 and EN 50 082-2

Table 4-6

** Mass flow meters and controllers:*. F201C – FAC– 11- X

A study has been performed on the features of different mass flow controllers, in terms of their reliability, accuracy, control valve design, operation in the lower run of the operating range and performance at high pressure, with the instruments made by the firm Hi-Tec Bronkhorst being selected as those best suited to a Microactivity reactor.

Each controller is calibrated to perform the measurement of a specific compound, although the option exists to use them with compounds of a different factor to the unit's original calibration. When using another gas, special attention is to be paid to the elastomer's compatibility with the new process gas. Calibration at source is undertaken by means of equipment with NMI certification. The specifications of these instruments are as follows:

- AISI 316L stainless steel, 1/8" connections.
- 1% F.S. accuracy. 0.1% F.S. repeatability
- Operating range between 5% and 100%.
- Operating temperature between –10ºC and 70ºC.
- Input and output signal: 0-5 vdc.

** Temperature signal*: TC-KIA-ID-0600-H0.

- K-type thermocouple, Inconel, 600 mm in length, mini-male high-temperature (220ºC) plug, 1.5 mm diameter, with temperature range between –200ºC and 1250ºC.
- Presents derivation and hysteresis as of 900ºC.
- Class 1 tolerance as per standards IEC 584.2: ±1.5ºC or ± (0.4%xT)ºC.

** Bypass valve*: VV- AT36UWTY.

- 6 Ports with 2 positions, 1/8".
- Maximum operating pressure: 1500 psig.
- Maximum operating temperature 230ºC.
- Standard port diameter 0.75 mm.
- 316 stainless steel. Valcon T rotor material.
- 3" actuator–valve separation, with AT60 high temperature actuator.

4.9. CONTROL OF PROCESSES AND AUTOMATION

4.9.1 CONTROL LOOPS FOR THE MICROACTIVITY-REFERENCE

The Microactivity-Reference reactor uses closed loop controllers with proportional, integral and derivative type re-feed of the signal for the following control loops:

- ⇨ *Reaction temperature control:* The signal from the thermocouple located in the catalyst bed is assessed by the controller, whereby its 4-20 mA output signal is sent to a solid state "zero passage" type relay that regulates the power supplied to the oven in a proportional manner.

- ⇨ *Temperature control of the hot box*: The signal from the thermocouple located in the hot box is assessed by the controller, whereby its 4-20 mA output signal is sent to a solid state "zero passage" type relay that regulates the power supplied to the box's heater in a proportional manner.

- ⇨ *Level temperature control:* The signal from the thermocouple located in the deposit is assessed by the controller, whereby its 4-20 mA output signal is sent to a solid state "zero passage" type relay that regulates the power supplied to the cartridge in a proportional manner.

- ⇨ There is a fourth zero passage relay for the possible temperature control of a heating pad for heating a gas outlet line, an evaporator, etc.

- ⇨ *Pressure control:* The signal from the pressure transmitter located upstream of the reactor is assessed by the controller, whereby its 4-20 mA output signal determines the position of the pressure control valve.

- ⇨ *Level control:* The signal from the capacitive signal installed in the liquid – gas separator is assessed by the controller, whereby its 4-20 mA output signal determines the position of the level control valve positioned at the base of the separator.

- ⇨ *Flow control:* The instruments used for dosing the gases into the reactor are in themselves flow controllers. Accordingly, the reactor's control system simply relays the 0-5 VDC control signals to the MFC. The signal recognises the 0-5 VDC output signal from the MFC and compares it to the order, triggering an alarm signal if they do not coincide.

Use has been made of controllers made by the firm TOHO, model TTM-005, for the control of temperature, pressure and level (4-20 mA input and output). These controllers cater for RS-485 digital communications for communicating with the computerised control system.

4.9.2 AUTOMATION

Before proceeding to the design of the printed circuit that contains the microprocessor that manages the system for the control and monitoring of the reactor, and which is what will manage the Microactivity-Reference reaction unit, a simulation was made of each one of the systems operating in the microactivity reactor.

4.9.3 SYSTEM SAFETY MANAGEMENT

⇨ **Safety status in the event of a power failure.**

As an initial safety measure, the controllers use a non-volatile memory to store the latest parameters introduced manually from the keyboard. After a power failure, the plant returns to these "safety" parameters or values, irrespective of what the latest values were that were sent to the computer.

As a precaution, the system's "safety" values have to be re-entered after any manual modification of the set-point in operations performed by the operator, independently of the computerised control system.

⇨ **Temperature alarm.**

The controller's upper limit absolute temperature alarm shuts down the control signal on the reactor oven and on the hot box heater and halts the operation of the MFC that the user has selected on the alarm set-up panel on the system's touch screen. It also shuts down the operation of the HPLC pump, setting off an audible alarm as a warning signal for the operator, and triggers the safety system's INH (inhibition) function, impeding the software from changing the session automatically.

⇨ **Operation of the hot box**

The hot box is fitted with a forced convection heater that consists of a turbine and a heater. Its proper operation requires the turbine to be running when the heater is on, dissipating the heat and avoiding damage. This involves two systems working in parallel: provided that the controller sends a control signal higher than 5 mA to the "zero passage" solid state relay that regulates the heater's power, the turbine starts operating, and even when this signal is not given, whenever the temperature in the hot box exceeds 40ºC the turbine will be running (The hot box controller's upper limit absolute temperature alarm _E1H is set at 40 ºC). Accordingly, as the temperature drops, the turbine cools the hot heating cartridges.

⇨ **Door closed detector on hot box**

So as to disconnect the current supplied to the hot box heater when its door is open, there is an inductive sensor that detects whether it is open or closed. This function does not interrupt the operation of the turbine or act upon any other part of the system.

⇨ **Oven closed detector**

So as to disconnect the current supplied to the hot box heater and the reactor oven when the latter is open, there is a magnetic detector on the oven's closing device that detects the position of the reactor's moving section. The detection of an open oven interrupts the operation of the hot box heater, the supply of power to the oven and triggers the safety system's INH (inhibition) function, impeding the software from changing the session.

If it becomes necessary to open the hot box door during a reaction procedure, this is to be done manually, without using the door opening button. Manual opening of the door will only interrupt the power supply to the box heater.

⇨ Flow alarm

This alarm is by percentage deviation over the set-point. If, for more than 10 s (or time set in the *Time Delay Alarm*) the set flow deviates by more than 10% from its value (percentage set on the MFC set-up panel on the touch screen), the system interrupts the operation of the reactor oven, sets off an audible alarm (buzzer) to alert the operator and triggers the safety system's INH (inhibition) function, impeding changes in the operating session.

⇨ Pressure alarm

Absolute alarm, configured by parameter _E1H on the pressure controller. It acts upon the liquids pump and the MFC, halting the operation of those the user has selected on the pressure alarm set-up panel on the system's touch screen. It is self-locking, in order to avoid a repetitive cycle of the system in the event that its activity ceases even when the problem that triggered it has not been resolved. For example, in the event of a blockage in the porous plate, pressure will increase and the alarm will act upon the feed to the system, halting it. But this will bring the pressure below the alarm value, whereby the system will again start operating in a situation that will again produce the circumstances that will once again trigger the alarm. This is why once the pressure alarm has been triggered, the system will remain in stand-by until the operator proceeds manually to release this locking, an action that is to be performed after checking over the system and correcting the anomalous situation.

The safety system locks this situation until the system operator presses RESET on the pressure alarm, once the source of the problem has been located. The MFC will not operate until this RESET is pressed, even though the pressure value in the system has dropped below the value _E1H.

⇨ Level alarm

Alarm configured by the parameter _E1H on the level controller. It is absolute type and it acts upon the liquids pump and the MFC, halting the operation of those the user has selected on the level alarm set-up panel on the system's touch screen. It also triggers the audible alarm and the INH (inhibition) function as the upper limit set has been exceeded. This alarm is only available on equipment with liquid feed systems and a liquid – gas separator with level control.

⇨ Control valve failure

The final elements of pressure and level control are servo-positioned micro-regulating valves. A failure in the control system of these valves triggers an alarm of the same type as that triggered by their master control loops. A failure in the position of the pressure control valve generates a procedure similar to that generated by a pressure alarm, and a failure in the level control valve generates a procedure similar to that caused by an alarm in the separator's level controller.

⇨ INH Inhibition function

Whenever the INH function is activated by any one of the system's alarms, the Process@ control application automatically interrupts the performance of interconnected sessions. The system's control program will remain in stand-by until the operator manually implements the change of session once the cause of the alarm has been resolved.

⇨ External alarm

A signal coming from an outside system for detecting gases, fire or such like may trigger a general alarm in the system that involves disconnecting the hot box heater, the reaction oven, the liquids pump and the MFC, halting the operation of those the user has selected on the external

alarm set-up panel on the system's touch screen, triggering the audible alarm (buzzer) and generating the system's inhibition signal.

SUMMARY TABLE OF THE ALARM FUNCTIONS

ALARM	TYPE	REACTOR OVEN	HOT BOX HEATER	HOT BOX CONVECTOR	REACTANTS MFC´s	INERTS MFC´s	LIQUIDS PUMP	INH	BUZZER
REACTION TEMPERATURE	ABS	OFF	OFF		(1)			ON	ON
HOT BOX TEMPERATURE	ABS			ON					
PRESSURE CONTROL	ABS				(1)			ON (2)	ON
LOSS OF LOAD	ABS				(1)			ON (2)	ON
LEVEL CONTROL	ABS				(1)			ON	ON
MASS FLOW CONTROLLERS	DEV	OFF						ON	ON
DOOR-OPEN DETECTOR	Relay		OFF						
OVEN-OPEN DETECTOR	Relay	OFF	OFF					ON	
EXTERNAL ALARM	Relay	OFF	OFF		(1)			ON	ON
PRESSURE SERVO-CONTROL	Relay				OFF	OFF	OFF	ON	ON
LEVEL SERVO-CONTROL	Relay						OFF	ON	ON

Table 4-7

(1) Actions defined by the user in the set-up menu for the reaction pressure and temperature alarms on the touch screen of the Microactivity-Reference.

(2) The inhibition session is activated in the event of a pressure alarm, with this status persisting until the user resets the alarm on the alarm panel on the touch screen. (In all other alarm scenarios, the inhibition function is deactivated automatically once the system's parameters return within the established control limits).

5. PROCCESS@ CONTROL SOFTWARE

5.1. INTRODUCTION

Process@ control software is an application for data supervision and acquisition designed for systems based on digital communications between process hardware and a personal computer. The use of this application allows data acquisition and the remote control of one or several Microactivity-Reference units via Ethernet type communications.

This software has been developed with National Instruments LabVIEW, which has the flexibility of a programming language combined with built-in tools designed specifically for testing, measurement, and control. Therefore, Process@ software includes all the advantages of LabVIEW:

- Easy-to-use graphical development environment
- Tight integration with a wide range of measurement hardware
- Rapid user interface development for displaying live data
- Extensive signal processing, analysis and math functionality
- Multiple communication options (TCP/IP, UDP, serial, and more)
- Support for Windows Vista/XP/2000

5.2. INSTALLATION

The PC supplied with the unit is provided with:

1. **Process**@ software

2. A "custom made" **PROJECT** or Microactivity configuration. This project includes the specific devices each Microactivity is equipped with (controllers, pump, MFC's, etc) and its flow diagram.

   For each unit there will only be one PROJECT, although the user, as will be seen later, will be able to save it with different names if needed.

For this reason, the software installation is performed in two steps: first, install the Process@, and then, the Microactivity configuration or "*project*".

5.2.1. HOW TO INSTALL PROCESS@

The installation of Process@ involves the following steps:

When the Process@ CD is introduced in the computer, the installation software automatically opens. It is recommended to close all running programs before beginning the installation.

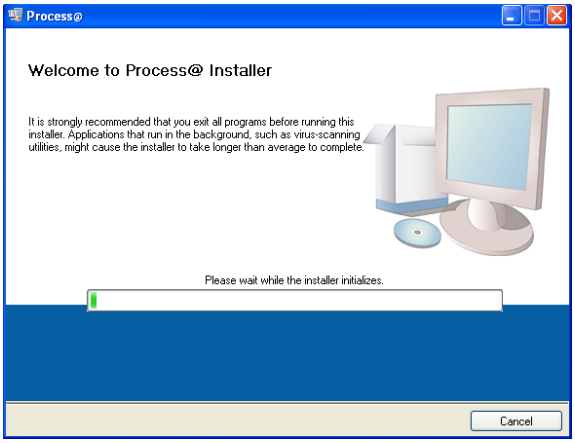
Process@
Welcome to Process@ Installer
It is strongly recommended that you exit all programs before running this installer. Applications that run in the background, such as virus-scanning utilities, might cause the installer to take longer than average to complete.
Please wait while the installer initializes.
Cancel

Figure 5- 1. Process@ installer

A window asking which directory Process@ is to be installed in will pop up next. To ensure the right installation, it is recommended to choose the default locations:

-C:\Program Files\Process@
-C:\Program Files\National Instruments

Click *Next>>* to continue the installation.

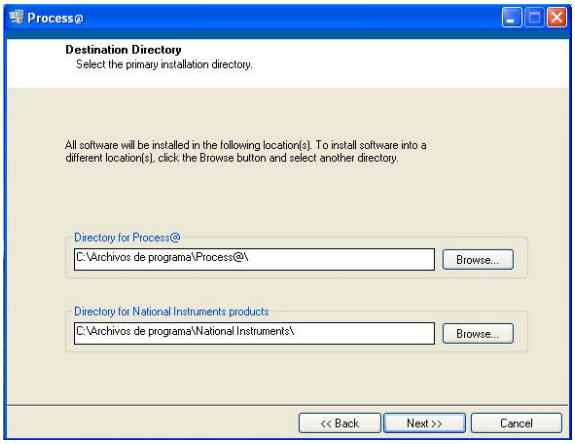
Process@
Destination Directory
Select the primary installation directory.
All software will be installed in the following location(s). To install software into a different location(s), click the Browse button and select another directory.
Directory for Process@
C:\Archivos de programa\Process@\
Browse...
Directory for National Instruments products
C:\Archivos de programa\National Instruments\
Browse...
<< Back
Next >>
Cancel

Figure 5- 2 Installation directories

Next, if accept the software license agreement is accepted: first, the National Instruments license will appear. After selecting *"I accept the License Agreement",* the installation process in NEXT can be continued.

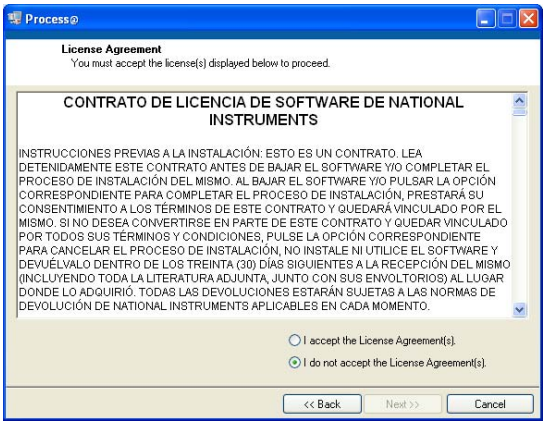
Process@
License Agreement
You must accept the license(s) displayed below to proceed.
CONTRATO DE LICENCIA DE SOFTWARE DE NATIONAL INSTRUMENTS
INSTRUCCIONES PREVIAS A LA INSTALACIÓN: ESTO ES UN CONTRATO. LEA DETENIDAMENTE ESTE CONTRATO ANTES DE BAJAR EL SOFTWARE Y/O COMPLETAR EL PROCESO DE INSTALACIÓN DEL MISMO. AL BAJAR EL SOFTWARE Y/O PULSAR LA OPCIÓN CORRESPONDIENTE PARA COMPLETAR EL PROCESO DE INSTALACIÓN, PRESTARÁ SU CONSENTIMIENTO A LOS TÉRMINOS DE ESTE CONTRATO Y QUEDARÁ VINCULADO POR EL MISMO. SI NO DESEA CONVERTIRSE EN PARTE DE ESTE CONTRATO Y QUEDAR VINCULADO POR TODOS SUS TÉRMINOS Y CONDICIONES, PULSE LA OPCIÓN CORRESPONDIENTE PARA CANCELAR EL PROCESO DE INSTALACIÓN, NO INSTALE NI UTILICE EL SOFTWARE Y DEVUÉLVALO DENTRO DE LOS TREINTA (30) DÍAS SIGUIENTES A LA RECEPCIÓN DEL MISMO (INCLUYENDO TODA LA LITERATURA ADJUNTA, JUNTO CON SUS ENVOLTORIOS) AL LUGAR DONDE LO ADQUIRIÓ. TODAS LAS DEVOLUCIONES ESTARÁN SUJETAS A LAS NORMAS DE DEVOLUCIÓN DE NATIONAL INSTRUMENTS APLICABLES EN CADA MOMENTO.
I accept the License Agreement(s).
I do not accept the License Agreement(s).
<< Back
Next >>
Cancel

Figure 5- 3 National Instruments licence agreement

In the next window, agreement is asked for on two new requirements (MS XML4 e IVI). Both must be accepted in order to continue by pressing Next>>.

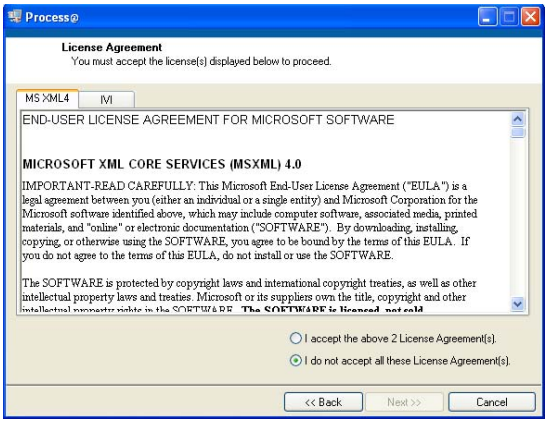
Process@
License Agreement
You must accept the license(s) displayed below to proceed.
MS XML4
IVI
END-USER LICENSE AGREEMENT FOR MICROSOFT SOFTWARE
MICROSOFT XML CORE SERVICES (MSXML) 4.0
IMPORTANT-READ CAREFULLY: This Microsoft End-User License Agreement ("EULA") is a legal agreement between you (either an individual or a single entity) and Microsoft Corporation for the Microsoft software identified above, which may include computer software, associated media, printed materials, and "online" or electronic documentation ("SOFTWARE"). By downloading, installing, copying, or otherwise using the SOFTWARE, you agree to be bound by the terms of this EULA. If you do not agree to the terms of this EULA, do not install or use the SOFTWARE.
The SOFTWARE is protected by copyright laws and international copyright treaties, as well as other intellectual property laws and treaties. Microsoft or its suppliers own the title, copyright and other
I accept the above 2 License Agreement(s).
I do not accept all these License Agreement(s).
<< Back
Next >>
Cancel

Figure 5- 4 Microsoft Licence Agreement

Once the license conditions are accepted, Process@ installation will begin in the next screen (Start Installation). Once completed, a message will appear in the next window. (Figure 5- 6).

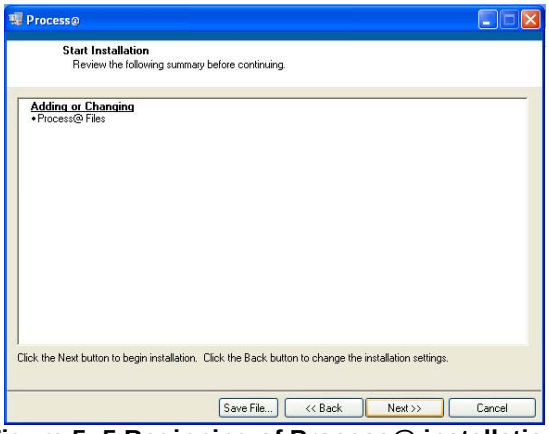

Figure 5- 5 Beginning of Process@ installation

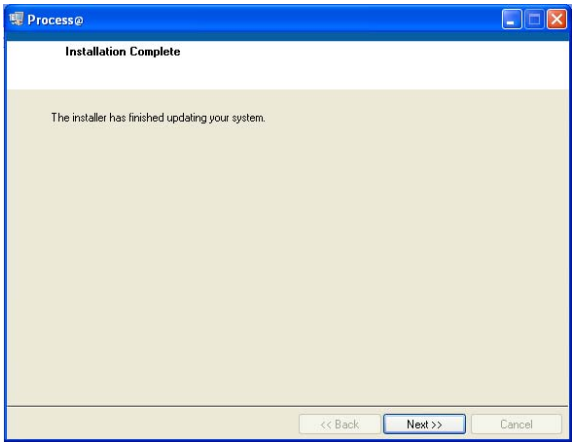

Figure 5- 6 Installation complete

5.2.2.HOW TO INSTALL A PROJECT OR MICROACTIVITY CONFIGURATION

Before finishing the installation of Process@, the program allows for the option to install a PROJECT (see Figure 5- 7).

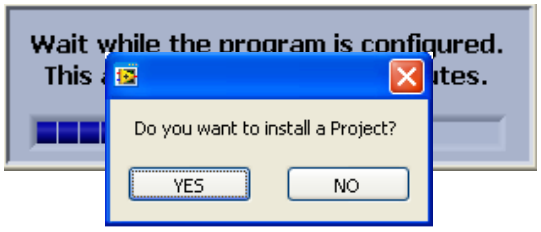

Figure 5- 7 Project Installation Option

If the project is installed, the directory where our project is must be selected: the name of the folder containing our project must appear next to "*Search in*" (see Figure 5- 8). Once done, accept by clicking in "Current Folder", on the right bottom corner.

The name of the Project folder must appear here

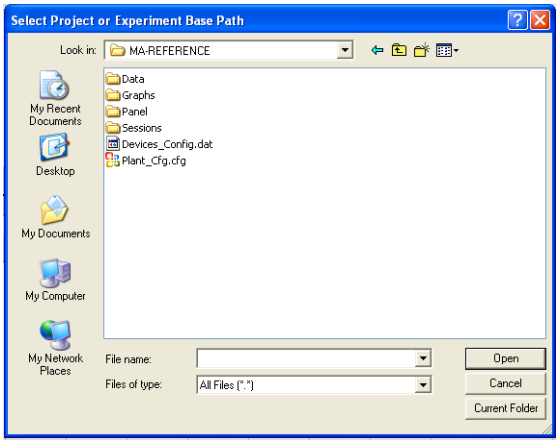

Click on current folder to accept

Figure 5- 8 Project's folder selection

The Project is saved inside the *Plants* folder:

C:\Program files\Process@\Plants

By default, there will be only one project inside Plants but, if the user saves the plant with a different name, a new folder with the new name will also be created in this directory.

The other possible option consists on installing the project after Process@ has been installed by means of an executable file which will copy the project's folder inside *"Plants"*.

5.2.3.HOW LINK THE PC AND THE MICROACTIVITY-REFERENCE

The Microactivity-Reference and the control PC can be linked by Ethernet directly using a cross cable. In addition, they can be connected to a *switch* by using a straight cable, which will allow having one or multiple pieces of equipment connected to the network.

In any case, the right communication parameters must be introduced in the Microactivity and the PC so that they be linked.

5.2.3.1. MA-REF COMMUNICATION PARAMETERS

These parameters must be set in the touch screen's F1 menu under *Communication Setup*. The default parameters are:

These parameters must be the same in the PC an in the MA

MA-Ref COMMUNICATIONS SETUP				
IP ADDRESS	192	168	0	5
IP MASK	255	255	255	0
GATEWAY	192	168	0	1
TCP PORT	1234			

Table 5-1 Microactivity-Reference Communication Parameters

In case of using other communication parameters or connecting it to a local network, make sure the GATEWAY and IP MASK are the same in the Microactivity and in the PC.

5.2.3.2. PC PARAMETERS

The PC communication parameters are configured at the network connection window under the control panel. To do so, follow these steps:

- Right Click on *"Local Network Connection*" and select *Properties*.

- Choose Internet Protocol *(TCP/IP),* click on *Properties* and press OK.

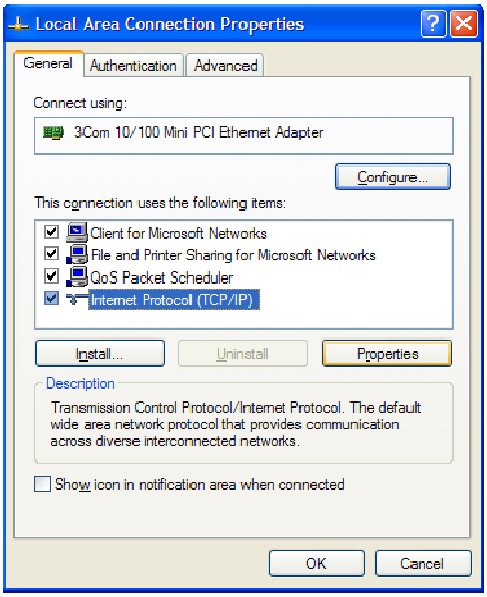

Figure 5- 9 Internet Protocol (TCP/IP)

- Introduce the communication parameters:

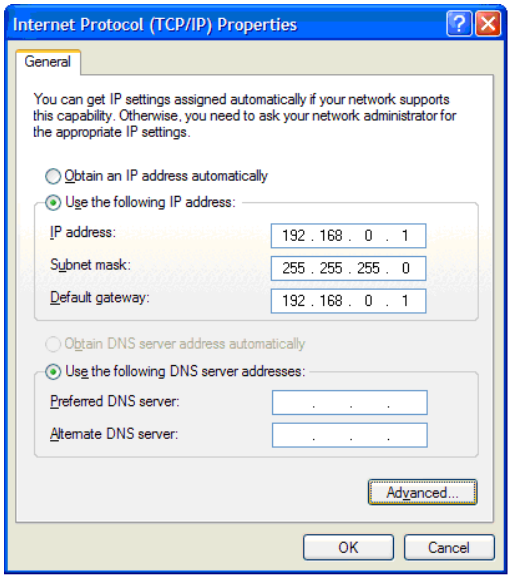
Internet Protocol (TCP/IP) Properties
General
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.
Obtain an IP address automatically
Use the following IP address:
IP address: 192 . 168 . 0 . 1
Subnet mask: 255 . 255 . 255 . 0
Default gateway: 192 . 168 . 0 . 1
Obtain DNS server address automatically
Use the following DNS server addresses:
Preferred DNS server:
Alternate DNS server:
Advanced...
OK
Cancel

Figure 5- 10 Control PC Communication Parameters

These parameters must be the same in the PC an in the MA

PARAMETROS DE COMUNICACIONES DEL PC				
IP ADRESS	192	168	0	1
IP MASK	255	255	255	0
GATEWAY	192	168	0	1

Table 5-2. Control PC communication Parameter values

5.3. DATA ACQUISITION WITH PROCESS@

To open the application, double click on the Process@ icon.

Figure 5- 11

The menu or application manager is the first thing to appear when opening Process@. In the menu bar contains all the tools to manage the application, to control the data acquisition and to manage the other application functions (project, acquisition, panel, Sessions' table, graphs and experiment viewer).

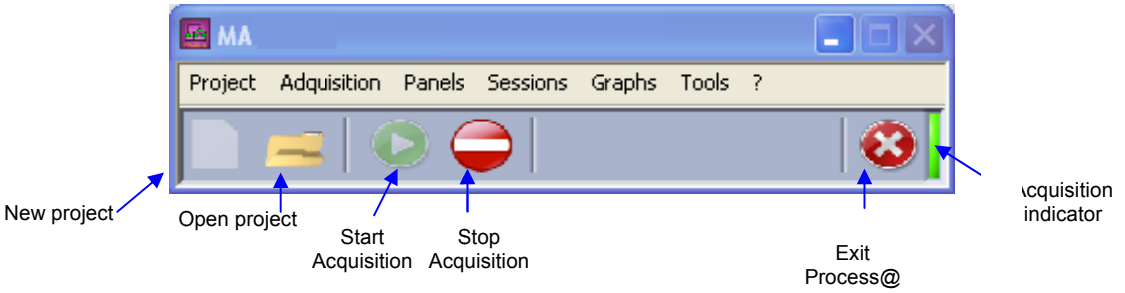

Figure 5- 12. Process@ Main Function Menu

	New project: This function is not available for the user.
	Open project: To choose among saved projects.
	Play: To start data acquisition.
	Stop: To stop data acquisition. When it is stopped, the database is generated.
	Close: To exit the software.
	Data Acquisition Indicator (next to close): Displayed in a light green when acquiring data and in a dark green when not acquiring data.

Table 5-3 Process@ Main Function Menu Icon Description

5.3.1. THE MENU BAR

The name of the Project that is being executed is shown in the screen's upper section. The different software functions are shown in the main function menu:

- *Project*

It allows choosing a Project or Microactivity configuration. By default, there is only one Project for a Microactivity. However, the user can save this project under different names, as will be shown later on, and access them at a later time. This way, for example, if the Microactivity is going to be used to test different catalysts, a different project can be saved for each catalyst so that the experiments made with each one are organized in different projects.

In this menu, the *Communication* function can also be found. This function allows for checking the connectivity between the PC and the Microactivity Reference. To run this test, introduce the Microactivity Reference's IP and click on *Test*. If there is communication, a "*Communication OK"* message will appear.

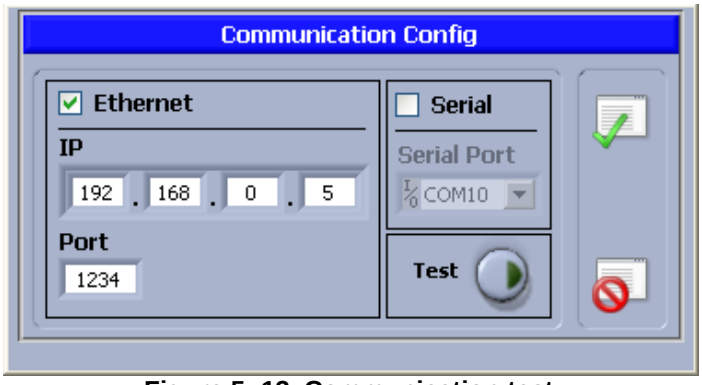

Figure 5- 13. Communication test

- *Acquisition*

When *Acquisition* is selected, a new menu will appear. Select Start or Stop or click on the *PLAY* or *STOP* icons that appear under the tools bar to plot a graph with the acquired data.

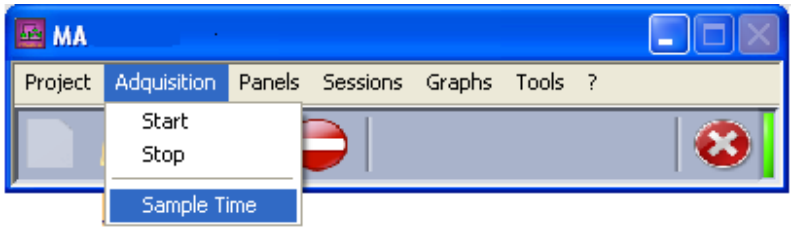

Figure 5- 14. Data acquisition

From this menu, the *Sample Time* can be set. The *Sample Time* determines how often (in seconds) Process@ is to acquire data. The minimum value is 5 seconds. Once the new value is introduced, click *OK*. The size of the data files will depend on the sample time: the shorter the time, the bigger the size of the files will be.

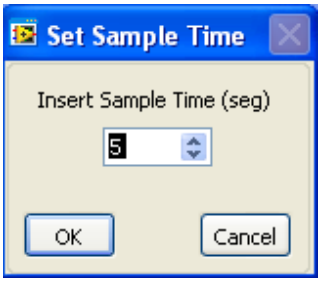

Figure 5- 15 Sample time setting

- *Panels*

The next function, *Panels*, allows the opening of the Microactivity-Reference diagram, in which the flow diagram can be seen, as well as the different devices: controllers, alarms, indicators, etc.

From this menu, the user will also be allowed to change the name of the panel.

- *Sessions*

In this setting, a session table for the experiment can be configured so that each session is a step of the experiment. In this table the times for each session and the devices' parameter values must be specified.

- *Graphs*

In this function, the *Process Value Graphic* and the *Output Control Graphic*, which show the progress of the experiment, can be opened.

- *Experiment Viewer*

Through the experiment viewer the graphs of previous or current experiments can be seen and configured.

5.3.2.THE CONTROL PANEL

The control panel appears in the screen every time a project is opened. If it is closed or hidden, it can be reopened or taken to the front by selecting *Open Panel* in the tools bar.

The variable values can be viewed and modified from the control panel. These different choices can be selected by right clicking the mouse on the different devices.

The *message bar*, at the bottom of the screen, shows messages related to the panel state and its operating mode: *Edit* or *Normal*. The *Edit mode* allows for modifying the panel: moving the icons that represent the different devices, *Rename* and *Show/Hide Parameter Labels*. In normal mode, all these editing options are disabled.

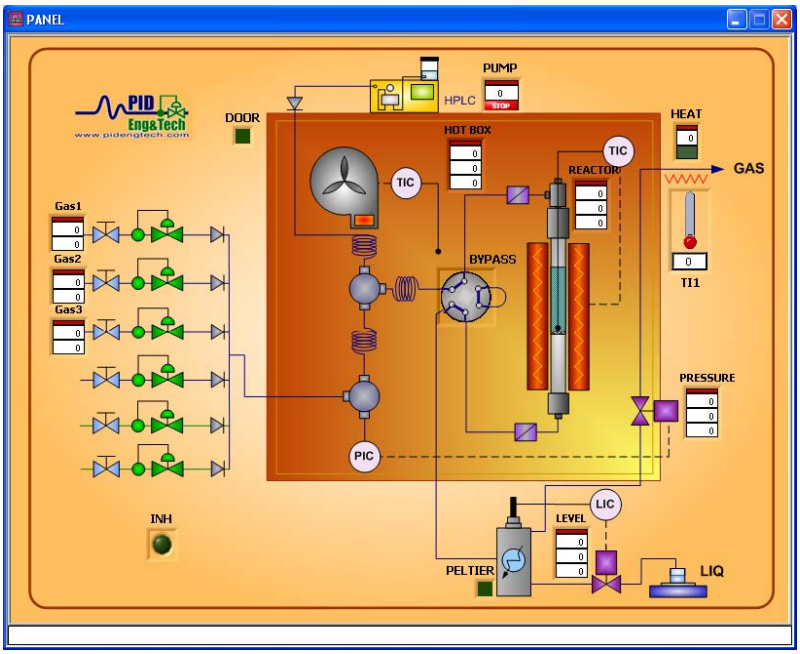

Figure 5- 16 Project panel

NORMAL MODE

In normal mode, **data acquisition** and visualization in real time is possible. When data acquisition starts, the red bar situated on the upper part of the icons that represent each device turns from red to green.

The design of each device in normal mode is allowed by right-clicking on a device.

To go to *Edit Mode*, right-click on the screen and choose *Edit Mode*.

EDIT MODE

In *Edit Mode*, the message bar is shown in yellow and displays a message indicating that it is in *Edit Mode*. The Edit Mode is also indicated in the panel's upper section next to the name.

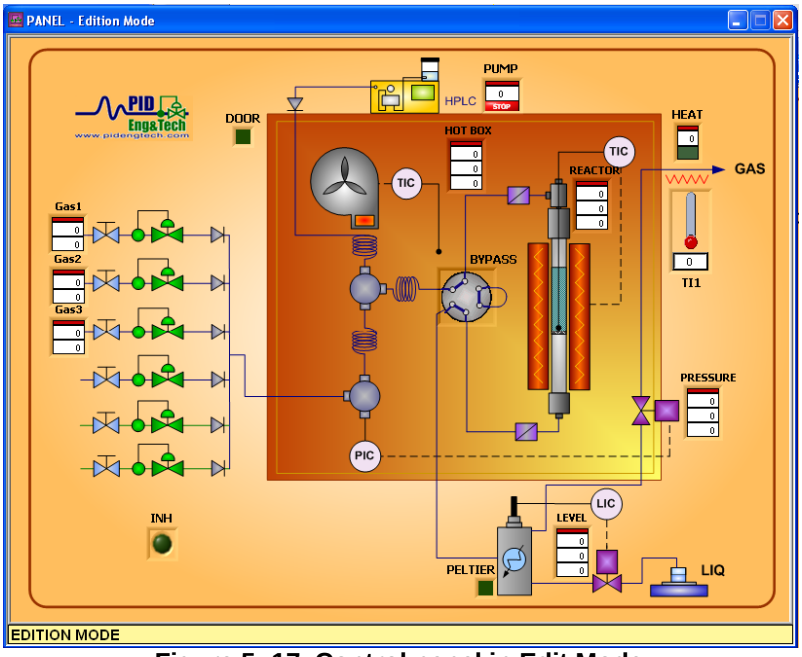

Figure 5- 17. Control panel in Edit Mode

When the program is in *Edit Mode*, **the acquisition of data stops.** Each device will show the last read value. To refresh a value in Edit Mode, click twice on the bar situated on the top of each icon. The acquisition of data is disabled until the program is returned to the *Normal Mode*.

This mode allows for moving the device's icons. To do so, place the mouse on top of an icon and drag it while left-clicking. The names move together with the icons as they are dragged. Also, the name of the icon can be moved around the icons.

When an icon is moved, an asterisk appears on the upper bar of the panel and the message bar, on the bottom of the control panel, turns to light red, indicating that a change has been made and needs to be changed (See Figure 5-18).

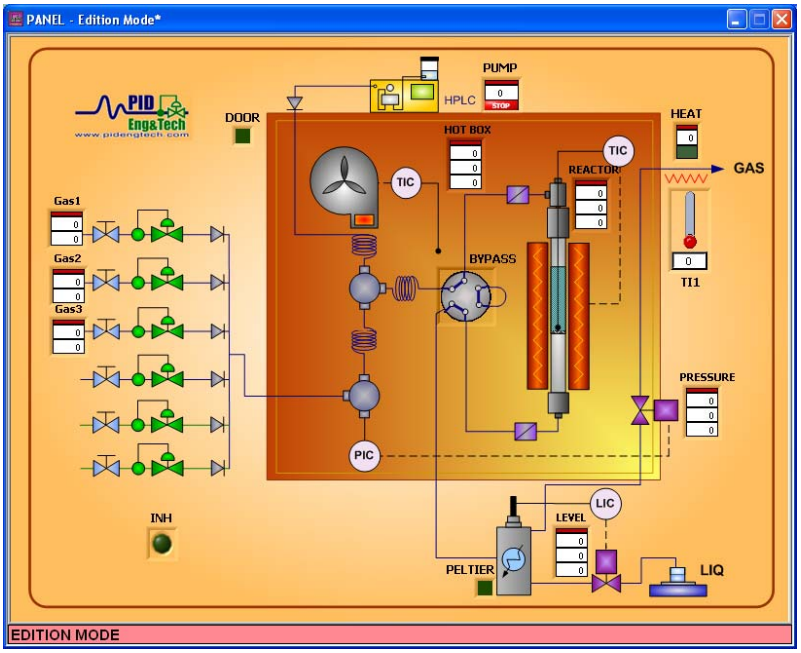

Figure 5- 18

In the menu screen displayed after right-clicking on the mouse, any changes made on the panel (*Save Panel*) can be saved. It also allows to exit the Edit Mode (*Finish Edit Mode*).

By right-clicking over one of the devices, a menu will appear with the following options:

- **Config:** By clicking on *Config*, a submenu which allows for the possibility to modify values or to configure the device is accessed (controller parameters, turn on or turn off devices, etc). The device will turn green after the value has been changed. The new value is automatically sent to the Microactivity-Reference unit.

- **To see the device's parameters** names (process value, set value, output control) by choosing *Show/Hide Parameters*.

- **Rename** the device.

If the *Edit Mode* while the equipment is acquiring data is activated, the variable values will not be actualized any longer and the values from the last reading in normal mode are kept. These values will not change until exiting the Edit Mode and press START acquiring again.

It is possible to see the current value of a variable even when Process@ is not acquiring data: to do so, double click on the red bar of a device's icon. The icon will turn green and the value of the variable will be actualized once.

DESCRIPTION OF THE CONTROL PANEL'S DEVICES

The different devices are represented by different displays depending of whether is a MFC, a TOHO controller, an alarm, an ON-OFF device (bypass, door, Peltier cell, auxiliary buttons for the touch screen: S1, S2, S3), a heated line (HEAT), a pump, etc.

All devices are displayed with their names, by default, above the drawing. The user can modify the name of the device as explained before (*Edit Mode)*.

By right-clicking one of the devices, a submenu appears with the choices to show the variables' names or to design the device.

The devices can be designed in either the *Normal Mode* or the *Edit Mode*. In both cases, the value that is input in the device is sent to the machine.

a) MASS FLOW CONTROLLERS

The controllers have a bar in the upper section that fluctuates between green and red, indicating whether the machine is acquiring new data or not. This also works as an alarm indicator: when the alarm goes off, the indicator starts to flash.



Device name
Acquisition/alarm indicator
Set point
Process value

Figure 5- 19. MFC's icon

The upper window shows the *set point* assigned to that variable and, underneath this value, the real value or process value is displayed. By right-clicking over the device, the *Design* function which allows for the modification of the gas flow is accessed (in ml/min).

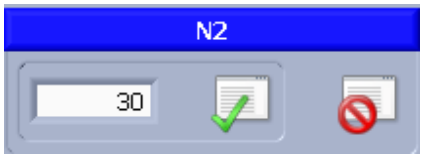

Figure 5- 20 MFC Design window

b) CONTROLLLERS

The display representing the TOHO controllers, placed in the unit's front panel (Reactor TEMPERATURE, HOT BOX TEMPERATURE, PRESSURE, LEVEL and auxiliary controllers: AUX1, AUX2, if they have been installed), has three cells: one where the set point is shown, a second one for the process value and a third cell for control output.



Device name
Acquisition/alarm indicator
Set point
Process value
Output control signal

Figura 1. Controller's icon

In order to modify the controller's parameters from the panel, right-click on the icon. The controller parameters that can be modified are the following:

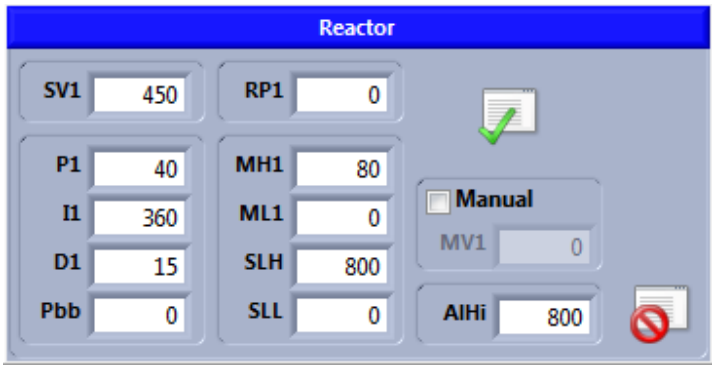

To operate in manual mode, tick on *Manual* and introduce an output control (MV1)

Figure 5- 21 Design of a controller window

The set value and the controller ramp can be modified in the upper part of the display. Under these values, some additional parameters are shown:

CONTROLLER'S PARAMETERS	
SV1	*Set value*
RP1	Ramping time
P1	Proportional Band
I1	Integral time
D1	Derivative time
Pbb	Manual reset
MH1	Upper limit of the output control
ML1	Lower limit of the output control
SLH	High limit set value
SLL	Low limit set value
MV1	Output signal
AlHi	High alarm

Table 5-1. Design parameters of the controllers

The controller can operate in automatic mode or in manual mode. In order to work in manual mode, activate the option in the *Design* window of the controller (see Fig 5-20) or "1" in the parameter *MD* in the session's table (see 5.3.4.1).

In manual mode, an output control always must be introduced in the cell *MV1* of the Design window or in the session's table.

The upper limit of the alarm (AlHi, which is the same as the controller's E1H) can also be introduced from the Design window. This value will trigger the configured alarms (see 4.5.2).

c) ON-OFF DEVICES

These displays are associated to the unit's ON-OFF devices. These are devices which only have two options: either ON or OFF. This is the case for the door, the bypass, the Peltier cell for the liquid-gas separator and the auxiliary buttons S1, S2 and S3 on the touch screen.

ON-OFF DEVICES	
Door	ON Open OFF Close
Bypass	ON Activate OFF Deactivate
Peltier[1]	ON Activate OFF Deactivate
S1, S2, S3	ON Activate OFF Deactivate

Table 5-2 Configuration of ON-OFF devices

When configuring these parameters at the sessions' table, ON is equal to 1 and OFF is equal to 0.

These displays look like a clear green button when they are ON and a darker green button when they are OFF.

Figure 5- 22

The design window for these displays allows for choosing between both options.

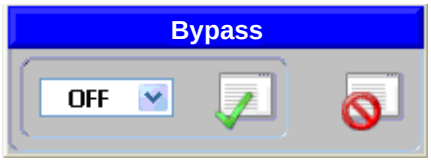

Figure 5- 23 ON-OFF device design window

d) INDICATORS

In this type of displays, a value is shown but it cannot be designed by the software, since they are just indicators. By right-clicking over the display, it can be renamed.

Figure 5- 24

e) HEAT (GC LINE)

This device allows for visualizing the control output on the upper window and seeing its state (On with a light green and OFF with a darker green) on the lower part.



Figure 5- 25

[1] The output control and the HEAT-COOL mode must be configured in the touch screen

As explained in 4.5.2, *Main Menu*, HEAT is configured in the touch screen, in *MISCELLANEOUS SETUP*. The operation mode can only be selected in this menu, by pressing the button *HEATER MANUAL,* and change it to *HEATER AUTO.*

If it is in manual mode, it will be necessary to introduce an output control in the design window or in the sessions' table (parameter M1C) whereas, to operate in automatic mode, a set point must be introduced in the touch screen of the Microactivity-Reference (see 4.5.2). To configure this device, proceed as follows:

- Select the operation mode in the menu *MISCELLANEOUS SETUP* of the *TOUCH SCREEN*.
- If *HEATER MANUAL* has been selected, it is possible to activate or deactivate it from the sessions' table (introducing 1 or 0, respectively, in the parameter M1O) or from the control panel (*ON* or *OFF*). The output control (0-100%) can also be introduced from the table (parameter M1C) or from the control panel.
- If an automatic control is preferred, select *HEATER AUTO* in the menu *MISCELLANEOUS SETUP* and introduce a set point in the touch screen (the output control is not required now). To use this mode it is necessary to connect a thermocouple in the TI1 of the back panel. In this case, HEAT can only be activated and deactivated from the software. The set point must be introduced in the touch screen.

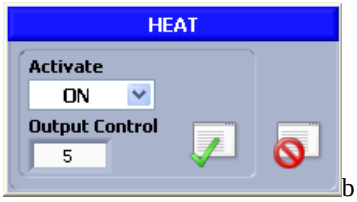

b

Figure 5- 26 Heat design window

f) ALARM

They are circular displays that inform about the system alarm state. When the alarm is activated, the display changes from green to red.

g) PUMP

Under *pump*, the liquid flow and activation (RUN) and deactivation (STOP) of the pump is allowed.

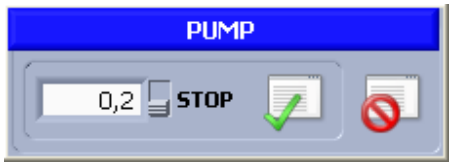

Figure 5- 27 Pump design control window

h) SCALE

The *Scale Design* option allows resetting the scale to zero by pressing on the red button of the window.

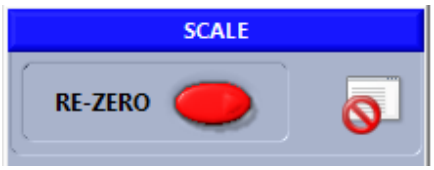

Figure 5- 28 Scale *rezero* window

i) CHROMATOGRAPH

The Microactivity Reference unit is prepared to be connected to a gas chromatograph by actuating the sampling injection valve to start the analysis (see point 5.7 CONNECTION TO A GAS CHROMATOGRAPH).

With Process@ it is possible to activate a cycle to close, every given time, the electrical circuit that connects to GC during one second. The user can configure the cycle time (how often the circuit is closed) in the chromatograph design window.

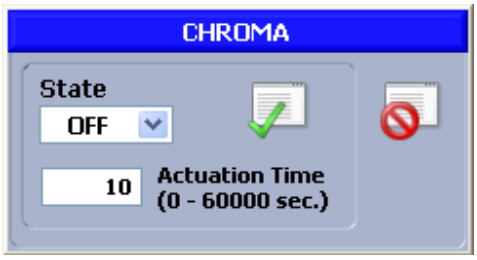

Figure 5- 29 Chromatograph design window

5.3.3.CONTROL GRAPHS

The graphs created in real time by Process@ show the measured values (*Process Value Graph*), and the output control signal (*Output Control Graph*).

To see the graphs, choose *Graphs* in the tool bar and select either *Process Value Graph* or *Control Value Graph*. During an experiment execution, they can be closed and reopened again by using this menu.

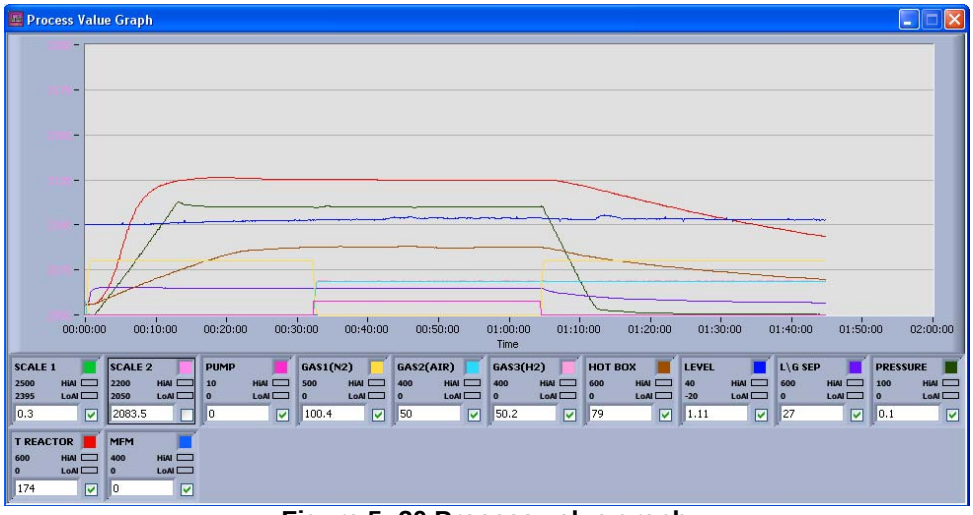

Figure 5- 30 Process value graph

The displays representing the devices that are in the panel can be seen in the screen's lower section. In each display the following characteristics of each variable are shown: device's name, its color in the graphic, two values indicating the device's range, two alarm gauges or indicators (high and low) and a tick that hides or shows the graph when clicked on. In the lower section, the last real value read is shown in a white cell.

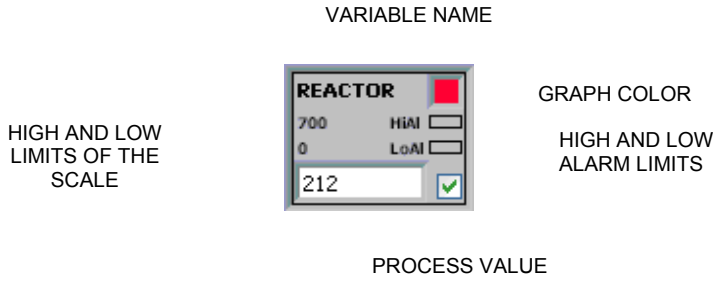

Figure 5- 31. Variable's Configuration

To configure the scale, the color and the alarm values, right-click over the desired control and select the *Config* option. A window will open with the device name in which the following parameters can be selected:

- **Graph's scale**: to set the higher and lower value of the variable's graph.
- **High and low alarm value:** These values don't affect the process. They just lit a red indicator in the graphic control panel to indicate that a certain value has been surpassed.
- **Graph's color:** By clicking on the colored window, a color palette is opened.
- **Graph's display:** Click on the tick to hide or show the graph.

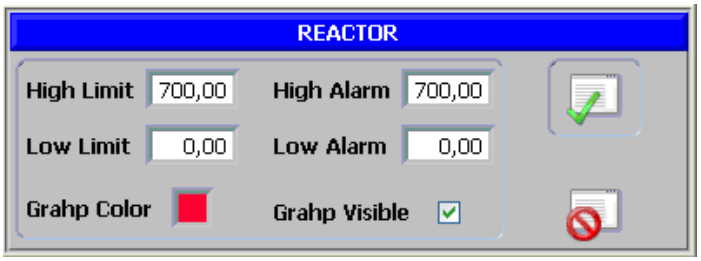

Figure 5- 32. Graph configuration for a variable (Reactor Temperature)

Once the values for this device have been set, click on *OK* to save the changes.

To change from one variable to another, click on the different displays. The scale shown in the y-axis corresponds to the graph whose display on the lower part shows a black border.

By double clicking on a variable's display, the graphs can be hidden.

To configure the *Control Value Graph* values, follow the same steps. In that case, the control output percentage will be shown. This is why, by default, the Y-axis will show a range from 0 to 100.

Figure 5- 33 Output control graphic

To modify the X-axle, right-click on the graphic's background or on one of the time values, and then select *Set Time Scale*. This option allows choosing the visualization time with a maximum of 24 hours (to see previous values, use the EXPERIMENT VIEWER).

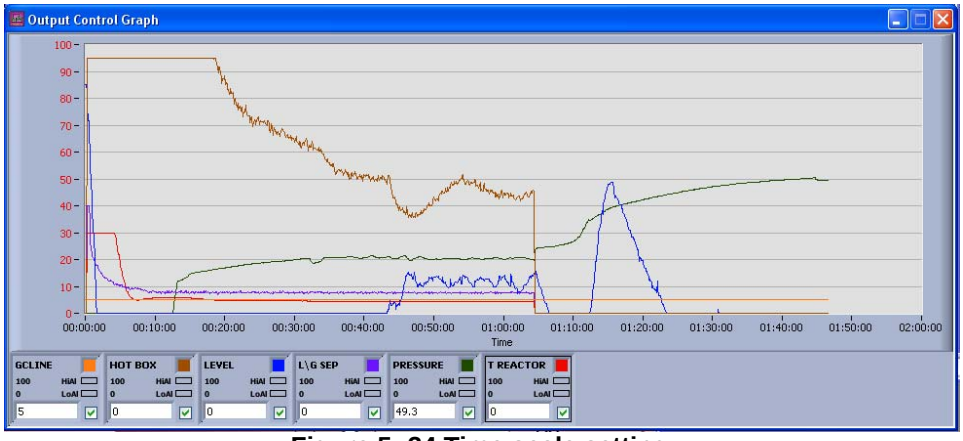

Figure 5- 34 Time scale setting

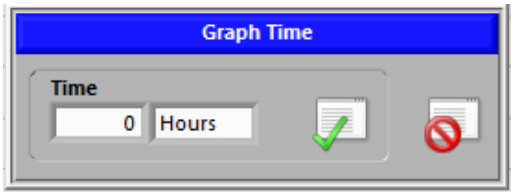

Figure 5- 35 Selection of hours or minutes on the time scale

5.3.4.SESSIONS' TABLES DESCRIPTION

By clicking on *'Sessions''*, *'Config Sessions'…'*, a window with a sessions' table for our experiment will appear. All parameters and the experiment's time must be introduced in this window.

The *Sessions Table* tool bar consists of the following options:

- *Load Table:* to load a session table that has been created previously.
- *Save Table*: to save a session table.
- *Print*: to print the session table
- *Clean Table*: to clear all the values in the table.
- *Exit*: to exit the session table menu.

5.3.4.1. How to configure a sessions' table

This table is divided into five zones:

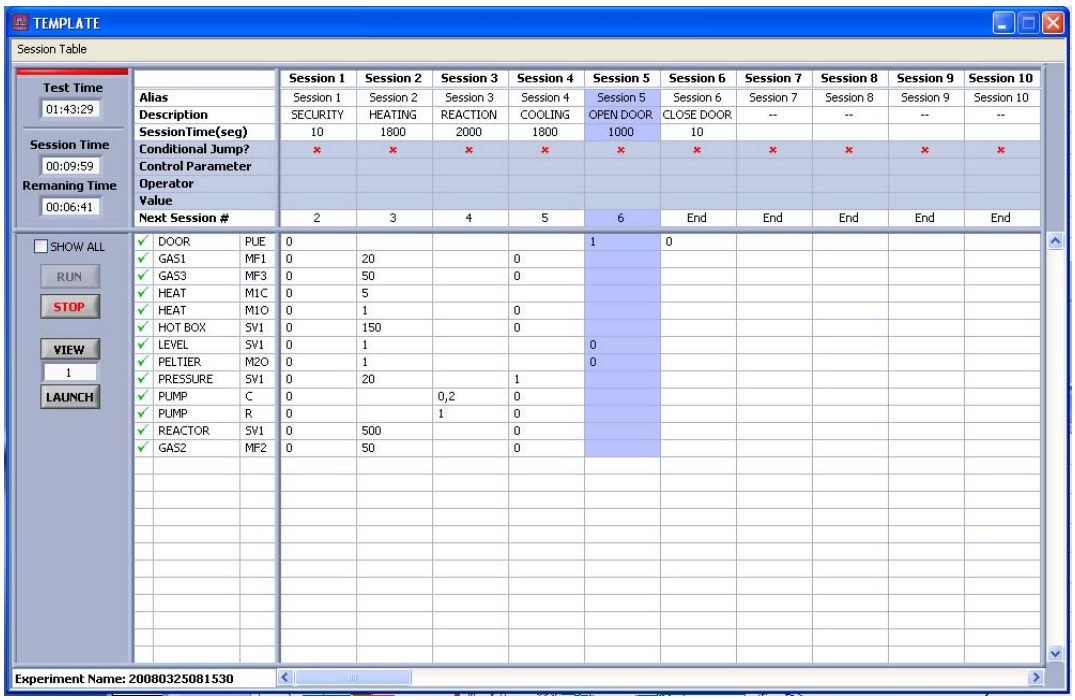

		Session 1	Session 2	Session 3	Session 4	Session 5	Session 6	Session 7	Session 8	Session 9	Session 10
Alias		Session 1	Session 2	Session 3	Session 4	Session 5	Session 6	Session 7	Session 8	Session 9	Session 10
Description		SECURITY	HEATING	REACTION	COOLING	OPEN DOOR	CLOSE DOOR	--	--	--	--
SessionTime(seg)		10	1800	2000	1800	1000	10				
Conditional Jump?		×	×	×	×	×	×	×	×	×	×
Control Parameter											
Operator											
Value											
Next Session #		2	3	4	5	6	End	End	End	End	End
✓	DOOR	PUE	0				1	0				
✓	GAS1	MF1	0	20		0						
✓	GAS3	MF3	0	50		0						
✓	HEAT	M1C	0	5								
✓	HEAT	M1O	0	1		0						
✓	HOT BOX	SV1	0	150		0						
✓	LEVEL	SV1	0	1			0					
✓	PELTIER	M2O	0	1			0					
✓	PRESSURE	SV1	0	20		1						
✓	PUMP	C	0		0,2	0						
✓	PUMP	R	0		1	0						
✓	REACTOR	SV1	0	500		0						
✓	GAS2	MF2	0	50		0						

Name of the experiment

Figure 5- 36. Sessions' table

1. ***Time:*** In this area, the total experiment time, the consumed session time and the session time remaining can be set. In the upper section, there is an indicator whose normal mode is OFF and that will turn red when the door is opened or when the inhibition, which is activated in case of alarm, goes off. When the inhibition is activated, the PC will stop sending values to the Microactivity and the session time will stop at that point.

2. ***Sessions' Control:*** In this area the buttons that manage the session are displayed:

   - *Show All*: to display all the device parameters. The previously hidden parameters can be chosen from the whole list by clicking on them so that they remain in the shorter list. Choose among all the parameters the ones to work with: to do this, it is necessary to dropdown the whole list. The icon next to them will turn from red to green. When pressing SHOW ALL again, only the parameters with the green icon will remain. The rest will be hidden.

   - *Run/Stop*: to start/stop the session. When clicking on *Run*, the application starts sending sessions from session number one. The **number of the experiment** will appear then on the left bottom corner of the window.

     To stop data acquisition, click on the STOP icon in the tools bar or in the Acquisition menu. Every time the acquisition stops, a file named after the experiment will be saved.

   - *View*: By introducing the number of a session in VIEW, the scroll bar will move in order to bring it to the middle of the table.

   - *Launch*: It launches the session entered in the cell above the button.

3. ***Sessions' Table:*** The session name and time can be introduced in this area. The following options can be configured:

   - *Alias:* Session name.

   - *Description:* Short session description (start, stop, etc)

   - *Session Duration:* In seconds.

   - *Next Session #:* Number of the session with which the actual session wants to be linked. **In order to connect two sessions', both sessions' need to have a time value**.

4. ***Device Table*:** In this area, the parameters of the Microactivity-Reference devices are displayed. When opened, only the main parameters for each device are shown but all the parameters can be displayed by pressing on *Show All*.

   By clicking on *Show All*, all the designable parameters are displayed. The ones with a red cross (×) don't appear in the short display (when *Show all* is deactivated). Select any parameter by clicking on its name so that they are activated in the table. The cross will turn into a green tick (✓), which indicates that the parameter will be shown even after the *Show All* has been turned off.

5. ***Data Table***: In this area, introduce the data that is going to be written on the devices for each session. Data can only be input in a session in the session time has been filled out. To move from one parameter to another, use the arrow keys of the keyboard.

   When the session execution has been launched, the current session can be identified because its column will be displayed in blue. If there aren't any blue columns, it means there is not any session being executed.

The input data must be among the ranges allowed by the devices parameters. For example, the ON-OFF devices only accept either a 1 or a 0 for ON or OFF. In the same manner, for the controller's output exit, enter values between 0 and 100. In the following table, the different parameters that can be configured are resumed:

PARAMETERS		
ON/OFF		
Door	Open/close the door	1 Open 0 Close
Bypass	Activate/deactivate bypass	1 Activated 0 Deactivated
Peltier	Activate/deactivate bypass	1 Activated 0 Deactivated
S1,S2,S3	Activate/deactivate bypass	1 Activated 0 Deactivated
CONTROLLERS		
REACTOR TEMPERATURE		
SV1	*Set value*	Set Value (ºC)
RP1	*Set value ramping time*	Slope for the set point (ºC/min)
P1	Proportional Band	Proportional Band
I1	Integral time	Integral time
D1	Derivative time	Derivative time
Pbb	Manual reset	0-100%
MD	Control mode	0 Automatic 1 Manual
MH1	Upper limit of the output control	0-100%
ML1	Lower limit of the output control	0-100%
SLH	Set value's upper limit	Set value's upper limit
SLL	Set value's lower limit	Set value's lower limit
MV1	Output control % (in manual mode)	0-100%
E1H	Alarm high limit	Alarm high limit (ºC)
HOT BOX		
SV1	*Set value*	Set Value (ºC)
RP1	*Set value ramping time*	Slope for the set point (ºC/min)
P1	Proportional Band	Proportional Band
I1	Integral time	Integral time
D1	Derivative time	Derivative time
Pbb	Manual reset	0-100%
MD	Control mode	0 Automatic 1 Manual
MH1	Upper limit of the output control	0-100%
ML1	Lower limit of the output control	0-100%
SLH	Set value's upper limit	Set value's upper limit
SLL	Set value's lower limit	Set value's lower limit
MV1	Output control % (in manual mode)	0-100%
E1H	Alarm high limit	Alarm high limit (ºC)
PRESSURE		
SV1	*Set value*	Set Value (bar)
RP1	*Set value ramping time*	Slope for the set point (bar/min)
P1	Proportional Band	Proportional Band
I1	Integral time	Integral time
D1	Derivative time	Derivative time
Pbb	Manual reset	0-100%
MD	Control mode	0 Automatic 1 Manual
MH1	Upper limit of the output control	0-100%
ML1	Lower limit of the output control	0-100%
SLH	Set value's upper limit	Set value's upper limit
SLL	Set value's lower limit	Set value's lower limit
MV1	Output control % (in manual mode)	0-100%
E1H	Alarm high limit	Alarm high limit (bar)
LEVEL		
SV1	*Set value*	Set Value (ml)
RP1	*Set value ramping time*	Slope for the set point (ml/min)

P1	Proportional Band	Proportional Band
I1	Integral time	Integral time
D1	Derivative time	Derivative time
Pbb	Manual reset	0-100%
MD	Control mode	0 Automatic 1 Manual
MH1	Upper limit of the output control	0-100%
ML1	Lower limit of the output control	0-100%
SLH	Set value's upper limit	Set value's upper limit
SLL	Set value's lower limit	Set value's lower limit
MV1	Output control % (in manual mode)	0-100%
E1H	Alarm higher limit	Alarm higher limit (ºC)
HEAT		
M1C	Output control	0-100%
M1O	Activate/Deactivate Heat	1 Activate 0 Deactivate
MASS FLOW CONTROLLERS		
MF#	Set point for gas nº #	Gas flow in ml/min
PUMP		
R	Turn on or off the pump	1 Turn on 0 Turn off
C	Set point for the pump	Liquids flow, in ml/min
SCALE		
Z	"*Rezero*"	1 Set zero in the scale
CHROMATOGRAPH		
XON	Chromatography cycle	1 Activated 0 Deactivated
XT0	Time for chromatograpy cycle	Time between two analysis

Table 5-6. Values of the parameters

5.3.4.2. How to Save a Session

The session menu table provides the option to save sessions (*Save Table*), to open saved sessions (*Load Table*) and to delete all data (*Clean Table*.)

To save an experiment's session table in order to use it later on, open the Sessions' Table menu and click on *Save Table*. A new window will pop up with the name of other previously saved sessions'.

To choose a name for a new session, click on *New File* and choose *Accept*. A new window will then appear where the new name can be introduced

.

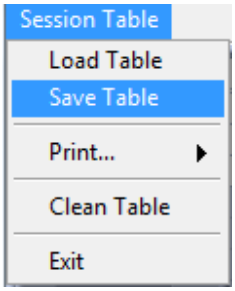

Figure 5- 36 Session table menu

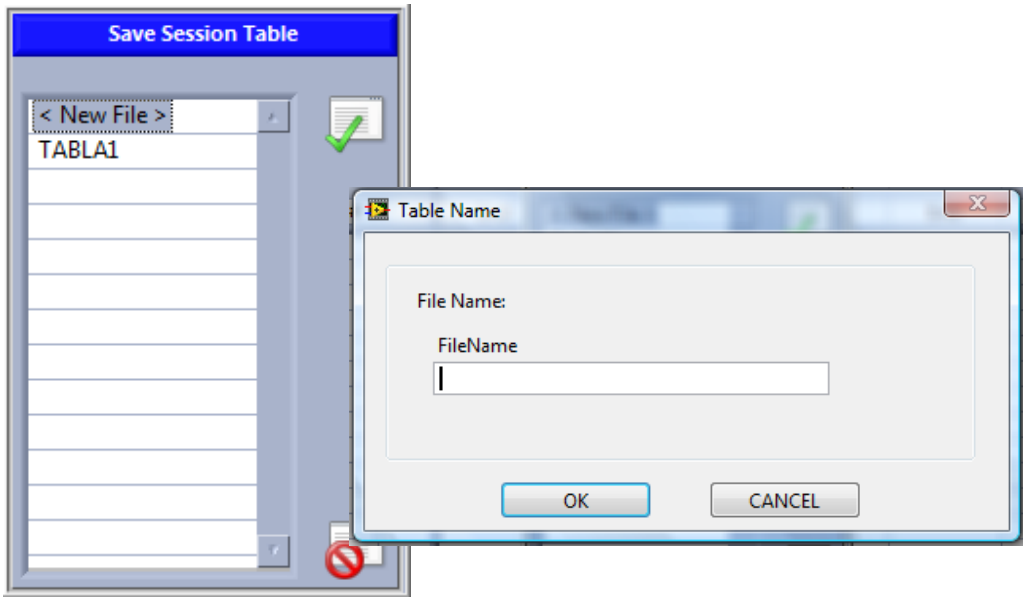

Figure 5- 37 Saving a sessions' table

5.3.4.3. How to open a saved sessions' table

When a sessions' table is opened, the field for the different values appear empty. If preferred, open sessions' table that have been saved previously. To do so, click on Session *Table* and then select *Load Table*. When doing this, a list of previously saved sessions' appears.

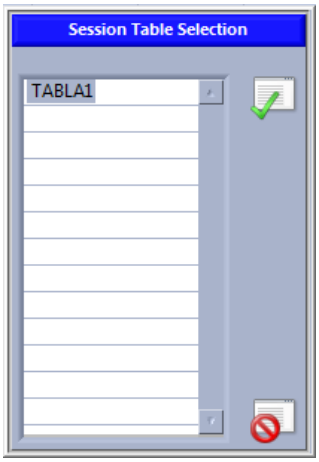

Figure 5- 38 Loading a sessions' table

5.3.4.4. How to print a Sessions' table

Print a sessions' table by clicking on *Print* in the sessions' table menu. Printing is allowed in two different ways: to print on a configured printer (*Print to printer*) or to a file in *.htlm* format (*Print to File.*)

5.3. HOW TO CARRY OUT AN EXPERIMENT

To carry out an experiment, remember to follow these steps:

- First, check Process@ communication parameters. Make a *Communication test* (*Project → Communication*) to check whether Microactivity and PC are correctly linked.

- Secondly, in the function menu, select *Microactivity project* under *Open Project.* The window with the flow diagram of the unit shows on the screen. If any changes on the panel are made, save the changes by clicking on *Save Panel,* in the same menu which is displayed by right-clicking.

- If the unit is going to be operated without sessions, introduce all the values into the touch screen and into the controllers. The progress of the experiment can be followed by pressing the start icon, in order to acquire data.

- If the experiment is going to be carried out with a sessions' table, as the example shown in Fig. 5-36, it is advisable to follow the following recommendations:

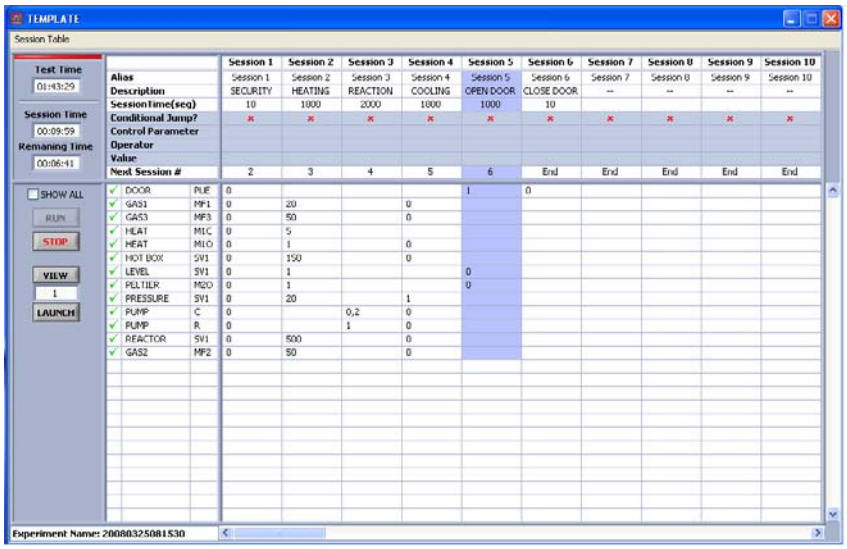
TEMPLATE
Session Table
Test Time
01:43:29
Session Time
00:09:59
Remaning Time
00:06:41
SHOW ALL
RUN
STOP
VIEW
1
LAUNCH
Session 1 Session 2 Session 3 Session 4 Session 5 Session 6 Session 7 Session 8 Session 9 Session 10
Alias Session 1 Session 2 Session 3 Session 4 Session 5 Session 6 Session 7 Session 8 Session 9 Session 10
Description SECURITY HEATING REACTION COOLING OPEN DOOR CLOSE DOOR
SessionTime(seg) 10 1800 2000 1800 1000 10
Conditional Jump?
Control Parameter
Operator
Value
Next Session # 2 3 4 5 6 End End End End End
DOOR PUE 0 1 0
GAS1 MP1 0 20 0
GAS3 MP3 0 50 0
HEAT M1C 0 5
HEAT M1O 0 1 0
HOT BOX SV1 0 150 0
LEVEL SV1 0 1 0
PELTIER M2O 0 1 0
PRESSURE SV1 0 20 1
PUMP C 0 0,2 0
PUMP R 0 1 0
REACTOR SV1 0 500 0
GAS2 MP2 0 50 0
Experiment Name: 20080325081530

Figure 5- 39b Experiment file

i. An initial session corresponds to the secure shutdown of the system.
ii. The second session takes the system to the operating conditions under which the experiment is to be performed (e.g.: heat the reactor up to operating temperature). The duration of this session is to be sufficient to allow the system to attain stable operating conditions, which may be carried out by setting long session times or else by using the condition evaluation function.
iii. Subsequent sessions correspond to the operating conditions in which catalytic measurements are to be taken.
iv. The final two sessions correspond to sessions involving the secure shutdown of the system, with the last one being, for example, the same as the session programmed as no. 1. In order to fasten the cooling of the system, a session for opening the door when the temperature of the reactor is low enough (<250ºC) can be configured.

- Configure the graphics (colors, scales, etc).
- Launch sessions': Click on RUN in the sessions' table to begin the first session. To start from another session, introduce the number of the session and click on Launch.
- When the last session is finished, Process@ will stop acquiring data.

5.4. DATA PROCESSING

When data acquisition is stopped (by clicking on the STOP icon) **or the last session ends**, **a data file is generated**. The name of this file is the same that appears on the left bottom corner of the session table (see figure 5-36).

The experiment data can be accessed in two different ways: either through the experiment viewer (see point 5.5 of this chapter) or by accessing the data folder of each project as explained next.

To access the data saved on previous experiments, go to the project's folder which can be found in the following directory:

C:\Program Files\Process@\Plants

In this directory, find the Microactivity project's folder.

Find the experiment's results inside the Project's folder. In this folder, new subfolders are created with the experiments. **An experiment file is generated every time data acquisition is stopped.**

The experiments are saved with the date, in a universal format, when they were performed:

'YYYYMMDDhhmmss'

where:

YYYY: Year when the experiment was performed
MM: Month
DD: Day
hh: The experiment's starting hour
mm: Minutes
ss: Seconds

In this way, the experiments are organized with the oldest experiments at the top.

Inside an experiment's folder, the following files can be found:

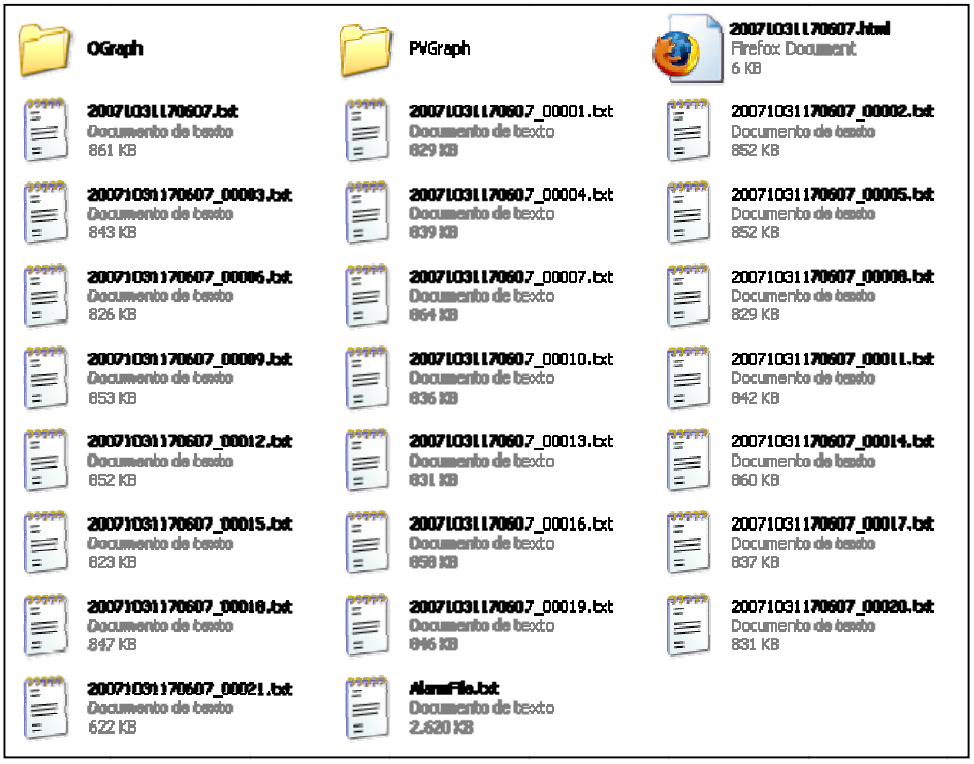

Figure 5- 40 Experiment file

In the image above, an example from the experiment folder content is shown: there are two folders containing the graphics data, *txt* files in ASCII format with the data acquired during the experiment, the alarms that have gone off, and an *html* file where the sessions' tables are kept.

Files with a '.txt' extension are files in the ASCII format with columns separated by tabs. These files can be opened with any text editor and with most spreadsheet programs, which allows designing graphics with the data recorded. These type of programs because they allow easy data processing.

There is also a file (*Alarm File.txt*) in which all alarms are registered in case they have gone off during the experiment.

The first *txt* file is named after the experiment name (the same as the folder's name). As files are being created, these files are named with the same name plus an added number which indicates the order in which they were created. This way, as with the experiments, the files are being placed in order as they are created. To change the name of an experiment, **it is advisable to do it through the experiment viewer, whose menu allows for it.**

Finally, if a sessions' table in the experiment is saved, a HTML file is created with the data from the table. This file can be opened with any Internet browser. It can be also opened with a text file or a spreadsheet program that supports HTML files.

5.5. EXPERIMENT VIEWER

The experiment viewer is the last menu in the tools bar. It allows for recovering data and graphs from prior or current experiments. From here, visualizing, renaming and configuring the graphs are possible as well as making a filter of all the acquired data.

When opening the experiment viewer, a window with the process value and output control graphs pops up (see figure 5-40). The data of each experiment is organized in three different sheets: GRAPHS, DATA and ERRORS.

There is also a ZOOM bar by means of which varying the size of the graphs or obtaining the exact value of a variable is allowed.

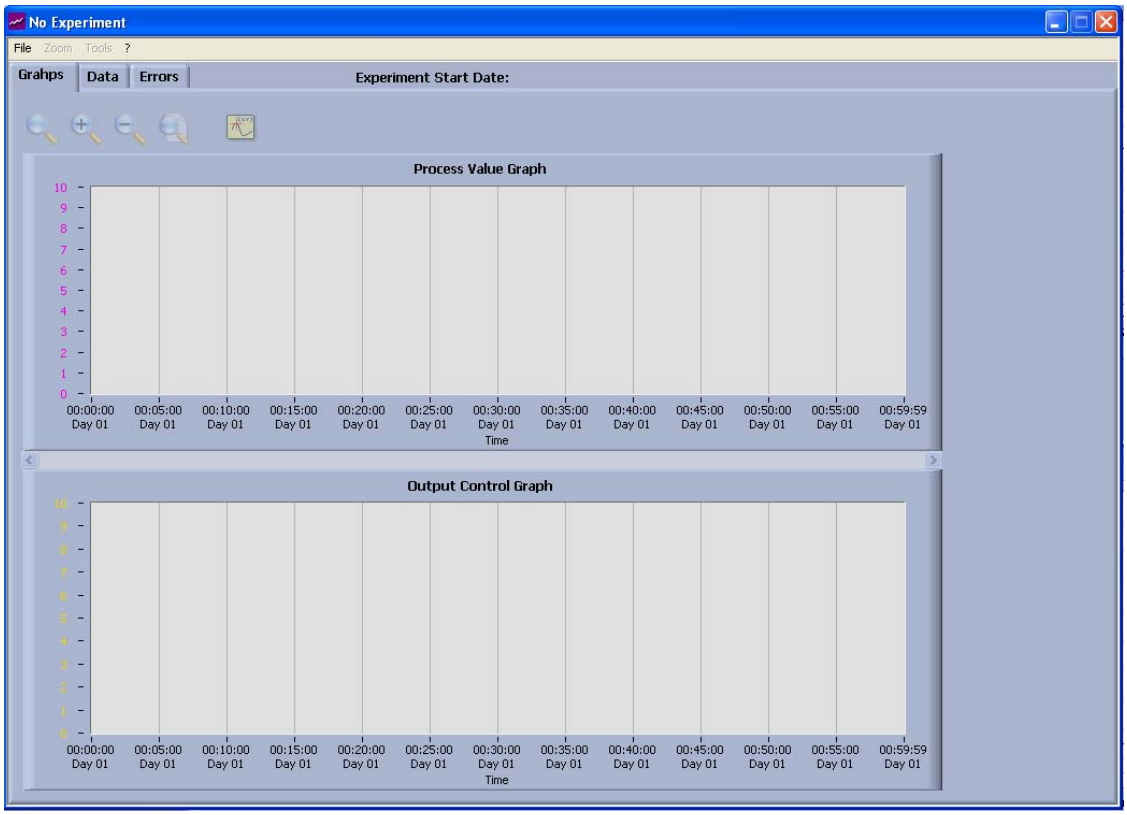

Figure 5- 41 Initial window of the experiment viewer

5.5.1. How to open an experiment

To open an experiment, enter the File menu and select *Open Experiment* (Ctrl+O).

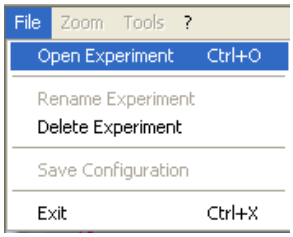

Figure 5- 42 File menu

Next, a new window showing the content of the folder Plants will be shown.

C:\Program Files\Process@\Plants

As it has been said before, by default, there will be only one Project inside this folder. However, if the user renames the project with other names, they will appear inside this window.

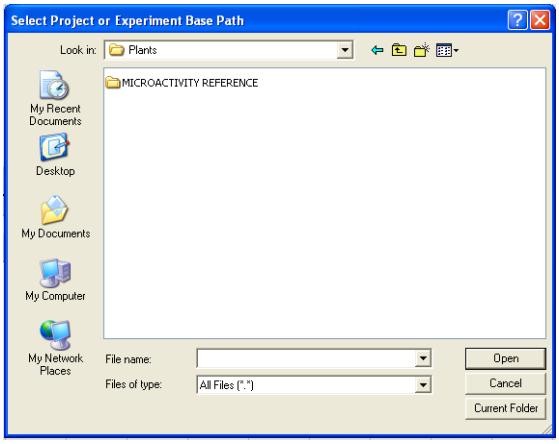

Figure 5- 43. Project selection window

In order to see an experiment, choose the folder containing it. The name of this folder must appear in the upper cell, next to "*Look in*". To accept, click on "*Current folder*".

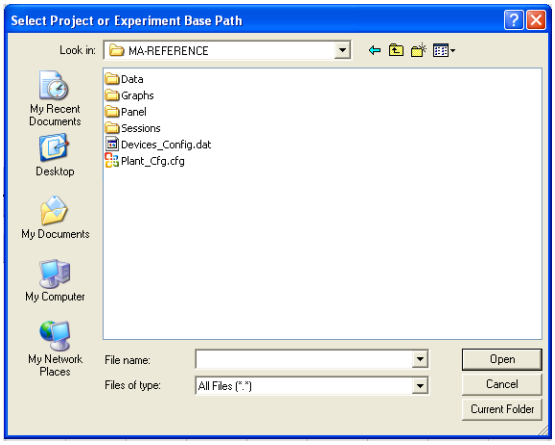

Figure 5- 44 The name of the project must appear on the upper cell

A new window showing all the experiments contained in the Data folder pops up. Select the one and accept.

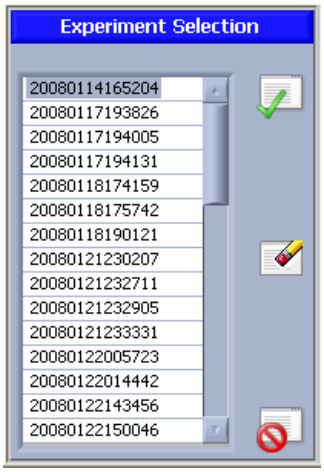

Figure 5- 45 Experiment selection

Click on the icon in order to delete the highlighted experiments.

The graphs of the selected experiment will appear automatically. Next to the graph, on the right side, a key with the variable's colors is displayed.

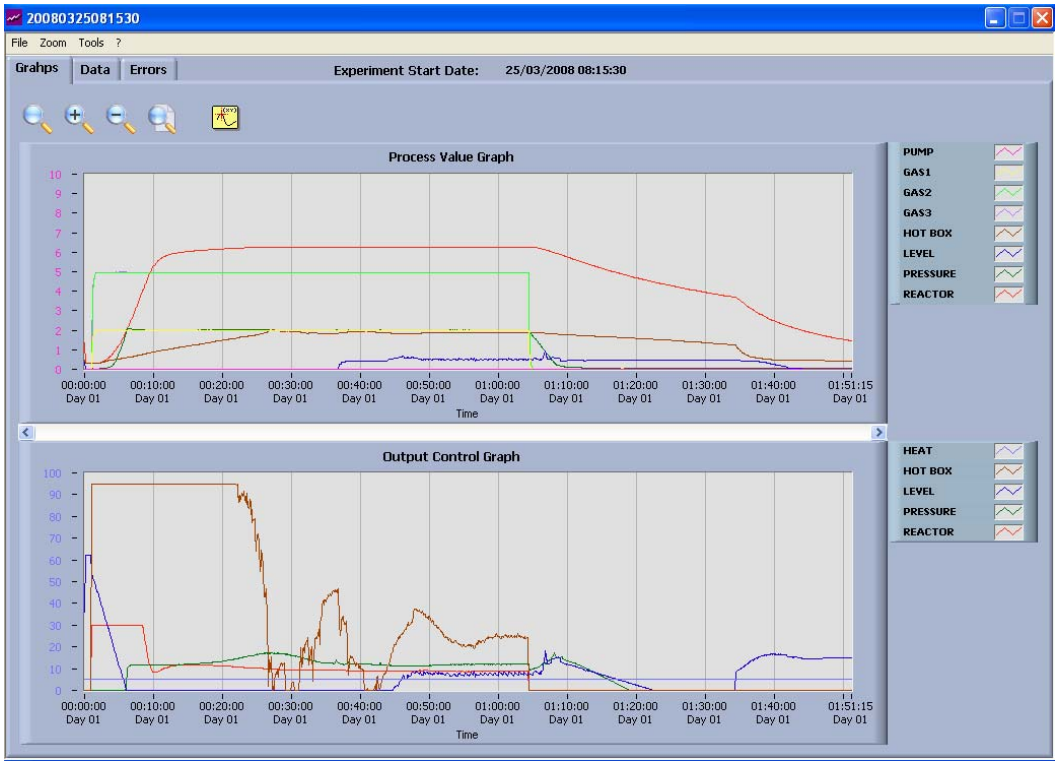

Figure 5- 46 Experiment's graph

The time scale shows the time of the experiment. It can be changed by right clicking on the background of the graphs or in the X axis.

5.5.2.How to rename an experiment

The option *Rename* Experiment, inside the File menu, allows giving different names to the experiment opened.

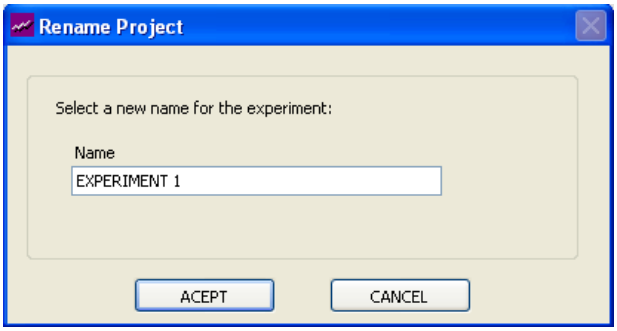

Figure 5- 47 Rename an experiment

5.5.3.How to resize a graph

The zoom bar allows modifying the appearance of the graphs and, also, knowing the exact value of a variable through to the tool CURSOR.

Figure 5- 48. Zoom bar

The different options are described bellow:

ACTIVE ZOOM

The first icon allows zooming between two time values. To do this, click on the icon and drag the cursor between them.

ZOOM IN

By clicking on ZOOM IN, the graphs will be enlarged by hiding the first and the last five minutes on the scale.

ZOOM OUT

This is used to increase the time seen on the X axis. The time scale will add 10 minutes every time this function is clicked.

ZOOM TO FIT

This function allows for returning to the graphs' initial configuration.

The time scale can also be modified by right clicking with the mouse on the graph background or on the X axis. It is possible to choose between hours and minutes.

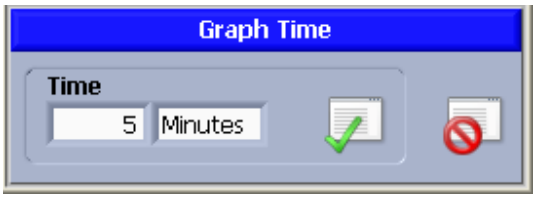

Figure 5- 49 Time scale setting

Besides, the scroll bar makes it possible to move forward or backwards on the graphs.

CURSOR

The cursor tool shows the exact value of a variable at a certain time. When clicking on the icon and moving the mouse over the graph, a cross-shaped cursor appears. This cursor will jump from one variable to another the mouse is moved. On the upper part, next to the icon, the name of the variable and its value at a time will be shown both for the process value graph and for the output graph.

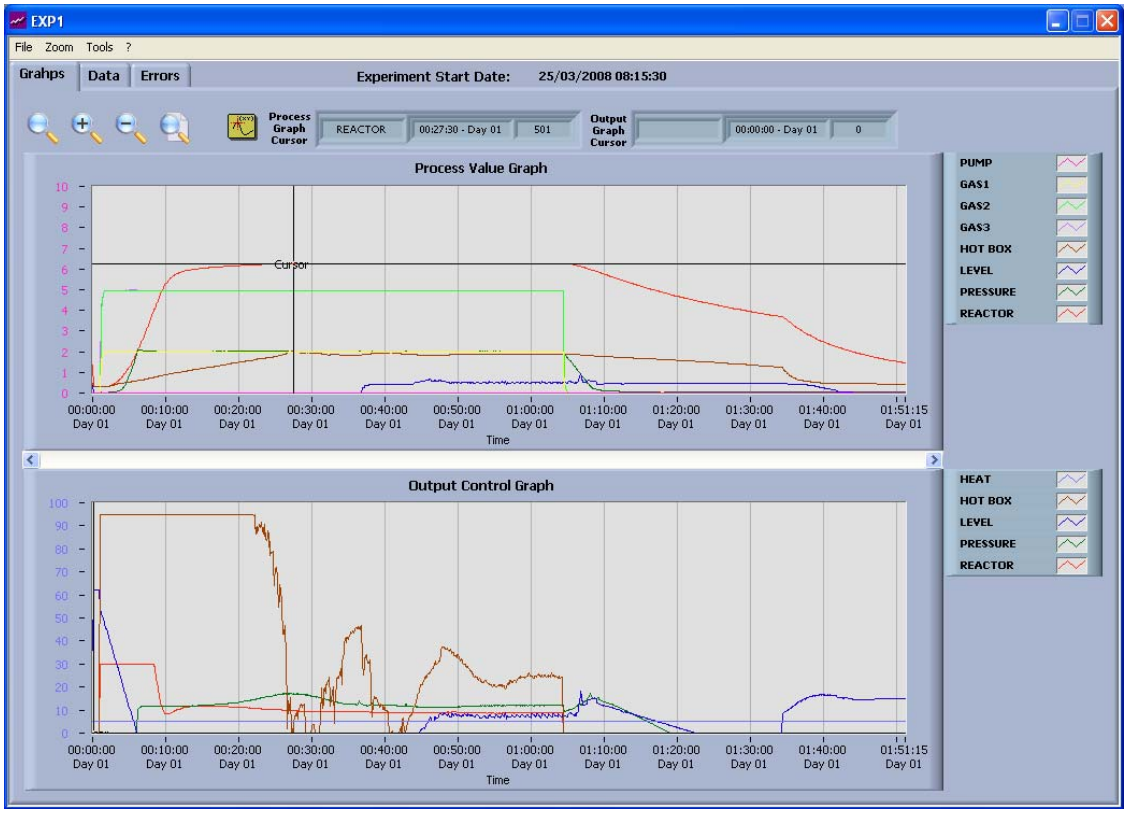

Figure 5- 50 Cursor function

To exit CURSOR, click again on the icon.

5.5.4.How to change the color and scale of the graphs

By double clicking on each line, a window named PLOT DATA, will appear on the right upper corner of the graphs.

In this window, Y-axis scale and the colour for each variable can be changed. Also, hide or show a variable.

Go from one variable to another clicking on the arrows situated below this window. The Y axis scale will be that of the one whose name appears on the cell NAME of this window.

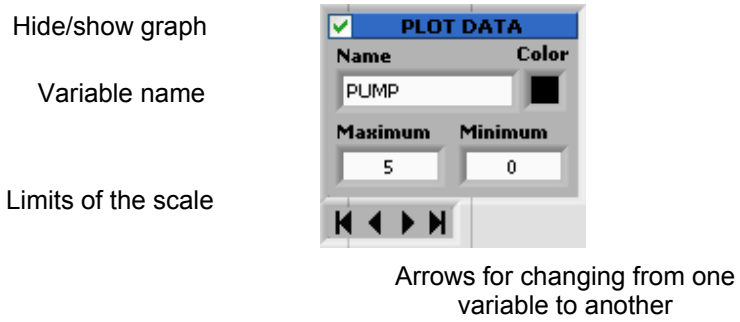

Figure 5- 51 Graph configuration window

To hide or show a graph, activate the tick situated on the cell situated on the right upper corner.

The colour of the graph can be changed clicking on the coloured square. This action will pop up a color palette.

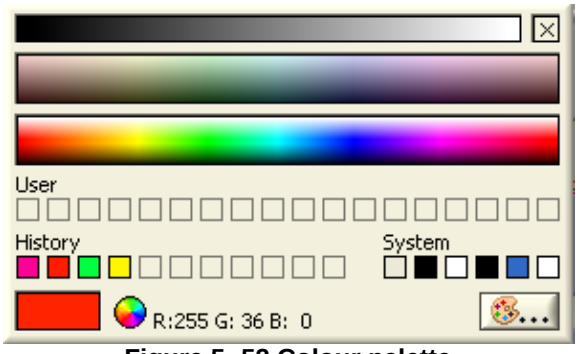

Figure 5- 52 Colour palette

5.5.5.How to filter the experiment data

When clicking on the window Data, a table with all the values acquired during the experiment is displayed.

VALUES DISPLAYED IN DATA TABLE		
MFC	MFn MVn	Set vale Process Value
Controller TOHO	PV1 SV1 MV1	Process Value Set Value Control output
On-Off devices (Door, Bypass, Peltier, S1, S2, S3)	-	Status (On-Off)
PUMP	F R	Flow Status (On-Off)
Chromatograph	XON XT0	Status (On-Off) Cycle time
Heat	M1C M1O	Control output Status (On-Off)

Table 5-7. Values of the parameters

All these values can be filtered by name and time, so that only a certain range of values is displayed in the table. To do so, select the desired parameters from the complete list shown in the right side window. If two or more devices are to be selected, click on them while pressing *Ctrl* on the keyboard and press *Filter*.

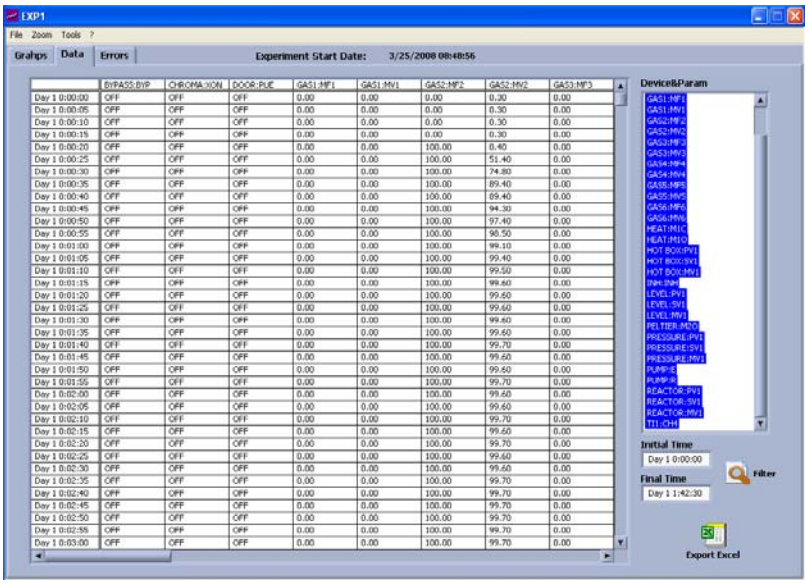

Figure 5- 532 Data table

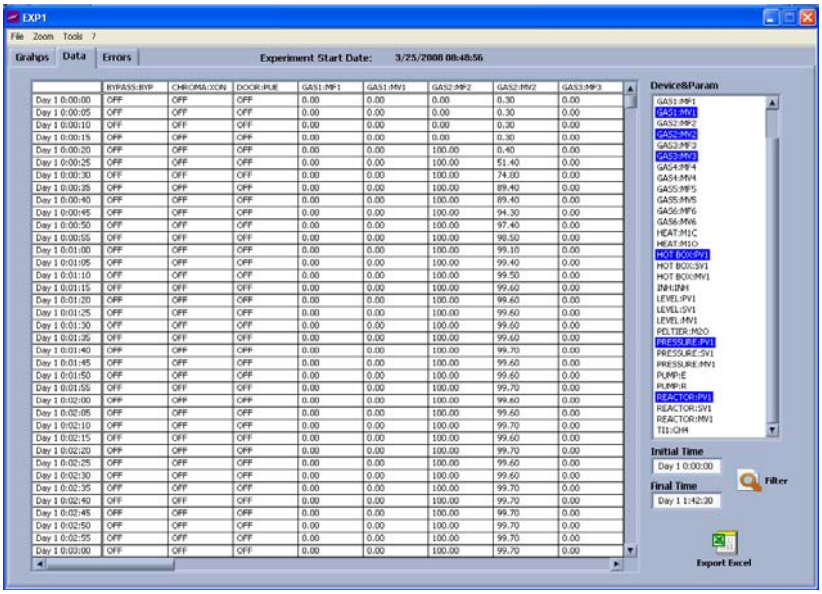

Figure 5- 53 Data filtering by parameter

The data can also be filtered by time. On the left side of the table, the time of the experiment is shown. In the example of figure 5-53, the data is acquired every five seconds although this time depends on the value introduced in the sample time window: *Acquisition* → *Sample time* of the main menu (see figure 5-15).

To select a certain period of time, click on the windows *Initial time* and *Final time.* A list showing the times when each data acquisition has been done, will dropdown. Choose a range of time and click on *Filter*.

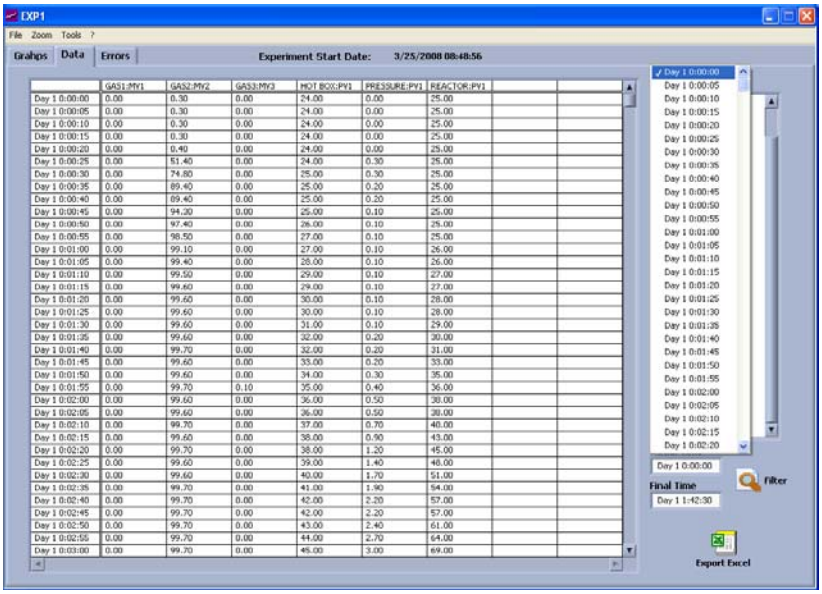

Figure 5- 54 Data filtering by time

5.5.6.Errors report

If an error has occurred during the experiment, it will be registered in the experiment file. The last window of the Experiment Viewer allows for viewing all the error messages, if any.

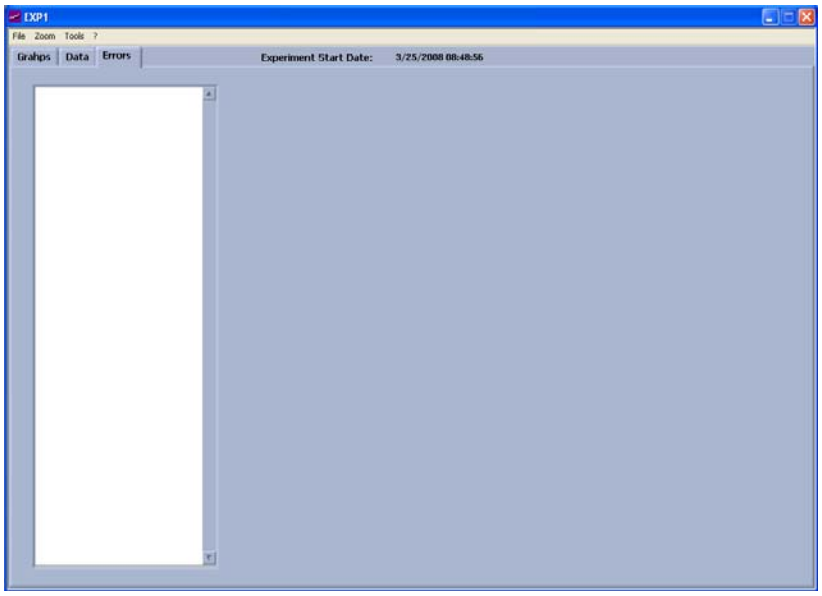

Figure 5- 54 Errors window

5.5.7.How to export the data to an *Excel* file

The icon Export Excel , allows saving the data table in Excel (*xls)* format. By clicking on the icon Export Excel, choosing the path for saving the file is allowed.

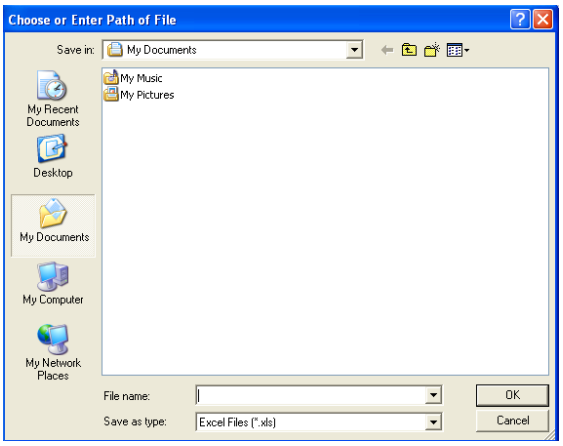

Figure 5- 56 Exit window

5.5.8.How to “capture” a graphs image

The last menu of the menu bar, TOOLS (*Get Snapshot* o Crtl+S), allows obtaining a snapshot of the graphs and saving them in an image format.

5.6 HOW TO EXIT PROCESS@

To exit Process@, click on the cross of the main menu:

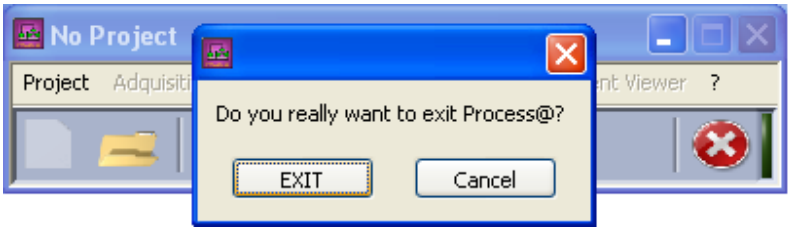

Figure 5- 57 Exit window

A message asking “*Do you really want to exit Process@?*” will appear.

This operation is not immediate. Process@ may need some time, especially if the experiment has taken a long time.

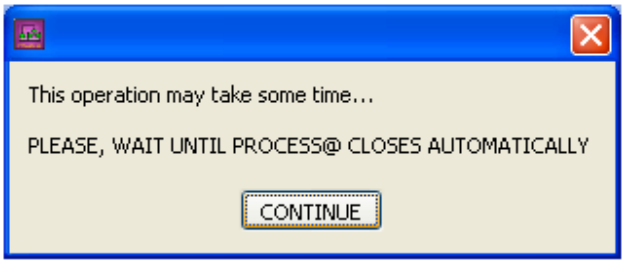

Figure 5- 58

5.7 CONNECTION TO A GAS CHROMATOGRAPH

The Microactivity Reference unit is prepared for connecting to a gas chromatograph, actuating the sampling injection valve to start the analysis.

Both devices (external alarm and chromatograph) will be connected to the Microactivity-Reference using the wire “External Control”, provided by PID Eng & Tech with the unit:

- Connector "EXTERNAL CONTROL": BINDER 680 female 6 pin
  - PIN 1 : Chromatograph contact: BROWN
  - PIN 2 : Chromatograph contact: WHITE
  - PIN 3 : Emergency contact: YELLOW
  - PIN 4 : Emergency contact: GREEN
  - PIN 5 : Without cable
  - PIN 6 : Without cable

5.7.1 CONNECTION TO AN EXTERNAL ALARM

The connection to an external alarm (gas detectors, etc.) has to be made with the yellow and green wires.

The contact is normally open: The two wires have to be connected to a relay that is normally open and closes when the alarm activates.

The actions that the unit makes when an external alarm appears are the following:

- Reactor Furnace: OFF
- Hot box Heaters: OFF
- Inhibition Session: ON
- Buzzer: ON

The actions of the external alarm on the MFC and the liquids pump are the same ones as configured by the user on the touch screen for the external alarm

When the external alarm disappears, the unit returns to the operation conditions.

5.7.2 CONNECTION TO A GAS CHROMATOGRAPH

The connection to the chromatograph is to be made with the brown and white cables.

The MA-Ref unit has to be connected to the “Remote Control” connector of the GC.

The contact is normally open, closing itself for 1 second when a pulse is sent to the chromatograph.

Operation: It is possible to activate a cycle to actuate upon a gas chromatograph in the Sessions Setting Panel of Process@ software. This cycle actuates the closing of the electrical circuit that connects with the GC for a duration of 1 second. The user can configure the cycle time (period between 2 closings) in the parameter “XT0” (Figure 5-28).

Visualization: In this process screen the device for checking the status of the chromatography cycle is configured (Figure 5-28).

6. PERFORMING CATALYTIC TESTS

6.1. LOADING A CATALYTIC BED IN THE REACTOR

Insert the catalytic bed inside the reactor by proceeding as follows:

1. Open the reactor hot box by pressing the "**Door**" key on the touch screen.
2. Disconnect the reactor's thermocouple (red pin). This will trigger the system's temperature alarm, which can be deactivated on the touch screen's alarm panel (see section 4.5.1 in this manual).
3. Using a spanner, loose the "A" connections (see Figure 6-1).
4. Hold the reactor with a clamp on the upper part "B" and loose that connection by exerting pressure on "C".
5. Place the reactor in a vertical position, unscrew "B" and remove the thermocouple from the reactor.
6. Empty the reactor and flush with compressed air through the lower end, in the opposite direction to the gas flow inlet.
7. Insert the catalyst through the upper end of the reactor, with a particle size greater than 10 μm (a small quantity of quartz wool may be inserted beforehand, to avoid access of fine particles through the porous plate) and, if considered necessary, pack the reactor with carborundum up to 2-3 cm below the upper end in order to avoid the dead volume.

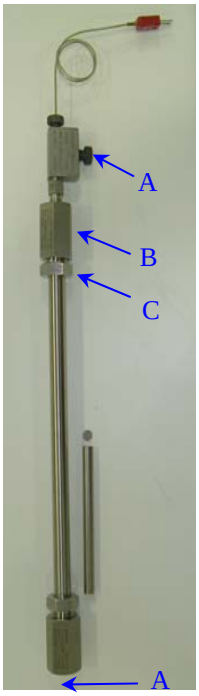

Figure 6-1

8. Clean threads "B" and "C", insert the thermocouple inside the bed, close the reactor and reconnect the gas inlet and outlet lines by means of connections "A".
9. To avoid a heating peak in the reactor oven, switch off the Microactivity-Reference before plugging the thermocouple into the hot box. Then switch the equipment on again.
10. Perform a *Leak test*: See section 7.1.1 of this manual.

6.2. PROGRAMMING A SEQUENCE OF EXPERIMENTS

For programming a sequence of experiments, proceed as outlined in section 5.4 of this manual: "How to carry out an experiment".

In general terms, the sessions that constitute the experiment should be configured as follows:

- An initial session corresponds to the secure shutdown of the system.
- The second session takes the system to the operating conditions under which the experiment is to be performed (e.g.: heat the reactor up to operating temperature). The duration of this session is to be sufficient to allow the system to attain stable operating conditions, which may be carried out by setting long session times or else by using the condition evaluation function.
- Subsequent sessions correspond to the operating conditions in which catalytic measurements are to be taken.
- The final two sessions correspond to sessions involving the secure shutdown of the system, with the last one being the same as the session programmed as no. 1

7. MAINTENANCE OF THE EQUIPMENT

7.1. WEEKLY MAINTENANCE

7.1.1 LEAK DETECTION

It is necessary to perform a leak test when:

- The user opens the reactor for replacing the catalyst bed
- The user detects a problem in pressure control

To check the unit for leak, proceed as follows:

- Put the pressure controller in manual mode, totally opened (100%).
- Put the level controller in manual mode, totally closed (0%). Once the system is at working pressure, it would be necessary to check if this valve is totally closed or if it is necessary to recalibrate the zero point.
- Put a tap in the gas outlet on the hot box and introduce an inert gas flow in the system (He, N_2, etc.). Put the unit at habitual working pressure.
- Close the gas inlet, as well as the system on/off stopcock for gas and verify that the pressure in the system remains constant over a period of time. If this is not the case, use a soapy solution to locate possible leaks (subsequently dry the entire system).
- When the leaks has been detected and eliminated, clean the equipment, removing the soapy solution.

7.1.2 CLEANING THE UNIT

For clearing the external of the unit, use a wet-cloth with water for preventing dust accumulation.

For internal cleaning, it can be used water or any solvent (alcohol, acetone, etc.) for eliminate soapy solution rest.

In case of cleaning with any solvent, the user has to manage properly the generated residues, attending to its nature.

7.2. MONTHLY – QUARTERLY MAINTENANCE

Depending on the use of the reactor and the reaction products the user should make a monthly or quarterly maintenance, consisting on:

7.2.1 REPLACING THE FILTERS

The reactor is provided with two 15 microns filters that could get blocked as a consequence of the continuous use. If that occurs, replace the filter by another one (Ref: Swagelok SG_SS-2F-15)

The replaced porous plate could be contaminated with hydrocarbons or other kind of residues. The user of the unit must manage these residues, asking to an authorized manager and attending to the environmental policy of the laboratory where it is being used.

7.3. ANNUAL OR LATER MAINTENANCE

7.3.1 REPLACING THE FUSE

The Microactivity-Reference has incorporated a 3 A fuse at the rear of the reactor for protecting the power sockets. For replace it (Figure 7-1), turn the equipment off (put the circuit breaker in the "OFF" position) and replace it by another one with the same characteristics: 3 A – 250 V.

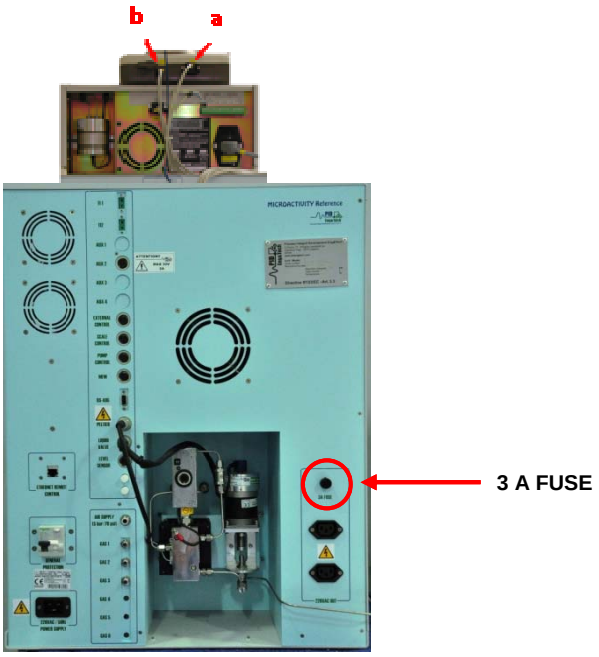

Figure 7-1

7.3.2 REPLACING THE KALRETZ SEALS IN THE GAS MIXER

If the unit woks with high-corrosive gases, it should be convenient to replace annually or later the kalretz seals of the check valves, before the gas mixer: Open the valves body and replace the elastomeric seal by another one (same model and material): contact with Process Integral Development Eng & Tech Technical Service.

The replaced o-ring could be contaminated by any corrosive gas. The user of the unit must manage these residues, asking to an authorized manager and attending to the environmental policy of the laboratory where it is being used.

7.3.3 REPLACING THE REACTOR POROUS PLATE

Due to a continued use of the unit with high viscosity liquids or substances that generate solid deposits, the porous plate of the reactor could get blocked, identifying this fact by an increase of the pressure of the system. In this case, the user must contact with the Process Integral

Development Eng & Tech Technical Service to substitute it by another plate of the same characteristics, or of higher porosity.

The replaced porous plate could be contaminated with hydrocarbons. The user of the unit must manage these residues, asking to an authorized manager and attending to the environmental policy of the laboratory where it is being used.

7.3.4 REPLACING A MASS FLOW CONTROLLER

The replacement of one or more MFC may be caused by:

- Their faulty operation: in this case, the user is to verify that this performance is not due to an unsuitable gas inlet pressure (consult the specifications of the MFC that are included in the equipment's documentation) or to an incorrect configuration of the MFC on the touch screen (see section 4.5.2 in this manual).
- Changes in the user's requirements, insofar as the type of inlet gas or the flow supplied is concerned.

The steps to be followed for replacing a MFC are as follows:

1. Switch off the Microactivity-Reference unit and switch the main circuit breaker to OFF.
2. Unscrew and remove the right-hand side panel on the Microactivity-Reference
3. Locate the MFC that is to be replaced (see Figure 7-2), disconnect the control cable, unscrewing the unit's lower panel and releasing the end connections.

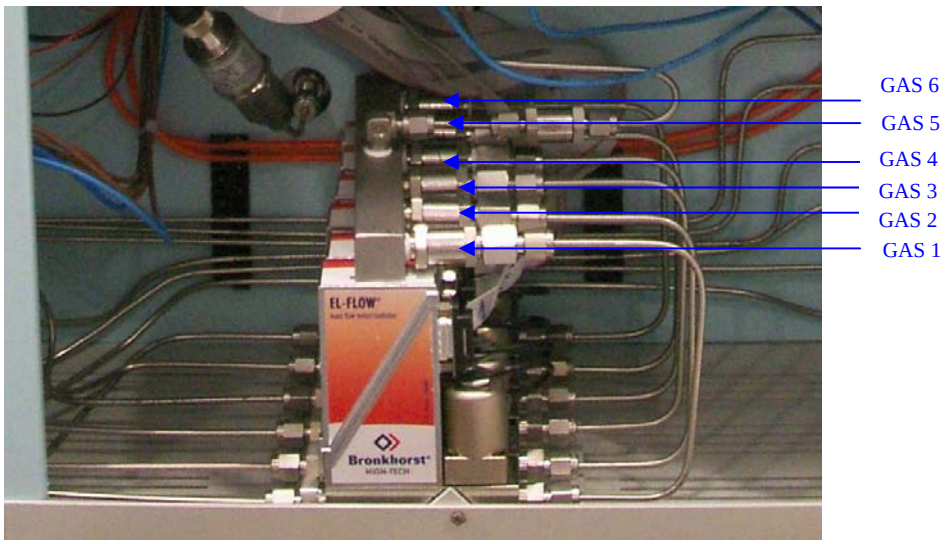

Figure 7-2

4. The MFC installed in the equipment has to have the same characteristics as the one being replaced (check enclosed MFC specifications):

   - Mass Flow Controllers, HI-TEC by BRONKHORST, model EL-FLOW.

   - IDENTIFICATION No.**: F_211C_FAC_11V** (Figure 7-3):

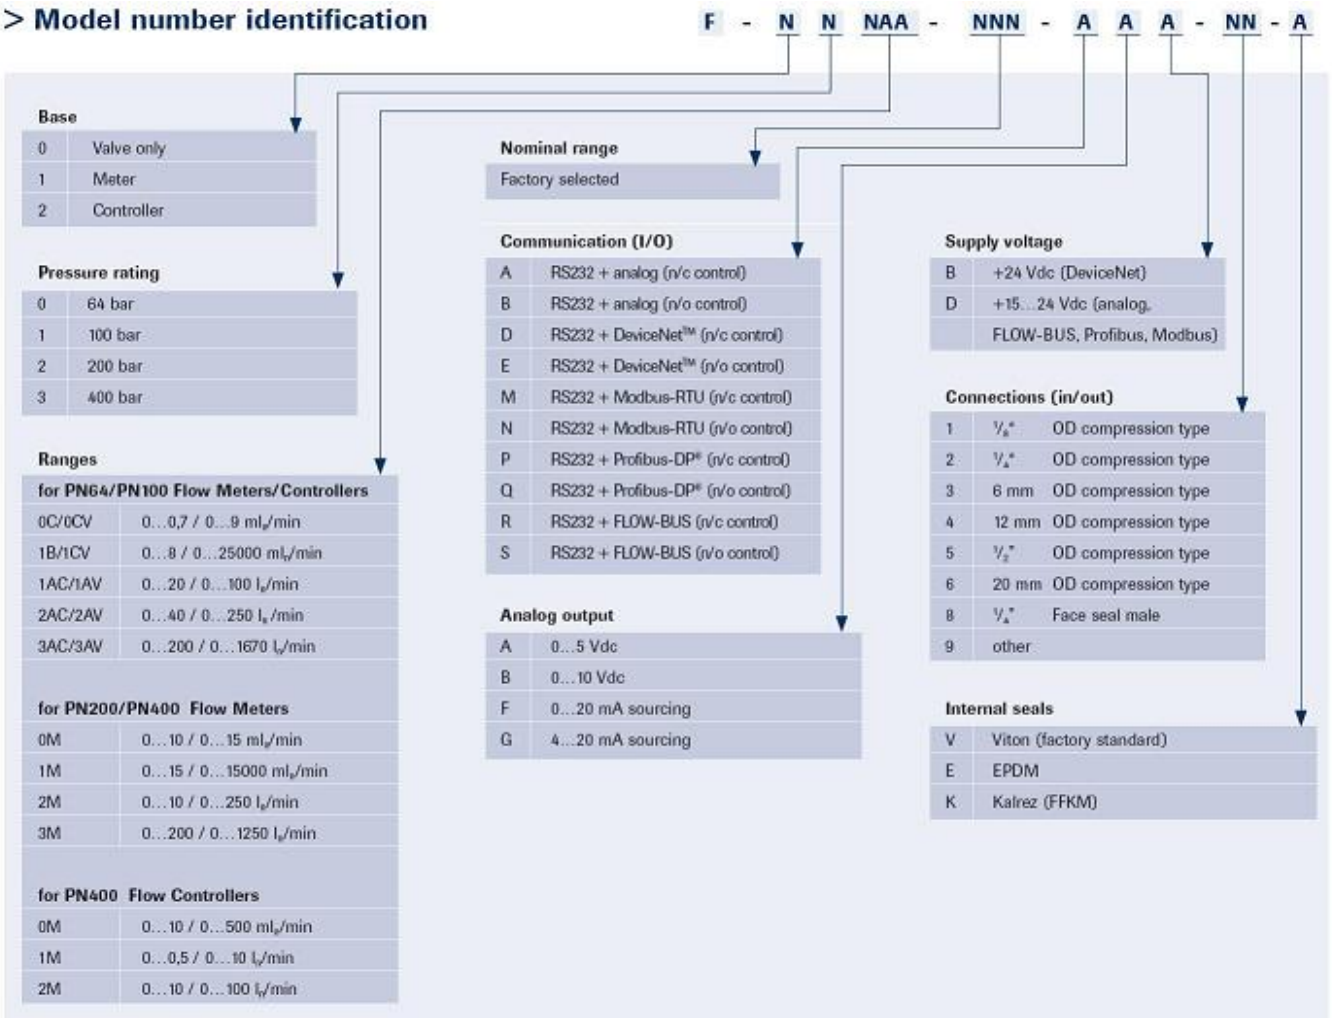
> Model number identification
F - N N NAA - NNN - A A A - NN - A
Base
0 Valve only
1 Meter
2 Controller
Pressure rating
0 64 bar
1 100 bar
2 200 bar
3 400 bar
Ranges
for PN64/PN100 Flow Meters/Controllers
0C/0CV 0...0,7 / 0...9 ml/min
1B/1CV 0...8 / 0...25000 ml/min
1AC/1AV 0...20 / 0...100 l/min
2AC/2AV 0...40 / 0...250 l/min
3AC/3AV 0...200 / 0...1670 l/min
for PN200/PN400 Flow Meters
0M 0...10 / 0...15 ml/min
1M 0...15 / 0...15000 ml/min
2M 0...10 / 0...250 l/min
3M 0...200 / 0...1250 l/min
for PN400 Flow Controllers
0M 0...10 / 0...500 ml/min
1M 0...0,5 / 0...10 l/min
2M 0...10 / 0...100 l/min
Nominal range
Factory selected
Communication (I/O)
A RS232 + analog (n/c control)
B RS232 + analog (n/o control)
D RS232 + DeviceNet™ (n/c control)
E RS232 + DeviceNet™ (n/o control)
M RS232 + Modbus-RTU (n/c control)
N RS232 + Modbus-RTU (n/o control)
P RS232 + Profibus-DP® (n/c control)
Q RS232 + Profibus-DP® (n/o control)
R RS232 + FLOW-BUS (n/c control)
S RS232 + FLOW-BUS (n/o control)
Analog output
A 0...5 Vdc
B 0...10 Vdc
F 0...20 mA sourcing
G 4...20 mA sourcing
Supply voltage
B +24 Vdc (DeviceNet)
D +15...24 Vdc (analog, FLOW-BUS, Profibus, Modbus)
Connections (in/out)
1 1/8" OD compression type
2 1/4" OD compression type
3 6 mm OD compression type
4 12 mm OD compression type
5 1/2" OD compression type
6 20 mm OD compression type
8 1/4" Face seal male
9 other
Internal seals
V Viton (factory standard)
E EPDM
K Kalrez (FFKM)

Figure 7-3

- Gas: Determined by the user
- Maximum flow: Determined by the user
- Inlet pressure: Determined by the user

5. Place the new MFC in the distributor, screwing it in from the lower panel and attaching the end connectors (it is advisable to attach a label indicating the gas it contains and its operating flow). Place it in such a way that the arrow is pointing to the right (indicating the direction of gas flow).
6. Connect the control cable to the MFC.
7. Screw the right-hand side panel back onto the Microactivity-Reference unit.
8. Switch on the unit.
9. Configure the MFC installed on the touch screen of the Microactivity-Reference unit:
   - Pressing "**F1**" on the touch screen grants access to the main menu (CONFIG SETUP).

Figure 7-4

- Press on the field "*MASS FLOW SETUP*": The configuration menu for the mass flow controllers will be displayed:

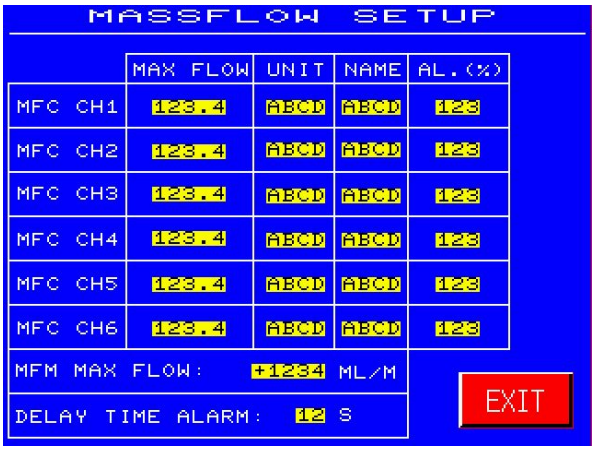

Figure 7-5

- Configure the fields of the new MFC:

  - Maximum flow.
  - Units in which the gas flow is expressed.
  - Name of the gas.
  - % of alarm: Deviation alarm. This alarm is inhibited during the time specified in the *Delay Time Alarm* (in sec.), operating if during this time the specified deviation is maintained with respect to the set value.

These parameters are modified by pressing on their corresponding yellow boxes and entering the new values by means of the keys that are displayed on screen. Before beginning to work with the equipment, it is important to ensure that each reactant gas MFC installed has been properly set up, and that all the other MFC's not installed have their fields set to zero.

Press the "**Exit"** key to return to the main menu.

8. EUROPEAN DIRECTIVES

1. Directive 97/23/EC: *Pressure Equipment*

The plant complies with European Directive 97/23/EC and Spain's Royal Decree 769/1999 that lays down the provisions for the application, in Spain, of said directive, regarding the design, manufacture and evaluation of compliance of pressure equipment and equipment subject to a maximum allowable pressure PS exceeding 0.5 bar.

The plant is supplied with Markings and Statement of Compliance as per article 3, section 3 of European Directive 97/23/EC and Spain's RD 769/1999.

2. Directive 94/9/EC: *Equipment and protective systems intended for use in potentially explosive atmospheres*

The plant is not to be used in potentially explosive atmospheres.

Directive 94/9/EC (on the approximation of the laws of the member states concerning equipment and protective systems intended for use in potentially explosive atmospheres) in its chapter I, Article 1, section 4, lays down that:

"The following are excluded from the scope of this Directive: (…) Equipment intended for use in domestic and non-commercial environments where potentially explosive atmospheres may rarely be created, solely as a result of the accidental leakage of fuel gas…"

The guidelines on the application of Directive 94/9/EC, of May 2000, state in their section 4.1.2. a) that:

"Equipment is only considered to be within the scope of the directive if it is intended (either in whole or in part) to be used in a potentially explosive atmosphere; the fact that an intended potentially explosive atmosphere might be present inside the equipment is not relevant..."

Furthermore indicating:

"Products that are not designed for use under atmospheric conditions (1) do not fall within the sphere of application of Directive 94/9/EC, even when an explosive atmosphere may form under atmospheric conditions during start-up, disconnection or maintenance. This would form part of risk assessment on the part of the user and could lead to the specification of ATEX apparatuses for installation of a near-by container".

(1) Directive 94/9/EC does not define atmospheric conditions. The relevant standards indicate a temperature range of –20 °C to 60 °C and a range of pressure between 0.8 bar and 1.1 bar as a basis for design and intended use of products.

Consequently, the Microactivity-Reference unit is not designed for operating under potentially explosive atmospheres, but as a result of improper use of the unit or a lack of maintenance of the same, the unit could generate a potentially explosive atmosphere.

It is the responsibility of the end user to assess the risks, implement suitable safety and protective measures, as well as locate the equipment in special laboratories with inflammable gas

detectors in order to reduce to a minimum the risks stemming from operation of the equipment. The Microactivity-Reference unit caters for connection to an external alarm that would trigger the unit's secure shutdown.

3. Directive 2004/108/EC Electromagnetic Compatibility Directive (EMC

The Microactivity-Reference unit, as per Directive **98/336/EEC** of 3 May 1989, is considered to be equipment that may cause electromagnetic disturbances or whose operation may be affected by said disturbances, given that it is a piece of equipment or installation that contains electrical and/or electronic components. It is therefore to be constructed in such a manner that:

The electromagnetic disturbances generated are limited to a level that enables the apparatus to operate in accordance with the purpose for which it was designed.

The apparatus has a suitable level of intrinsic immunity (ability to operate without detriment to quality in the presence of a magnetic disturbance) that enables it to operate in accordance with the purpose for which it was designed.

Figure 8-1

The Microactivity-Reference unit complies with Directive 98/336/EEC, having passed all electromagnetic compatibility tests required by the same (Figure 8-1 shows pictures of the Microactivity-Reference unit in the anechoic chamber, where part of said tests were carried out).

4.Directive 2006/95/EC: Low Voltage (LVD) - Electrical Safety (former 73/23/EEC)

This declaration is based on the full compliance of the equipment with the Harmonized Standard EN 61010-1:2001 for "Safety requeriments for electrical equipment for measurement, control, and laboratory use - Part 1: General requeriments", approved by the approved by the European Committee for Electrotechnical Standardization (CENELEC).

9. ENVIRONMENTAL POLICY

Process Integral Development Eng & tech bakcs the environment, focusing its activities towards the minimization of the impacts to surroundings, with the commitment from management to follow the principles included inside the policy.

The different devices and operations with relevant environmental injuries have been described in this manual (porous plates, filters, o-rings, solvents and main board battery). PID Eng & tech ask the final user to be responsible with the environment, following the actions specified in the chapter 8 “Maintenance of the equipment” for the disposal of toxic or dangerous wastes, and attending to the environmental policy in force in the laboratory or company where the equipment is working.

If the user wishes to get rid off of the unit, he must hand it in to an authorized manager or ship it to Process Integral Development Eng & tech, where it will receive the proper treatment.

10. REACTOR TROUBLESHOOTING

SYMPTOM	POSSIBLE CAUSES	SOLUTION
The equipment does not switch on	The switch on the front is in the off position.	Press the switch on the front.
	The main circuit breaker on the rear is off.	Switch the main circuit breaker to "ON".
	The power supply to the equipment has not been properly connected.	Verify the correct connection of the power supply that is on the rear of the equipment.
	The system's fuse has blown.	Open the right-hand side of the equipment and replace the fuse on the board (contact the distributor).
No communication is established between the reactor and the control PC	The Ethernet connection has not been properly installed (wrong network cable, incorrect operation of the switch, wrong IP address).	Check that the Ethernet connection is working properly and verify the system's IP address ("MISC" Menu on the touch screen). Verify the configuration of the PC's local area network. Reboot both systems.
There is no communication between the reactor and the touch screen	Blocking of the microprocessor.	Reboot the equipment. If the problem persists, please contact the distributor.
The door on the reactor does not open and/on the by-pass valve does not operate	There is no air pressure in the system.	Check the gas installation and make sure the system's air inlet pressure is 5 bar.
	Leaks in the compressed air lines or poor coupling of the pneumatic connections.	Disconnect the equipment (switch the circuit breaker to OFF), unscrew the right and left-hand side panels on the equipment and check the orange polyurethane pipes.
No gases are entering the equipment	No gas pressure reaches the equipment.	Check the gas installation and make sure the gas cylinders are open.
	The on/off stopcocks on the front panel are off.	Open the on/off stopcocks.
	A system alarm has been triggered that has shutdown the gas inlet.	Check the alarm and reset it (providing the situation that triggered it has been resolved).
	The pressure in the system is close to the pressure in the gas cylinders.	Increase the pressure on the gas inlet (see the specifications of the MFC) or lower the operating pressure.
The flow of one of the gases varies without keeping to the set-point.	The cable that connects the MFC to the board has been badly connected (loose).	Disconnect the equipment (switch the circuit breaker to OFF), unscrew the right-hand side panel on the equipment and check the connection of the MFC cables.
A reading is recorded on one of the MFC that has not been installed (noise).	A maximum flow has been set on the MFC configuration panel on the touch screen for one of the gases that has not been installed.	Zero set all the fields for those MFC that have not been installed on the equipment.
The gas flow does not reach the set–point established, remaining stable at a lower value.	There is no communication between the touch screen, the control PC and the equipment hardware.	Reboot the equipment.
	Insufficient gas pressure is reaching the equipment.	Verify that the gas inlet pressure on the equipment exceeds the operating pressure
	The set-point established is below 10% of the maximum flow of the mass flow controller.	It is not advisable to operate below 10% of the maximum flow of the MFC: Replace the controller with another that is suited to the process requirements.
	Modification has been made of the maximum gas flow established on the touch screen for the configuration of the mass flow controllers.	Reset the maximum flow value for each one of the controllers (see the specific documentation for each MFC).

The Gilson liquid pump does not switch on, with the Microactivity switched off.	The pump is connected to the 220V sockets on the rear of the equipment.	These sockets are not energised when the equipment is switched off: plug the pump into another socket (separate from the unit) or switch on the equipment.
The Gilson liquid pump does not switch on, with the Microactivity switched on.	The 3A-250V fuse in the fuse-box on the rear panel has blown (or is missing).	Change the fuse.
	The pump's electrical installation has not been performed correctly.	See the section "Electrical installation" in this manual.
	The on/off switch is in the (0) position.	Turn the switch on the rear of the pump to the (I) position.
The Gilson pump does not register the information or the set-points relayed to it from the Process@ software.	If a prior manual control has been made on the pump's display, it is not possible to establish digital communication with the PC, and vice-versa.	Reboot the pump. If this is not possible, control of the same is to be maintained in manual mode.
The Gilson pump does not respond to the parameters that are manually entered into the display.	If a prior digital communications control has been made between the PC and the equipment, it is not possible to perform manual control on the display, and vice-versa.	Reboot the pump. If this is not possible, control of the same is to be maintained by digital communications, through the Process@ software.
No liquid is entering the reactor or the flow is unstable (Pressure of the head below operating pressure)	No backpressure has been installed and operation is at atmospheric pressure.	Pressure must range 10-15 bar in the pump head: - Install a backpressure prior to the inlet on the liquid non-return valve. - Only feed liquids when the operating pressure is above 10-15 bar.
	The pump has not been properly vented.	Vent the pump, releasing the liquid inlet line on the reactor.
	There is a leak in the system's liquid inlet.	Verify all the liquid inlet lines on the system.
	An alarm has been triggered in the system that has shutdown the system's liquid inlet.	Check the alarm and reset it (providing the situation that triggered it has been resolved).
No liquid is entering the reactor (Pressure of the head close to operating pressure)	No backpressure has been installed and operation is at atmospheric pressure.	Pressure must range 10-15 bar in the pump head: - Install a backpressure prior to the inlet on the liquid non-return valve. - Only feed liquids when the operating pressure is above 10-15 bar.
	There is no liquid in the pump tank.	Fill the tank with the reactant liquid.
	The 3-port valve on the pump is not in the normal operating position (injection from the tank).	Set the valve to the suitable position (see the section "Venting the pump" in this manual or in the pump manual).
	An alarm has been triggered in the system that has shutdown the system's liquid inlet.	Check the alarm and reset it (providing the situation that triggered it has been resolved).
No liquid is entering the reactor (Pressure of the head significantly above operating pressure)	A blockage of solid deposits has formed in the evaporator.	Replace the evaporator.
	Faulty operation of the liquid non-return valve.	Verify the status of the non-return valves and, if necessary, replace.
	An alarm has been triggered in the system that has shutdown the system's liquid inlet.	Check the alarm and reset it (providing the situation that triggered it has been resolved).

There is no temperature reading in the reactor bed.	The reactor's thermocouple has not been connected properly.	Verify the thermocouple's connector inside the hot box.
	The reactor's thermocouple is not working properly.	Replace the reactors' thermocouple with another of identical characteristics.
	Poor connection of the thermocouple's damping cable on the 18-pole wire housing.	Disconnect the equipment (switch the circuit breaker to OFF), unscrew the left-hand side panel on the equipment and check the connections to the 18-pole wire housing.
The reactor's temperature reading is incorrect	The TOHO reaction temperature controller has been configured incorrectly.	Introduce the factory-set default parameters in the controller. If these are not known, please contact the distributor.
The reactor's temperature controller is not working properly.	The controller's PID parameters have been modified.	Restore the optimum control parameters (see the section "The controllers" in this manual).
	Control mode has been set to "manual" or "Rdy", instead of to "automatic".	Set to automatic (Run) in the controller's _nd parameter.
	An alarm has been triggered in the system that has shutdown the reactor oven (oven not fully closed, door open on hot box).	Check the alarm and reset it (providing the situation that triggered it has been resolved).
The electric heater on the hot box does not operate.	The parameter _EH1 on its controller has been modified. (Temperature above which it starts operating).	Re-set the value of parameter _EH1 to 40 ºC on the hot box's temperature controller (SET 2 menu on the controller).
	The hot box's temperature controller has been set to "manual", at 0%.	Set the control mode to automatic (Run) on the controller's _nd parameter.
	An alarm has been triggered in the system that has shutdown the heating on the hot box	Check the alarm and reset it (providing the situation that triggered it has been resolved).
	The heater is not working properly	Replace the heater (contact the supplier).
The turbine does not operate correctly (it does not turn properly or it makes an odd noise)	The forward blades on the turbine are rubbing against the ceramic cable housing or the heating cartridges.	With the equipment disconnected, remove the front cover on the turbine inside the hot box (it clips off) and remove the cabling.
	The rear blades on the turbine for cooling the motor are rubbing against the turbine mount.	Disconnect the equipment (switch the circuit breaker to OFF), unscrew the left-hand side panel (or the upper one, if necessary) and adjust the motor's cooling blades.
The hot box's temperature controller is not working properly.	The controller's PID parameters have been modified.	Restore the optimum control parameters for this controller (see the section "The controllers" in this manual).
	An alarm has been triggered in the system that has impeded the heating of the hot box (door open on the hot box)	Check the alarm and reset it (providing the situation that triggered it has been resolved).
	Control mode has been set to "manual" or "Rdy", instead of to "automatic".	Set the controller's _nd parameter to automatic (Run).
There is no reading of the system's pressure in the controller.	The pressure sensor is not connected to the board.	Disconnect the equipment (switch the circuit breaker to OFF), unscrew the right-hand side panel and verify the sensor's connection.
	The TOHO pressure controller is not connected to the board.	Disconnect the equipment (switch the circuit breaker to OFF), unscrew the right-hand side panel and verify the TOHO pressure connection.
	The power source +15/-15/+5 is short-circuiting (power LED blinking) or is faulted (LED off). If this occurs, there will be no level reading, if the equipment is fitted with this option.	Verify the status of the source by unscrewing the right-hand side (equipment disconnected and without power supply) and observe the LED. If it is blinking, disconnect the controllers on the rear panel one by one, until the one causing the short-circuit is located (the LED will stop blinking).
The pressure in the system rises uncontrollably without responding	The pressure controller is set to "manual", fully closed (0%).	Set to automatic (Run) in the controller's _nd parameter.

to the set-point, with the 3-port valve in the “by-pass” position.	A blockage has formed in the gas outlet line, outside the reactor box (on the way to the analysis system).	Release the joint between the system’s gas outlet line and the reactor box (external left-hand side of the reactor) and see whether the pressure decreases. If it does, clean or replace the blocked section. If it does not, continue by verifying the next cause.
	The needle on the micrometric pressure regulation valve has become stuck at zero.	Release the joint between the gas line and the regulating valve and see whether the pressure decreases. If it does, replace the regulating valve (notify the distributor).
	The valve’s zero-setting has been modified	Check and adjust the zero-setting on the pressure control valve (see the section “Configuration of the V4.0 Servo Digital Unit” in the manual).
	A blockage has formed on the liquid – gas separator inlet and/or outlet lines.	Release the inlet line to the separator and see whether the pressure decreases. Clean the inlet and outlet lines and the condenser tank with ethanol + compressed air. Otherwise, continue by assessing the next possible cause.
	Blockage in the by-pass valve or in the gas preheating and/or mixer lines	Release each one of the sections of pipe and see whether the pressure falls. Clean and/or replace the blocked section.
No rise in pressure in the system	No gases are entering the system	Check the symptom “No gases are entering the equipment”.
	Leak in the reaction system	Perform a leak test on the equipment (See the section “Performing catalytic tests” in this manual).
The pressure in the system rises uncontrollably without responding to the set-point, with the 3-port valve in the reaction position.	Set the 3-port valve to the by-pass position. If the system pressure does not decrease, check all possible causes of the prior symptom: “The pressure in the system rises uncontrollably without responding to the set-point, with the 3-port valve in the “by-pass” position.”	
	The filter on the reactor outlet is blocked.	Release the gas outlet line where it joins the filter and see whether the pressure decreases. If it does, replace the filter. If it does not, continue by verifying the next cause.
	The reactor’s porous plate is blocked.	Release the connecting joint between the gas inlet line and the reactor and see whether the pressure decreases. If it does, empty the reactor and clean the plate by flushing it with compressed air counter-current to the gas flow. If this is not the solution, replace the porous plate (inform the distributor).
	The filter on the reactor gas inlet is blocked.	Release the gas outlet line before it passes through the filter and see whether the pressure decreases. If it does, replace the filter.
The pressure in the system varies, without stabilising at the set-point.	The controller’s PID parameters have been modified.	Restore the optimum control parameters for this controller (see the section “The controllers” in this manual).
	Incorrect operation of the level control system in the separator (if operating with this option).	Stop feeding liquids into the system and close the level control valve. See whether the pressure stabilises.
	Leak in the reaction system	Perform a leak test on the equipment (See the section “Performing catalytic tests” in this manual).
	The valve’s zero-setting has been modified	Check and adjust the zero-setting on the pressure control valve (see the section “Configuration of the Servo Digital V4.0 unit” in the manual).
The pressure in the system does not reach the set-point, stabilising at a lower value.	Insufficient gas pressure is reaching the equipment.	Make sure the gas inlet pressure on the equipment exceeds the operating pressure.
	Leak in the reaction system	Perform a leak test on the equipment (See the section “Performing catalytic tests” in this manual).

The sensor's reading exceeds 2 ml or is above zero with the tank empty.	The maximum and minimum levels of oscillation set in the calibration of the sensor have been modified.	On the level sensor's touch screen, restore the values obtained in calibration. If these are not available, re-calibrate the sensor (see the section "Calibrating the level sensor" in this manual).
	The sensor is dirty.	Dismantle the condenser and the sensor and clean them with ethanol + compressed air.
There is no reading from the level sensor in the separator, with liquid in the condenser.	The sensor has not been properly connected.	Check and properly adjust the sensor connection on the rear of the equipment.
	Incorrect controller configuration	Restore the controller to its original parameters.
	The sensor is not working properly	Replace the level sensor (contact the distributor).
	The level sensor is not connected to the board.	Disconnect the equipment (switch the circuit breaker to OFF), unscrew the right-hand side panel and verify the sensor's connection.
	The TOHO level controller is not connected to the board.	Disconnect the equipment (switch the circuit breaker to OFF), unscrew the right-hand side panel and verify the TOHO level connection.
	The power source +15/-15/+5 is short-circuiting (power LED blinking) or is faulted (LED off). If this occurs, there will be no level reading, if the equipment is fitted with this option.	Verify the status of the source by unscrewing the right-hand side (equipment disconnected and without power supply) and observe the LED. If it is blinking, disconnect the controllers on the rear panel one by one, until the one causing the short-circuit is located (the LED will stop blinking).
The sensor's reading exceeds 2 ml or is above zero with the tank empty.	The maximum and minimum levels of oscillation set in the calibration of the sensor have been modified.	On the level sensor's touch screen, restore the values obtained in calibration. If these are not available, re-calibrate the sensor (see the section "Calibrating the level sensor" in this manual).
	The sensor is dirty.	Dismantle the condenser and the sensor and clean them with ethanol + compressed air.
The level reading in the sensor does not remain stable at the set-point.	The controller's PID parameters have been modified.	Restore the optimum control parameters for this controller (see the section "The controllers" in this manual).
	Control mode has been set to "manual" or "Rdy", instead of to "automatic".	Set the controller's _nd parameter to automatic (Run).
	The sensor is dirty.	Dismantle the condenser and the sensor and clean them with ethanol + compressed air.
	The valve's zero-setting has been modified	Check and adjust the zero-setting on the level control valve (see the section "Configuration of the Servo Digital V4.0 unit" in the manual).
	The liquids pump is not working properly.	Check that the pump is working properly, providing the system with a constant stream of liquid.
No liquids are evacuated from the system (pressurised system in which the liquid level rises continuously without responding to its set-point)	The level controller is set to "manual", fully closed (0%).	Set the controller's _nd parameter to automatic (Run).
	A blockage has formed in the liquid outlet line, prior to its collection in the balance.	Release the liquid outlet line just after it passes through the micrometric valve and see whether any liquid is coming out of the system. If it is, replace the liquid outlet line.
	The needle on the micrometric level regulation valve has become stuck at zero.	Release the liquid outlet line on the separator and see whether liquid is coming out of the tank. If it is, replace the regulating valve (inform the distributor).
	The valve's zero-setting has been modified	Check and adjust the zero-setting on the level control valve (see the section "Configuration of the Servo Digital V4.0 unit" in the manual).

The change in programmed session does not occur.	The inhibition function has been triggered, as a safety measure in response to a system alarm.	This function is automatically shutdown when the situation triggering the alarm has been resolved, except in the case of pressure alarms. In this case, check the alarm and reset it (if the situation that triggered it has been resolved).
PC and Microactivity are not communicating	The communication parameters are not correct.	Check the communication parameters in your PC (Network Connections) and in the Microactivity Reference. Check the IP address Process@ is reading in "*Project*" menu.
	The cable is not connected.	Check the cross cable is connected. If the unit and the PC are connected through a local network, the cable must be straight, not crossed.